

BELIFE ALD187R

BELIFE Replacement Remote Control for Grundig TV ALD187R Series

User Manual

INTRODUCTION

Thank you for choosing the BELIFE Replacement Remote Control for your Grundig TV. This remote is designed to provide seamless control over your television without the need for complex programming. This manual will guide you through the setup, operation, and maintenance of your new remote control.

PACKAGE CONTENTS

- BELIFE Replacement Remote Control (Model ALD187R)
- User Manual (this document)

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included).

1. Push and slide the battery cover down to open the battery compartment.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Replace the battery cover by sliding it back into position until it clicks securely.



Image: Steps for battery installation. The diagram illustrates pushing the cover, inserting batteries with correct polarity, and closing the cover.

2. Initial Pairing

This remote control is designed for immediate use with compatible Grundig TVs without complex programming. Simply insert the batteries, and it should function directly.

For models requiring pairing, especially for voice control functionality, follow these steps:

1. Ensure your TV is powered on.
2. Press and hold the **Home** button (labeled @ on the remote diagram) for approximately 30 seconds.
3. Release the button and wait for about 60 seconds. The TV should display a "remote connecting success" message, indicating successful pairing.

PAIRING REMOTE

Press the Home button (See left remote picture label ⑩) and Hold about 30 seconds, then release, waiting about 60 seconds (Entering Pairing mode), then the remote should automatically Pair with your TV. the TV will display remote connecting success. If not Pair success, Please **Firstly Remember**:

1. Unplug the power cord and then plug back the power cord of TV.
2. Remove the battery and insert back the battery of remote.
3. Then Repeat the above pairing step: Press the Home button and Hold about 30-50 seconds, then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.


If still not Pair success, please follow below Reset step:

Reset your Voice Remote if it doesn't connect to your TV device.
To reset your remote: Place your remote within 10 feet of your TV device.

1. Press and Hold the Left, Menu, and Back buttons (See left remote picture label ⑦ ⑪ ⑫) simultaneously about 10 seconds. then release.
2. Wait for 60 seconds.
3. Remove the battery and insert back the battery of remote.
4. Unplug the power cord and then plug back the power cord of TV.
5. Turn on your TV device, and wait for the Home Screen to display.
6. Press the Home button (See left remote picture label ⑩) and Hold about 30-50 seconds, then release, waiting about 60 seconds (Entering Pair mode, LED Flash), then the remote should automatically pair with your device.
7. IF still not Pair success, please repeat the above 1-6 step again.

Replace/Install new AAA Alkaline Battery

1. Push and slide the cover down. Then lift the cover to access battery.
2. Insert two batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.
3. Replace the new AAA Alkaline battery, cover and slide to close.

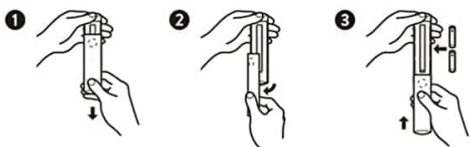

WARNING: Keep the remote control batteries away from children. It may cause choking and/or lead to a fire or chemical burn if mishandled. Do not dispose of batteries in fire. Replace only with batteries of the correct type. Risk of fire or explosion if the battery is replaced by an incorrect type.

- Pressing the **STANDBY, HOME, SELECT, ALEXA, PRIME VIDEO, NETFLIX, DISNEY+, LIVE, and APPS** buttons will turn the TV on from standby.
- Your remote control should automatically pair to your TV, but if it didn't, reset it by pressing and holding down **BACK, OPTION** and **▲** (press 3 buttons at the same time) for **10 seconds** and it will be reset.
- To pair your reset remote control go to: **SETTINGS - REMOTES & BLUETOOTH DEVICES - AMAZON FIRE TV REMOTES - ADD NEW REMOTE.**




Image: Front view of the remote control, highlighting the button layout.

If initial pairing is not successful, please try the following:

- Unplug the TV's power cord from the wall outlet, wait 30 seconds, then plug it back in.
- Remove the batteries from the remote control, wait a few seconds, and then reinsert them.
- Repeat the pairing step: Press and hold the **Home** button for 30-50 seconds, then release. Wait for approximately 60 seconds for the remote to enter pairing mode. The remote should automatically pair with your TV.

OPERATING INSTRUCTIONS

Once paired, your BELIFE remote control provides full functionality for your Grundig TV.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the TV's volume.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Pad (Up/Down/Left/Right/Select):** Used to navigate menus and select options on the TV screen.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's home screen or main menu.

Voice Control

This remote supports voice control. After successful pairing, press the dedicated voice control button (if present and labeled) and speak your commands clearly into the remote.

App Buttons

Dedicated buttons for popular streaming services (e.g., Prime Video, Netflix, Disney+, etc.) allow for quick access to these applications. Pressing these buttons will also turn on the TV from standby.

TROUBLESHOOTING

Remote Not Responding / Pairing Issues

If the remote control does not respond or voice control is not functioning after initial setup, perform a reset:

1. Ensure the remote is within 10 feet (approximately 3 meters) of your TV.
2. Simultaneously press and hold the **Left**, **Menu**, and **Back** buttons (labeled ⑦, ⑧, and ⑨ respectively on the remote diagram) for approximately 10 seconds. Then release all buttons.
3. Wait for 60 seconds.
4. Remove the batteries from the remote control, wait a few seconds, and then reinsert them.
5. Unplug the TV's power cord from the wall outlet, wait 30 seconds, then plug it back in.
6. Turn on your TV and wait for the Home Screen to display.
7. Press and hold the **Home** button (labeled ⑩) for 30-50 seconds. Release the button and wait for 60 seconds (the LED may flash, indicating pairing mode). The remote should automatically pair with your device.
8. If pairing is still unsuccessful, repeat steps 1-7.



Image: Remote control layout with button labels for pairing and reset.

Battery Issues

- If the remote's indicator light does not flash or the remote is unresponsive, replace the batteries with new AAA alkaline batteries.
- Ensure batteries are inserted with correct polarity (+/-).

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may

damage the remote's surface or internal components.

Battery Replacement

Refer to the "Battery Installation" section under Setup for instructions on replacing batteries.

SPECIFICATIONS

| | |
|--------------------------------|---|
| Brand | BELIFE |
| Model Number | ALD187R |
| Compatible Devices | Grundig TV |
| Connectivity Technology | Infrared |
| Controller Type | Voice Control |
| Number of Buttons | 25 |
| Maximum Range | 10 Meters |
| Batteries Required | 2 AAA (Alkaline recommended) |
| Special Feature | No programming required (for basic functions) |

SAFETY INFORMATION

WARNING:

- Keep remote control batteries away from children. They may cause choking and/or lead to a fire or chemical burn if mishandled.
- Do not dispose of batteries in fire.
- Replace only with batteries of the correct type (AAA alkaline).
- Risk of fire or explosion if the battery is replaced by an incorrect type.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your purchase receipt for proof of purchase.