

VORCOOL A18

VORCOOL Cordless Vacuum Cleaner A18 User Manual

Model: A18

1. INTRODUCTION

Thank you for choosing the VORCOOL Cordless Vacuum Cleaner A18. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before operation and retain them for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Store the appliance indoors.

3. PACKAGE CONTENTS

Carefully unpack your VORCOOL Cordless Vacuum Cleaner A18 and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.



Image: All components included with the VORCOOL A18 Cordless Vacuum Cleaner, including the main motor unit, extension tube, floor brush, electric mop head, crevice tool, dusting brush, wall mount, charger, and spare filters.

- Main Motor Unit (Handheld Vacuum)
- Extension Tube
- Motorized Floor Brush with LED Lights
- Electric Wet & Dry Mop Head
- Crevice Tool
- Dusting Brush
- Wall Mount Bracket
- Power Adapter/Charger
- HEPA Filter (Pre-installed + Spare)
- Cleaning Tool
- User Manual

4. PRODUCT OVERVIEW

The VORCOOL A18 is a versatile cordless vacuum cleaner designed for various cleaning tasks. It can be configured as a stick vacuum, handheld vacuum, or with an electric mop head.



Image: The VORCOOL A18 Cordless Vacuum Cleaner shown in its full stick vacuum configuration, handheld configuration, and with the electric mop head attached. Also visible are the main motor unit and spare filters.

4 IN 1 STICK VACUUM CLEANER

VORCOOL



Cordless Clean



50min Max Runtime



Large Capacity
Dust Cup



3 Modes



250W Brushless Motor



7-26Kpa



Image: An illustrative diagram highlighting the 4-in-1 functionality of the VORCOOL A18, including cordless cleaning, 50-minute max runtime, large capacity dust cup, 3 cleaning modes, 250W brushless motor, and 7-26Kpa suction.

5. ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Tube:** Insert the top end of the extension tube into the main motor unit until it clicks securely into place.
2. **Attach the Cleaning Head:** Choose your desired cleaning head (motorized floor brush or electric mop head) and insert it onto the bottom end of the extension tube until it clicks. For handheld use, attach accessories directly to the main motor unit.
3. **Install the Dust Cup:** Ensure the dust cup is securely attached to the main motor unit.

6. CHARGING THE BATTERY

The VORCOOL A18 is equipped with a 2200mA rechargeable battery. Before first use, fully charge the battery for optimal performance.



Image: A diagram illustrating the internal 2200mA battery pack of the VORCOOL A18 vacuum cleaner.

- Connect the power adapter to the charging port on the main motor unit.
- Plug the adapter into a wall outlet.
- The battery indicator lights on the display will show the charging status. A full charge is indicated when all lights are solid.
- Unplug the charger once charging is complete.

7. OPERATING INSTRUCTIONS

7.1 Power On/Off and Mode Selection

Press the power button to turn the vacuum on. Use the mode selection button to cycle through the three power modes: Min, Mid, and Max. The current mode and battery level will be displayed on the screen.



Image: A close-up of the vacuum's display screen, indicating battery level, power level (Blue for Low, Pink for Mid, Red for High), and warnings for dusty filter or blocked brush.

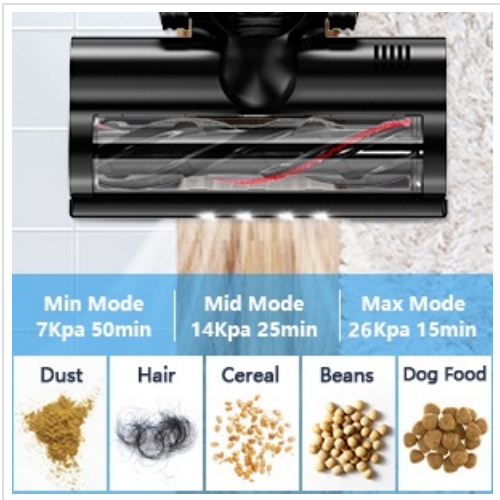


Image: A chart comparing the three vacuum modes: Min Mode (7Kpa, 50min runtime) for dust, Mid Mode (14Kpa, 25min runtime) for hair and cereal, and Max Mode (26Kpa, 15min runtime) for beans and dog food.

7.2 Vacuuming

The motorized floor brush is suitable for various floor types including hardwood, carpet, tiles, and marble. The integrated LED lights illuminate dust and debris in dark areas.



Image: The vacuum cleaner head positioned over various floor surfaces including tiles, wood floors, marble, and carpets, illustrating its wide application for different types of debris like dust, debris, and hair.

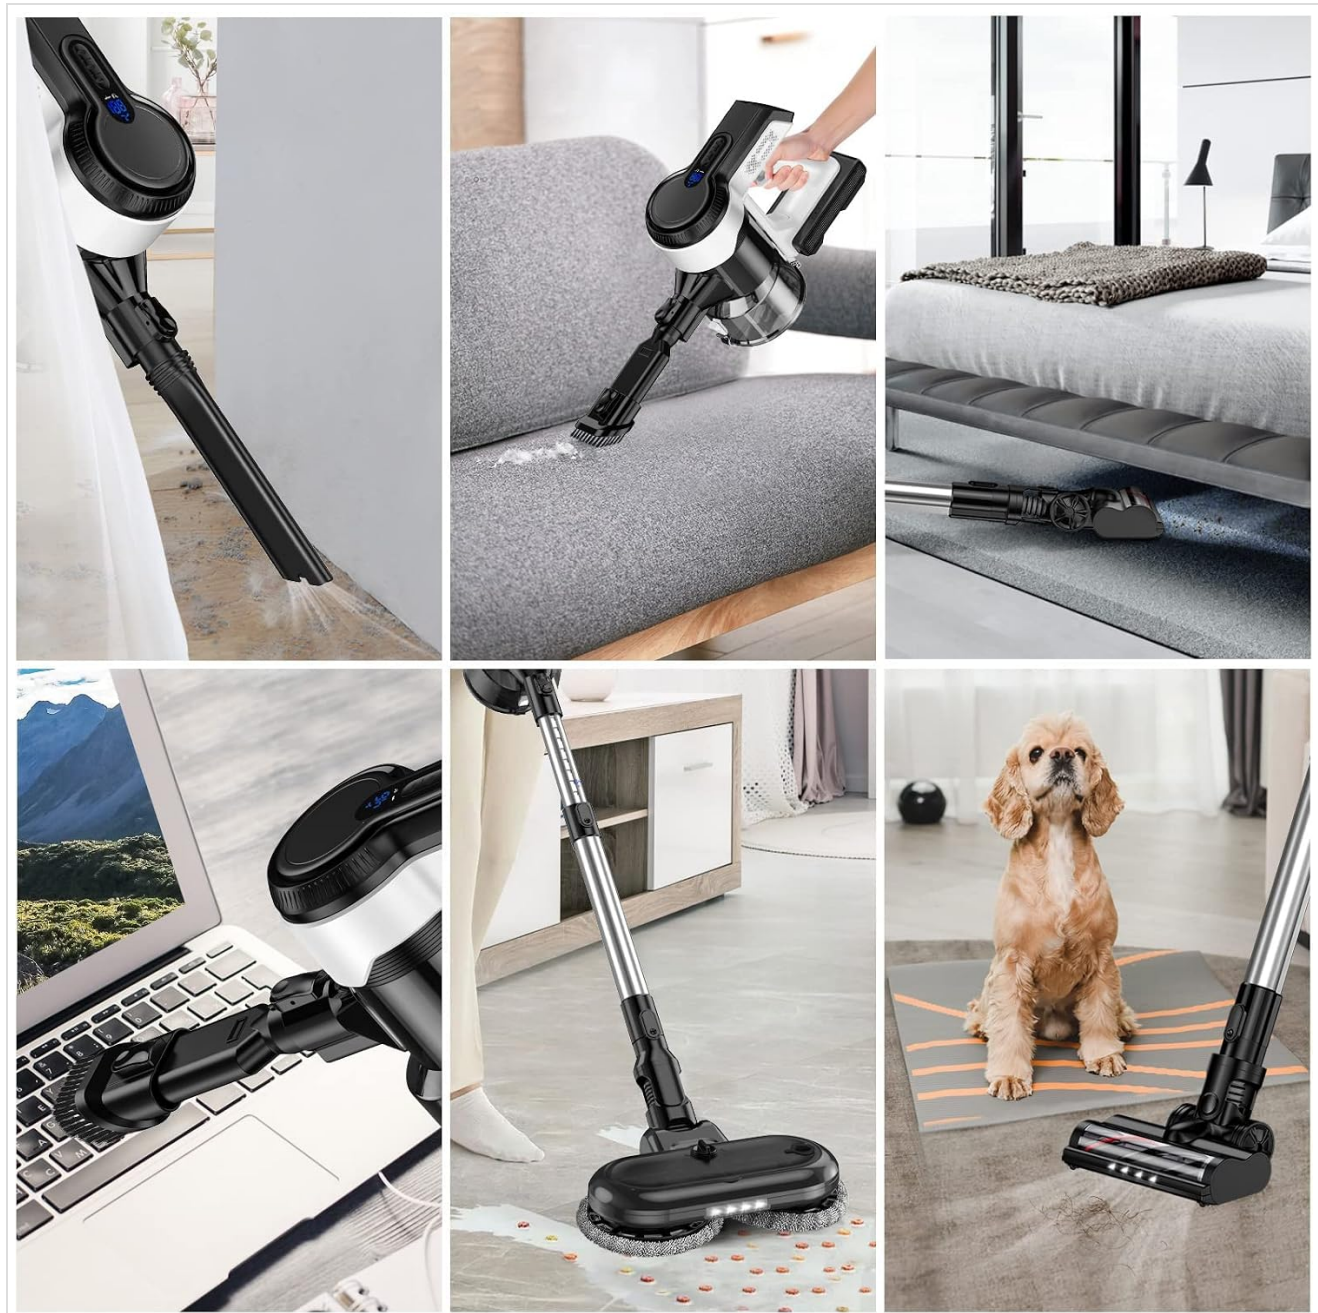


Image: A collage of six images demonstrating the vacuum cleaner's versatility, including cleaning corners, upholstery with the handheld unit, under furniture, keyboards, general floor cleaning with the mop head, and pet hair on a carpet.



Image: The motorized floor brush with its integrated LED lights illuminating the area under a piece of furniture, demonstrating its ability to clean in dimly lit spaces.

7.3 Mopping Function

Attach the electric wet and dry mop head for simultaneous vacuuming and mopping. Fill the water tank on the mop head with clean water before use.



Image: A three-step diagram showing how to prepare the wet and dry mop head: 1) Locate the water tank, 2) Open the water inlet and fill with water, 3) Close the water inlet and activate the switch.



Image: The electric mop head actively cleaning a liquid spill on a wooden floor, demonstrating its wet cleaning capability.

7.4 Retractable Extension Tube

The extension tube features a retractable design, allowing for easy adjustment of the vacuum's height for comfortable cleaning and reaching high or low areas.



Image: A woman demonstrating the retractable feature of the vacuum cleaner's extension tube, showing it can be adjusted up and down for easier use.

8. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your VORCOOL A18 vacuum cleaner.

8.1 Emptying the Dust Cup

The vacuum features a 1-liter large capacity dust cup. Empty the dust cup regularly to maintain suction power. Press the release button to detach the dust cup and empty its contents into a waste bin.



Image: A hand demonstrating how to empty the 1-liter capacity dust cup by pressing a button, allowing collected debris to fall into a trash can.

8.2 Cleaning Filters

The VORCOOL A18 utilizes a double filter element design, including a HEPA filter, to intercept 98.7% of dust. Clean the filters regularly to prevent clogging and maintain suction.



Image: A cutaway diagram illustrating the double filter element design, showing the HEPA filter, cyclone separation, and dust cup, highlighting the system's ability to intercept 98.7% of dust.



Image: A multi-panel image demonstrating the process of cleaning the reusable filter element under running water and using a cleaning tool to remove debris.



Image: A diagram illustrating the double HEPA air filtration system within the vacuum cleaner, showing the path of air and the placement of the filters.

- Twist and pull to remove the filter assembly from the dust cup.
- Separate the HEPA filter and the metal mesh filter.
- Tap off loose dirt. Rinse both filters under cold running water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or other heating methods.

8.3 Cleaning the Brush Roll

Periodically check the motorized floor brush for tangled hair or debris. Use scissors or the provided cleaning tool to cut and remove any obstructions from the brush roll.

8.4 Cleaning Mop Pads

Remove the mop pads from the electric mop head after each use. Wash them with water and mild detergent, then allow them to air dry completely before reattaching.

9. STORAGE

Store the vacuum cleaner in a cool, dry place. The included wall mount bracket provides a convenient storage

solution.



Image: The vacuum cleaner demonstrating its easy storage capabilities, showing two methods for wall mounting and its adjustable height (41 inches extended, 32 inches compact).



Image: A close-up of the wall mount bracket, designed to securely hold the vacuum cleaner for convenient storage.

- Ensure the vacuum is turned off and unplugged before storing.
- Empty the dust cup and clean filters as necessary.
- Mount the wall bracket in a suitable location and hang the vacuum cleaner.

10. TROUBLESHOOTING

If you encounter any issues with your VORCOOL A18, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dust cup is full Filters are clogged Hose or brush roll is blocked	Empty the dust cup Clean or replace filters Remove any blockages from the hose or brush roll
Brush roll not spinning	Hair or debris tangled in brush roll Brush roll motor malfunction	Clean the brush roll, removing any obstructions Contact customer support if the issue persists
Mop head not dispensing water	Water tank is empty Water inlet is blocked	Refill the water tank Check and clear any blockages in the water inlet
Short battery runtime	Battery not fully charged Using Max power mode continuously Battery degradation	Ensure battery is fully charged before use Use lower power modes for longer runtime Contact customer support for battery replacement options

11. SPECIFICATIONS

Feature	Specification
Brand	VORCOOL
Model Number	A18
Special Features	Compact, HEPA Filtration, Lightweight
Filter Type	Cartridge (HEPA)
Cordless	Yes
Dust Cup Capacity	1 Liters
Recommended Uses	Carpet, Hard Floor, Pet Hair
Color	Black
Noise Level	75 dB
Controller Type	Push Button
Control Method	Touch
Portable	Yes
Number of Power Levels	3

Feature	Specification
Indoor/Outdoor Usage	Indoor
Product Dimensions	37.8 x 15.8 x 19.7 inches

12. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact VORCOOL customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question