

[Manuals.plus](#) /

› [INFANS](#) /

› INFANS Baby High Chair Instruction Manual

INFANS B0BKZ86Z1V

INFANS Baby High Chair Instruction Manual

Model: B0BKZ86Z1V

Brand: INFANS

INTRODUCTION

The INFANS 3-in-1 Convertible Wooden High Chair is designed to adapt to your child's growth, serving as a high eating chair, a low small chair, and a small baby stool. Crafted with high-quality materials like ash wood and featuring a modern design, this high chair prioritizes both safety and convenience for families.

This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your INFANS Baby High Chair. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always ensure your child's safety by following these guidelines:

- Always use the 5-point safety harness to secure your child in the high chair.
- Never leave your child unattended in the high chair.
- Ensure all parts are correctly assembled and securely fastened before each use.
- Do not use the high chair if any parts are damaged or missing.
- Keep the high chair away from heat sources, open flames, and strong sunlight.
- The maximum recommended weight for the high chair is 33 lbs (15 kg). The maximum weight for the tray is 11 lbs (5 kg).
- This product is suitable for children aged 6-36 months.
- Periodically check all bolts and connections to ensure they remain tight.

This high chair has passed ASTM and CPSIA certifications, ensuring its safety standards.

SETUP AND ASSEMBLY

The INFANS high chair is designed for quick and tool-free installation. Follow these steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list (not provided in this manual, refer to product packaging for full list).
2. **Attach Legs:** Insert the wooden legs into the designated slots on the high chair base. Ensure they click securely into place. The design allows for simple installation by screwing the leg components together.
3. **Install Footrest:** Secure the footrest between the front legs. Ensure it is firmly attached.
4. **Attach Tray:** Slide the tray onto the front of the high chair until it locks into position. The tray has two adjustable modes for depth.
5. **Adjust Height (Optional):** The legs feature an additional 1.2-inch subtle adjustment mechanism for height customization. Use the provided non-slip pads for stability.



Figure 1: Simple Installation and Subtle Height Adjustment. This image illustrates how the high chair legs are easily assembled and how the height can be finely adjusted using the included non-slip pads.



Figure 2: Convertible High Chair Modes. This image displays the high chair's versatility, showcasing its transformation from a full-height feeding chair to a lower chair and a compact baby stool.

OPERATING INSTRUCTIONS

Using the 3-in-1 Convertible Modes:

- **High Chair Mode:** For feeding at standard table height. Ensure all legs are fully extended and locked.
- **Low Chair Mode:** To convert, detach the lower sections of the legs and reattach the non-slip feet. This mode is suitable for toddlers to sit at lower tables or for independent play.
- **Baby Stool Mode:** Further disassemble the chair to create a small, stable stool for your child.

Tray Adjustment and Removal:

The high chair features an adjustable and removable tray for ease of use and cleaning.

- **Adjusting the Tray:** The tray offers two adjustable positions to accommodate your child's size. Press the release buttons (if applicable, typically on the sides or underneath) and slide the tray forward or backward to the desired position.
- **Removing the Tray:** To remove the tray for cleaning or to allow your child to sit closer to a table, press the release buttons and pull the tray straight off.



Figure 3: Removable and Adjustable Tray. This image highlights the tray's two adjustable positions and its detachable design, making it easier for feeding and cleaning.

Using the 5-Point Safety Harness:

Always secure your child with the 5-point safety harness to prevent falls and ensure stability.

- Place your child in the seat.
- Bring the shoulder straps over your child's shoulders and the waist straps around their waist.

- Connect the shoulder and waist buckles to the central buckle.
- Adjust the straps to ensure a snug, secure fit without being too tight.

Figure 4: Key Safety and Comfort Features. This image illustrates important components such as the non-slip chair feet, washable fabric, the secure 5-point harness system, and the sturdy foot pedal.

Figure 5: High Chair in Use. This image shows the high chair being used by a baby, highlighting its practical application and how it fits into a modern home environment.

CARE AND MAINTENANCE

Proper care will extend the life of your INFANS high chair and ensure hygiene.

- **Cleaning the Tray:** The tray is made of easy-to-clean material and is dishwasher-friendly. For daily cleaning, wipe with a damp cloth and mild soap.
- **Cleaning the Seat Cushion:** The seat cushion features a waterproof and wipeable surface. Wipe spills and messes immediately with a damp cloth. For deeper cleaning, the cushion can be removed and wiped down.
- **Cleaning Wooden Parts:** Wipe wooden legs and footrest with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Harness Care:** The 5-point harness can be wiped clean with a damp cloth. Ensure it is completely dry before re-use.
- **Storage:** When not in use, store the high chair in a clean, dry place away from direct sunlight and extreme temperatures.

Figure 6: Easy-Clean Features. This image emphasizes the soft and comfortable seat cushion with its waterproof and wipeable surface, along with the dishwasher-friendly and removable tray, simplifying cleanup.

Figure 7: Premium Materials and Design. This image showcases the durable Ashtree footrest, the elegant high-quality brass accessories, and the comfortable, soft cushion that contribute to the high chair's premium feel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tray is difficult to remove or attach.	Misalignment or food debris in the tracks.	Ensure the tray is aligned correctly with the grooves. Clean any food particles from the tray and chair attachment points. Apply slight pressure evenly when attaching/detaching.

Problem	Possible Cause	Solution
High chair feels unstable or wobbly.	Legs not fully inserted or bolts are loose.	Check that all legs are securely clicked into place. Tighten any loose bolts or screws. Ensure the chair is on a flat, even surface.
Harness straps are too tight or too loose.	Incorrect adjustment.	Adjust the straps using the buckles to achieve a snug but comfortable fit for your child.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions (High Chair)	23"D x 21"W x 33"H (58.4cm D x 53.3cm W x 83.8cm H)
Product Dimensions (Low Chair)	17"D x 16"W x 23.5"H (43.2cm D x 40.6cm W x 59.7cm H)
Tray Dimension	16.5" x 9.8" (irregular)
Item Weight	10 Pounds (4.5 kg)
Highchair Load Weight Capacity	33 lbs (15 kg)
Tray Load Weight Capacity	11 lbs (5 kg)
Applicable Age	6-36 months
Material	Ashtree wood, Polypropylene (PP), Polyvinyl Chloride (PVC)
Color	Brown (with white seat and tray)
Certifications	ASTM, CPSIA

Figure 8: Product Dimensions and Capacities. This diagram provides precise measurements for both the high chair and low chair configurations, along with the maximum weight capacity for the tray.

WARRANTY AND SUPPORT

For any questions regarding your INFANS Baby High Chair, including warranty information or technical support, please contact INFANS customer service. You can find more information and contact details by visiting the official INFANS store on Amazon:

Visit INFANS Store

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKZ86Z1V>

More documents and user manuals: <https://manuals.plus/>