

PERFASCIN AKB75095376

PERFASCIN AKB75095376 Replacement Remote Control for LG Smart TV User Manual

INTRODUCTION

This manual provides instructions for the PERFASCIN AKB75095376 replacement remote control, designed for use with LG Smart TVs. This remote control offers a direct replacement solution without the need for complex programming, allowing for immediate use upon battery installation.

SETUP

Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Battery installation in the remote control. Ensure correct polarity when inserting AAA batteries.

OPERATING INSTRUCTIONS

This remote control is an infrared (IR) device and does not require any programming or pairing. Once batteries are

installed, it is ready for use with compatible LG Smart TVs.

Basic Functions

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (VOL +/-)**: Adjusts the audio volume.
- **Channel Up/Down (CH PAGE +/-)**: Changes TV channels.
- **Mute** (⏸): Mutes or unmutes the TV audio.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Navigate through menus and confirm selections.
- **Back**: Returns to the previous screen or menu.
- **Exit**: Exits the current menu or application.
- **Home Button** (△): Accesses the TV's home screen or smart features.
- **Q.MENU / Settings** (⚙): Accesses quick settings or the main settings menu.





Figure 2: Front view of the remote control with key buttons labeled.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, solvents, or abrasive materials, as these may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote control's response becomes slow or inconsistent. Always replace both batteries at the same time with new, fresh AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period (e.g., more than a month), remove the batteries to prevent potential leakage and damage to the device. Store in a cool, dry place.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries.	Check battery orientation. Replace with new AAA batteries. Ensure the battery compartment is securely closed.
Remote control range is poor	Obstruction between remote and TV. Weak batteries.	Ensure a clear line of sight to the TV's IR receiver. Replace batteries if they are old or weak.

Issue	Possible Cause	Solution
Specific buttons not working	Dirt or debris under the button. Internal malfunction.	Gently clean around the button with a dry cloth. If the issue persists after cleaning and battery replacement, contact customer support.

If troubleshooting steps do not resolve the issue, please contact PERFASCIN customer service for further assistance.

SPECIFICATIONS

- **Model Number:** AKB75095376 (ANG-MBE979-AKB75095376-US)
- **Brand:** PERFASCIN
- **Compatible Devices:** LG Smart Television
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 2.08 ounces (approximately, without batteries)
- **Special Feature:** Ergonomic design for comfortable handling
- **Color:** Black

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact PERFASCIN customer service directly. When contacting support, please provide your product model number (AKB75095376) and a detailed description of the issue you are experiencing.

Contact information may be available through your purchase platform or the PERFASCIN official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question