

[Manuals.plus](#) /

› [EDISHINE](#) /

› EDISHINE Mid Century Modern Floor Lamp HLFL02E1 Instruction Manual

EDISHINE HLFL02E1

EDISHINE Mid Century Modern Floor Lamp

Model: HLFL02E1 - User Instruction Manual

INTRODUCTION

Thank you for choosing the EDISHINE Mid Century Modern Floor Lamp, Model HLFL02E1. This dimmable wood LED corner lamp is designed to provide versatile lighting with adjustable color temperature and brightness, controlled via a remote or foot switch. This manual provides essential information for safe installation, operation, and maintenance of your new floor lamp.



Image: The EDISHINE Mid Century Modern Floor Lamp in Light Brown, showcasing its minimalist design.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before assembly and operation.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact customer support.

- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- This product is for indoor use only. Do not expose to water or high humidity.
- Do not attempt to modify or disassemble the lamp. There are no user-serviceable parts inside.
- Keep the remote control and lamp out of reach of children.
- Unplug the lamp from the power outlet before cleaning or moving.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- LED Lamp Pole (Integrated LED)
- Lamp Base
- RF-433 Remote Control (with battery)
- Power Adapter with Foot Switch
- User Manual (this document)

SETUP INSTRUCTIONS

The EDISHINE Floor Lamp is designed for quick and easy assembly. Follow these steps:

1. Carefully unpack all components from the packaging.
2. Place the lamp base on a flat, stable surface.
3. Align the bottom of the LED lamp pole with the opening in the lamp base.
4. Gently screw the lamp pole into the base until it is securely fastened. Ensure the pole is straight and stable.
5. Connect the power adapter cable to the lamp's power input, typically located near the base.
6. Plug the power adapter into a standard 120V AC wall outlet.

Easy to Install

Integrated lamp pole design
no assembly required
simply screw the pole into the base



Image: Illustration of screwing the lamp pole into the base during assembly.



LED Corner Floor Lamp



Dimmable



7 Color
Temperature



Remote
Control



Wood Craft



Memory
Function



Night Light
Mode



Image: Visual guide demonstrating the simple installation process of the EDISHINE lamp.

OPERATING INSTRUCTIONS

Remote Control Operation (RF-433)

The included RF-433 remote control allows for convenient adjustment of your lamp's settings from up to 49 feet away. Ensure the remote has a working battery.

Stepless Dimming Max 700LM

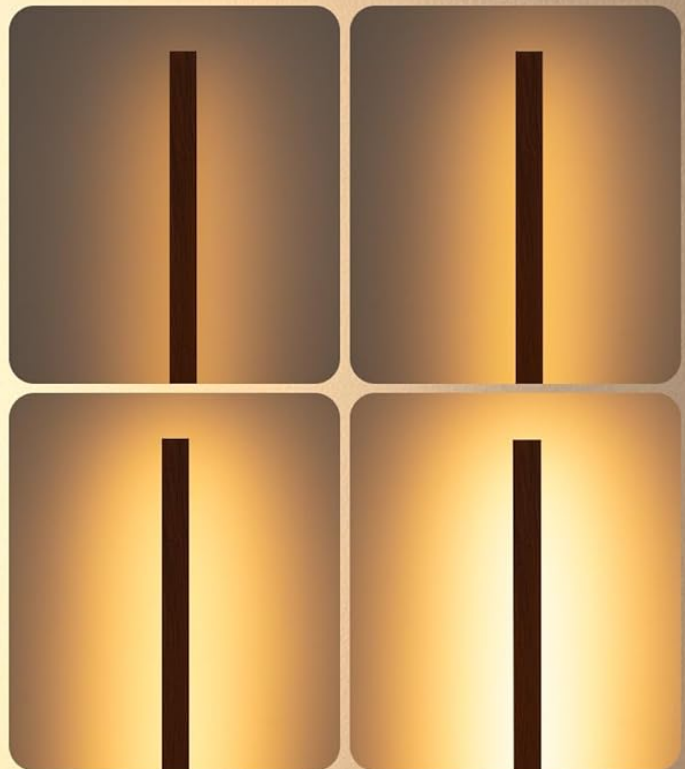


Image: A hand holding the remote control, pointing towards the EDISHINE floor lamp.

- **Power On/Off:** Press the 'ON' or 'OFF' button to turn the lamp on or off.
- **Brightness Adjustment:** Use the 'Brightness+' and 'Brightness-' buttons to adjust the light intensity from 10% to 100%.
- **Color Temperature (CCT) Adjustment:** Use the 'CCT+' and 'CCT-' buttons to cycle through 7 color temperatures, ranging from 2700K (warm white) to 6000K (cool white).
- **Night Light Mode:** Press the 'Night Light Mode' button for a quick switch to a 30% brightness setting, ideal for low-

light environments.

- **Memory Function:** The lamp will remember your last brightness and color temperature setting when turned off and on again.



Image: The EDISHINE floor lamp displaying various color temperatures from warm white to daylight white.

Foot Switch Operation


The integrated foot switch provides an alternative method for basic control:

- **Short Press:** A short press on the foot switch will turn the lamp ON/OFF.
- **Long Press:** A long press on the foot switch will adjust the brightness from 10% to 100%.



RF-433 Remote Control

The remote allows you to adjust any mode you need without leaving your comfort seat

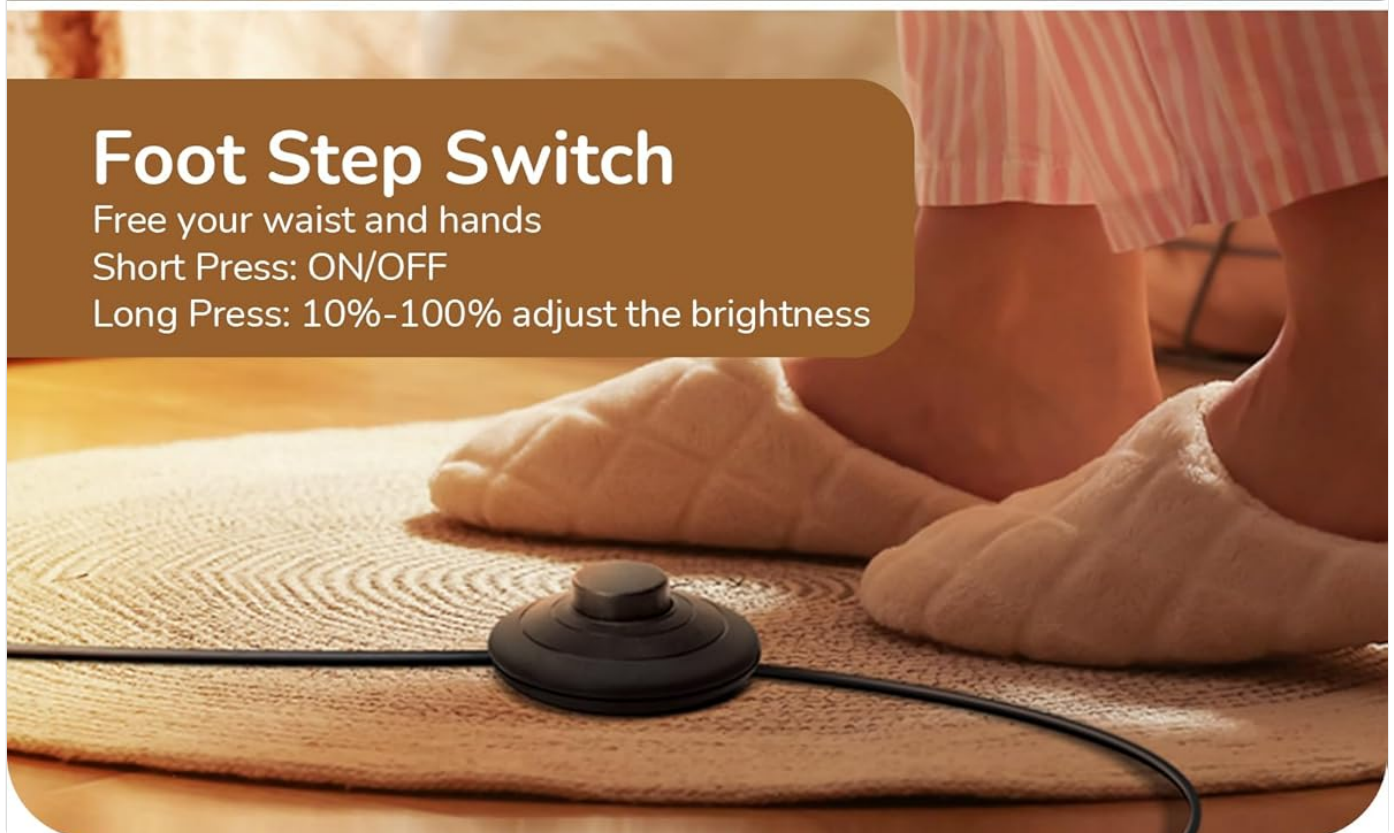

Foot Step Switch

Free your waist and hands

Short Press: ON/OFF

Long Press: 10%-100% adjust the brightness

Image: A foot pressing the foot switch of the EDISHINE floor lamp.

Product Video Demonstrations

Your browser does not support the video tag.

Video: Official demonstration of the EDISHINE Wood LED Floor Lamp with Remote, highlighting its dimming and color temperature adjustment capabilities.

Your browser does not support the video tag.

Video: A detailed overview of the EDISHINE Wood LED Floor Lamp's features and functionality.

MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged before cleaning. Wipe the lamp pole and base with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **LED Light Source:** The LED light source is integrated and designed for over 30,000 hours of life. It does not require bulb replacement.
- **Remote Control Battery:** If the remote control's range or responsiveness decreases, replace the battery with a new one of the same type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power connection.	Ensure the power adapter is securely plugged into both the lamp and a working wall outlet.
Remote control is not working.	Remote battery is dead or incorrectly inserted. Out of range.	Replace the remote control battery. Ensure the battery is inserted with correct polarity. Move closer to the lamp (within 49 ft).
Light flickers or is inconsistent.	Loose connection or power fluctuation.	Check all power connections. Try plugging the lamp into a different outlet.
Lamp is unstable.	Base not securely attached or uneven surface.	Ensure the lamp pole is tightly screwed into the base. Place the lamp on a flat, level surface.

SPECIFICATIONS

Feature	Detail
Model Number	HLFL02E1
Brand	EDISHINE
Product Dimensions	8.27"D x 8.27"W x 48.43"H
Item Weight	3.6 pounds

Feature	Detail
Material Type	Wood
Light Source Type	Integrated LED
Wattage	18 watts
Voltage	120 volts
Color Temperature	2700K - 6000K (7 adjustable levels)
Brightness	10% - 100% Dimmable
Control Method	RF-433 Remote Control, Foot Switch
Indoor/Outdoor Usage	Indoor



Image: Visual representation of the lamp's dimensions (height, width, depth).

WARRANTY AND SUPPORT

Warranty: This EDISHINE product comes with a one-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

Customer Support: For technical assistance, warranty claims, or any questions regarding your EDISHINE Floor Lamp, please contact our customer support team. Refer to your purchase documentation for specific contact details or visit the official EDISHINE website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question