

[Manuals.plus](#) /

> [Diyeeni](#) /

> Diyeeni MP3 Player User Manual

Diyeeni MP3 Player, Music Player with 1.8in LCD Screen, MP4 Bluetooth Player

Diyeeni MP3 Player User Manual

Model: MP3 Player, Music Player with 1.8in LCD Screen, MP4 Bluetooth Player

1. PRODUCT OVERVIEW

The Diyeeni MP3 Player is a versatile portable audio and video device designed for music playback, video viewing, FM radio, voice recording, and e-book reading. It features a 1.8-inch LCD screen, Bluetooth connectivity, and supports a wide range of audio formats including MP3, WMA, FLAC, APE, AAC, OGG, and ACELP. Its compact and durable aluminum alloy design makes it ideal for on-the-go use.

This player is equipped with a built-in 200mAh lithium battery, providing up to 8 hours of playing time on a full charge. It supports external memory cards up to 64GB for extensive storage of your media files.





Figure 1.1: Front view of the Diyeeni MP3 Player, showing the 1.8-inch LCD screen and control buttons.

2. PACKAGE CONTENTS

Before using your Diyeeni MP3 Player, please ensure all items are present in the package:

- 1 x MP4 MP3 Player
- 1 x Charging Cable
- 1 x Headphone



Figure 2.1: The MP3 player alongside its charging cable and wired headphones.

3. SETUP AND FIRST USE

3.1 Charging the Device

Before initial use, fully charge the MP3 player. Connect the provided charging cable to the device's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The battery takes approximately 2 hours to fully charge and provides up to 8 hours of playback time.

3.2 Inserting a Memory Card (Optional)

The device supports memory cards up to 64GB (not included). To expand storage, carefully insert a compatible memory card into the designated slot on the side of the player. It is recommended to use an original memory card for optimal performance.



Figure 3.1: Close-up of the player's bottom, illustrating the charging port, memory card slot, and headphone jack.

3.3 Powering On/Off

To power on the device, press and hold the power button (location typically on the side or top edge). To power off, press and hold the power button again until the screen shuts down.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

Use the central navigation pad to move through menus and select options. The "MENU" button typically returns to the previous screen or main menu. The "VOL" buttons adjust the volume.



Figure 4.1: Various menu screens of the MP3 player, including Music, Recorder, Settings, and App.

4.2 Music Playback

Navigate to the "Music" option on the main menu. The player supports lossless sound quality and is compatible with MP3, WMA, FLAC, APE, AAC, OGG, and ACELP audio formats. You can select songs from playlists, enable random play, or repeat tracks.



Lossless Sound
supports MP3, WMA, FLAC, APE, AAC,
OGG and ACELP

Figure 4.2: The MP3 player highlighting its lossless sound capabilities and supported audio formats.

4.3 Video Playback

Select the "Video" option from the main menu to play compatible video files. Ensure video files are in a format supported by the device for smooth playback.

4.4 FM Radio

Access the "FM Radio" function to listen to local radio stations. You may need to connect the headphones as they often act as an antenna for improved reception.

4.5 Voice Recorder

Use the "Recorder" function to capture audio recordings. Recordings are saved to the device's internal memory or the inserted memory card.

4.6 E-Book Reader

The device supports e-book reading. Transfer compatible e-book files to the player's storage and access them via the "E-

Book" menu option.

4.7 Bluetooth Connectivity

To connect to Bluetooth headphones or speakers, navigate to the Bluetooth settings. Enable Bluetooth on the player and search for available devices. Select your desired device to pair.



Figure 4.3: User enjoying music with the Diyeeni MP3 Player, demonstrating its portability.

4.8 Sleep Shutdown

The player supports a sleep shutdown function, allowing you to set a timer for the device to automatically power off, conserving battery life.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Diyeeni MP3 Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device's exterior. Avoid using liquid cleaners or abrasive materials.

- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Handle the device with care to prevent drops or impacts, which could damage the screen or internal components.
- **Battery Care:** Avoid completely draining the battery frequently. For long-term storage, charge the battery to about 50% to preserve its lifespan.

6. TROUBLESHOOTING

If you encounter issues with your Diyeeni MP3 Player, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Device does not power on.	Battery may be depleted. Connect the charging cable and allow it to charge for at least 15 minutes before attempting to power on again.
Short battery life.	Ensure the device is fully charged (approx. 2 hours). Reduce screen brightness or disable unused features like Bluetooth when not in use.
Cannot play music/video files.	Verify that the files are in a supported format (e.g., MP3, WMA, FLAC for audio). Ensure files are correctly transferred to the device or memory card. Check if the memory card is properly inserted.
No sound from headphones.	Check if headphones are fully plugged into the headphone jack. Ensure volume is not set to zero or muted. Test with another pair of headphones if possible.
Device not recognized by computer.	Ensure the USB cable is securely connected to both the player and the computer. Try a different USB port or cable.
"SD card not included" / "Does not come with sim card"	The device supports external memory cards (microSD cards) up to 64GB for expanded storage, but these are sold separately and are not included in the standard package. The device does not use a "SIM card".

7. SPECIFICATIONS

Feature	Detail
Model	MP4 MP3 Player
Material	Aluminum Alloy
Screen Size	1.8 Inches LCD
Built-in Battery	Lithium Battery 200mAh
Playing Time	Up to 8 hours (fully charged)
Charging Time	Approximately 2 hours
Memory Card Support	Up to 64GB (microSD, not included)
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Special Features	FM Radio, Video Playback, Voice Recorder, E-Book Reader, Bluetooth
Connectivity Technology	USB, Bluetooth

Feature	Detail
Item Weight	2.39 ounces
Package Dimensions	6.54 x 3.19 x 0.87 inches

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly. You can also visit the official Diyeeni store on Amazon for further assistance and product information:

[Visit the Diyeeni Store](#)