

[Manuals.plus](#) /

› [Nexete](#) /

› Nexete Universal Ceiling Fan Remote Control Kit User Manual

Nexete BY08

Nexete Universal Ceiling Fan Remote Control Kit

Model: BY08

Brand: Nexete

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Nexete Universal Ceiling Fan Remote Control Kit. This kit is designed to add wireless remote control functionality to most standard ceiling fans, including those from Hunter, Westinghouse, Honeywell, and Hampton Bay, without requiring complex in-wall wiring modifications.

The kit includes a compact receiver and a versatile remote control that can be used handheld or mounted on a wall as a switch.

WHAT'S INCLUDED

- 1 x Universal Ceiling Fan Receiver
- 1 x Wireless Remote Control
- 1 x Wall Mount Plate for Remote Control
- 1 x CR2032 Battery (pre-installed in remote)
- Wire Nuts and Mounting Screws



Image: The Nexete Universal Ceiling Fan Remote Control Kit, showing the receiver, the remote control, and the wall mount plate.

SPECIFICATIONS

Product Dimensions	5 x 3 x 2 inches (Receiver)
Item Weight	6 ounces
Model Number	BY08
Batteries	1 x CR2032 (included for remote)
Compatible Devices	Ceiling Fans (Universal compatibility with most AC motor fans)
Max Number of Supported Devices	6 (Multiple remotes can control one receiver)

Wireless Range	Up to 100 feet (RF signal works through walls/doors/windows)
-----------------------	--

INSTALLATION GUIDE

1. Safety Precautions

- **WARNING:** To avoid possible electrical shock, be sure to turn off power at the main circuit breaker or fuse box before beginning installation.
- Ensure all wiring connections are secure and properly insulated.
- If you are unsure about electrical wiring, consult a qualified electrician.

2. Receiver Installation

1. Turn off power to the ceiling fan at the circuit breaker.
2. Remove the canopy from your ceiling fan to access the wiring.
3. Disconnect the existing wiring from the ceiling fan to the house wiring.
4. Connect the receiver wires according to the diagram below:
 - White (Receiver) to White (AC Neutral Line)** from house wiring.
 - Black (Receiver) to Black (AC Live Line)** from house wiring.
 - Black (Receiver) to Black (Live Line to FAN)** from ceiling fan.
 - Blue (Receiver) to Blue (Live Line to LIGHT)** from ceiling fan.
5. Carefully tuck the receiver into the fan's mounting bracket or canopy. Ensure it fits without obstruction. The compact size of the Nexete receiver allows it to fit in most standard junction boxes.
6. Reattach the fan canopy.

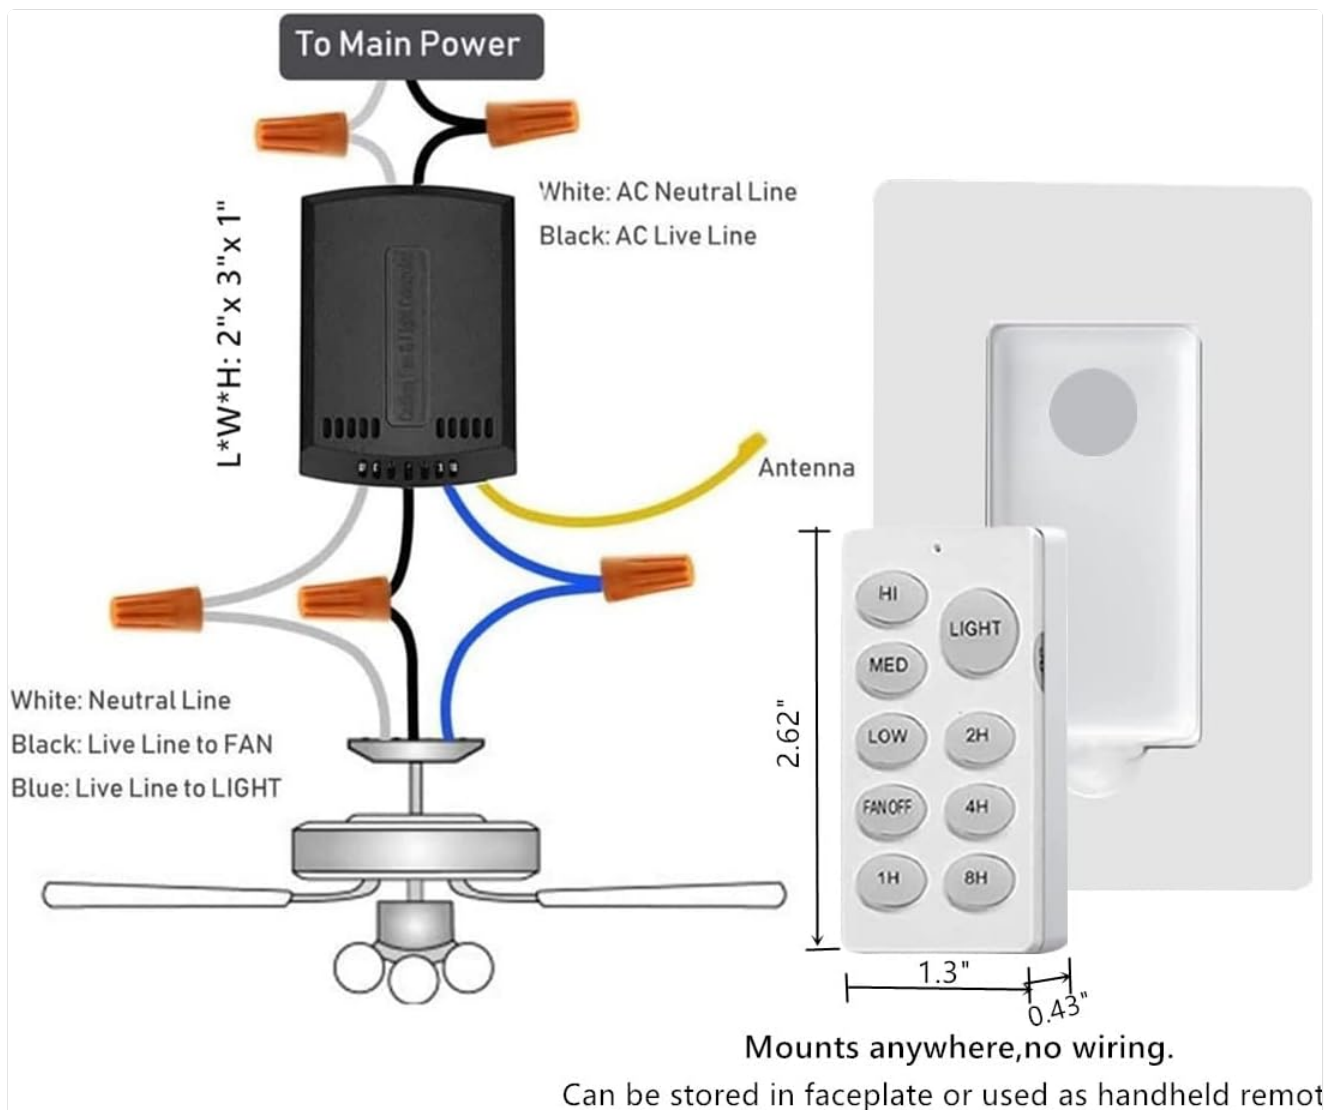


Image: Detailed wiring diagram showing connections for the receiver to main power and the ceiling fan's light and fan wires. The receiver is labeled with dimensions (L*W*H: 2" x 3" x 1").

3. Remote Control Setup


The remote control and receiver are pre-paired at the factory for immediate use. No additional pairing steps are typically required.

1. The remote control comes with a CR2032 battery pre-installed. If replacement is needed, open the battery compartment on the back of the remote and insert a new CR2032 battery, observing polarity.
2. The remote can be used as a handheld device or mounted on a wall. To mount, attach the included wall plate to any desired location using the provided screws. The remote magnetically attaches to the wall plate, allowing for easy removal and reattachment.



Used as wall switch
Mount anywhere
No wiring

Used as handheld remote
CR2032 Battery Operated

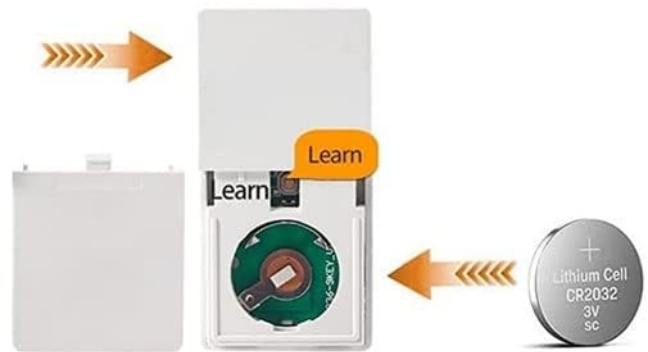

(Battery Included)

Image: Demonstrates the versatility of the remote control, showing it mounted on a wall plate acting as a switch and also being used as a handheld remote. Dimensions of the remote and wall plate are shown.




Glow in dark
Place anywhere

Image: The remote control on a dark surface, highlighting its glow-in-the-dark buttons for visibility in low light conditions.

OPERATION

Once installed, restore power to the ceiling fan at the circuit breaker. The remote control allows you to manage your ceiling fan and light functions wirelessly.

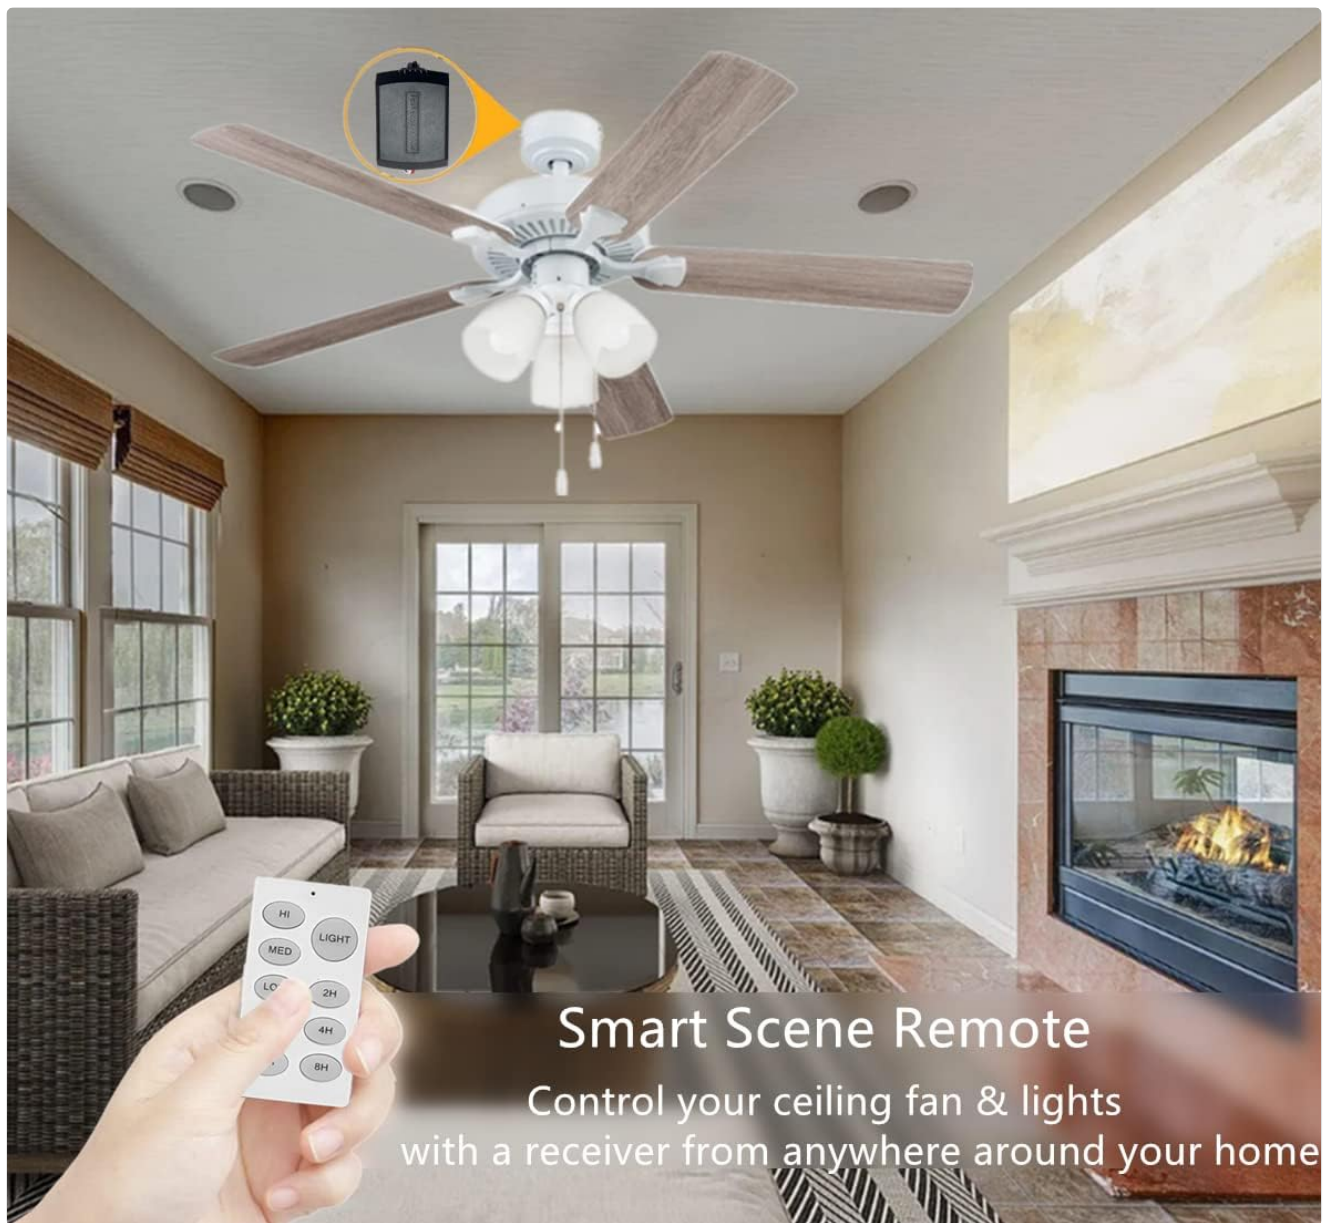

Smart Scene Remote

Control your ceiling fan & lights
with a receiver from anywhere around your home

Image: A hand holding the Nexete remote control in a living room setting, demonstrating its use to control a ceiling fan and lights from anywhere in the room.

Remote Control Functions:

- **HI:** Sets fan speed to High.
- **MED:** Sets fan speed to Medium.
- **LOW:** Sets fan speed to Low.
- **FAN OFF:** Turns the fan off.
- **LIGHT:** Toggles the fan light ON/OFF. (Note: This remote does not support dimming functions for the light.)
- **1H / 2H / 4H / 8H:** Timer functions. Sets the fan to turn off automatically after 1, 2, 4, or 8 hours, respectively.



4 Fan Speeds Setting: LOW - MED - HIGH - STOP
Light ON/OFF,

4 Count down timing 1H - 2H - 4H - 8H
Fan will stop after the setting hours

Wireless remote, wall switch control
No wiring switch, can be placed anywhere.

Image: A close-up of the remote control and a ceiling fan, illustrating the four fan speed settings (Low, Medium, High, Stop) and the four timing options (1H, 2H, 4H, 8H) for automatic fan shutdown.

UNIVERSAL COMPATIBILITY

The Nexete Universal Ceiling Fan Remote Control Kit is designed to be compatible with approximately 98% of regular AC motor ceiling fans. This includes popular brands such as Hunter, Westinghouse, Honeywell, and Hampton Bay.

Universal Compatibility



Image: A collage of nine different styles of ceiling fans, visually representing the universal compatibility of the Nexete remote control kit with a wide range of fan designs.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Fan or Light does not respond to remote.	◦ Ensure power is supplied to the fan at the circuit breaker. ◦ Check battery in the remote control. Replace if necessary (CR2032). ◦ Verify all wiring connections to the receiver are secure and correct. ◦ Ensure the receiver is not obstructed or damaged.

Problem	Possible Cause / Solution
Fan operates, but light does not.	◦ Check the light bulb in the fan. ◦ Verify the blue wire from the receiver is correctly connected to the light wire of the fan.
Remote range is poor.	◦ Ensure the receiver's antenna is not pinched or damaged. ◦ Minimize obstructions between the remote and the receiver. ◦ Replace remote battery.
Interference with other RF devices.	◦ The product is designed to minimize interference, but in rare cases, other RF devices might cause issues. There is no user-adjustable code setting.

MAINTENANCE

- Clean the remote control and wall plate with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Replace the CR2032 battery in the remote control annually or when performance degrades.
- Ensure the receiver area within the fan canopy remains free of dust and debris.

WARRANTY AND SUPPORT

Nexete products are manufactured to high-quality standards. For warranty information, technical support, or customer service inquiries, please contact Nexete directly through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for warranty claims.

For more information, visit the [Nexete Store on Amazon](#).