

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [NOXARTE](#) /

› NOXARTE 48-Inch Crystal Chandelier Ceiling Fan (Model NX48-1111C) Instruction Manual

NOXARTE NX48-1111C

NOXARTE 48-Inch Crystal Chandelier Ceiling Fan Instruction Manual

Model: NX48-1111C

INTRODUCTION

Thank you for purchasing the NOXARTE 48-Inch Crystal Chandelier Ceiling Fan. This product combines the functionality of a ceiling fan with the aesthetic appeal of a crystal chandelier. It features retractable blades, dimmable LED lighting with adjustable color temperature, and convenient remote control operation. This manual provides essential information for safe installation, operation, and maintenance of your new ceiling fan.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- **Electrical Safety:** All electrical wiring must be performed by a qualified electrician and conform to all local and national electrical codes. Disconnect power at the circuit breaker before installation or servicing.
- **Mounting:** Ensure the mounting structure can support the weight of the fan (approximately 29.9 pounds). The fan must be mounted with a minimum of 7 feet (2.1 meters) clearance from the floor to the fan blades.
- **Blade Clearance:** Maintain adequate clearance between the fan blades and any obstacles or walls.
- **Cleaning:** Always turn off the power before cleaning the fan. Use a soft, damp cloth; avoid harsh chemicals.
- **Children:** Keep children away from the fan during operation and maintenance.

SETUP AND INSTALLATION

Professional installation is recommended for this product to ensure proper and safe operation.

1. Unpacking

Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present and undamaged. Keep packaging materials until installation is complete.

2. Mounting the Fan

This fan supports downrod mount installation and can be installed on sloping ceilings with a maximum tilt angle of 22 degrees. Ensure the junction box is securely fastened to the building structure and can support the fan's weight.

DOWNROD

5 and 10 inches



WILL THE FAN OPERATE WITH THE LIGHTS OFF ?

The fan function and lighting function of the ceiling fan lamp can work separately.

Image Description: A diagram illustrating the dimensions of the NOXARTE 48-inch Crystal Chandelier Ceiling Fan, including its 48-inch diameter when extended, 20-inch diameter when closed, and 21.6-inch overall height. It also shows the two included downrod lengths (5 inches and 10 inches) and indicates compatibility with both flat and angled ceilings up to a maximum tilt of 22 degrees.

3. Electrical Connections

Connect the fan's wiring to your household electrical system according to the provided wiring diagram in the separate installation guide. Ensure all connections are secure and insulated.

4. Attaching Crystals and Blades

Once the main fan body is securely mounted and wired, attach the crystal components and ensure the retractable blades are properly seated. Refer to the detailed assembly instructions for specific steps.

OPERATING INSTRUCTIONS

Your NOXARTE ceiling fan can be operated using the included remote control or a compatible app.

Remote Control Functions

The remote control allows comprehensive management of the fan and light features.



Image Description: A visual guide to the remote control and smartphone app for the NOXARTE ceiling fan. The remote control features buttons for lights on/off, fan on/off, night mode, color temperature adjustment, 2-hour timing, and 6 fan speed settings. The app interface displays fan speed control, dimming brightness, light settings (3 lights), Bluetooth matching, and time setting.

- **Power On/Off:** Separate buttons for lights and fan.
- **Fan Speed:** Select from 6 distinct wind speeds to suit your comfort level.
- **Dimmable Lighting:** Adjust the brightness from 0% to 100%.
- **Color Temperature Adjustment:** Cycle between warm white (2700K), natural light (4500K), and cool white (6500K).
- **Night Mode:** Activates a low light setting for nighttime use.
- **Timing Function:** Set the fan to turn off automatically after 2 hours.
- **Forward/Reverse Rotation:** Change the direction of the fan blades for seasonal use.
- **Retractable Blades:** The fan blades can be extended or retracted independently of the light.



Warm Light

Neutral Light

White Light



0%

100%

Image Description: This image demonstrates the dimmable and color temperature adjustable features of the NOXARTE ceiling fan. It shows the fan's light output in warm light, neutral light, and white light settings. Below, a gradient bar illustrates the dimming capability from 0% to 100% brightness.

Forward and Reverse Function

The fan offers both forward and reverse rotation modes:

- **Forward Rotation (Downward Airflow):** Ideal for summer, creating a cooling breeze.
- **Reverse Rotation (Upward Airflow):** Suitable for winter, circulating warm air to help raise indoor temperature.

FORWARD AND REVERSE FUNCTION



Image Description: A visual representation of the forward and reverse functions of the ceiling fan. The left side shows downward airflow, indicated by blue arrows, suitable for summer cooling. The right side shows upward airflow, indicated by orange arrows, suitable for winter to circulate warm air.

Retractable Blades

The fan blades automatically extend when the fan is turned on and retract when turned off. The fan function and lighting function can operate independently.



Image Description: Two comparative images of the NOXARTE ceiling fan. The left image shows the fan with its clear acrylic blades extended, labeled 'ON'. The right image shows the fan with its blades retracted, appearing as a crystal chandelier, labeled 'OFF'.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

Cleaning

- **General Cleaning:** Turn off power before cleaning. Use a soft, lint-free cloth to wipe down the motor housing and blades.
- **Crystal Cleaning:** For the crystal components, use a soft, slightly damp cloth with a mild glass cleaner. Avoid spraying cleaner directly onto the crystals or electrical components.
- **Avoid:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical parts.

LED Panel

The fan features a built-in 72W replaceable LED panel. If replacement is necessary, contact a qualified technician or NOXARTE customer support for guidance.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery low.	Check circuit breaker; Verify all wiring connections are secure (consult electrician); Replace remote control batteries.
Light does not work	No power supply; Loose wiring; LED panel issue.	Check circuit breaker; Verify wiring; Contact support for LED panel replacement.
Remote control not working	Battery low/dead; Remote not paired.	Replace batteries; Refer to pairing instructions in the full manual.
Fan wobbles	Loose mounting screws; Unbalanced blades.	Tighten all mounting hardware; Ensure blades are securely attached and balanced (balancing kit may be required).

PRODUCT SPECIFICATIONS

Brand: NOXARTE

Model Name: NX48-1111C

Product Dimensions: 48"L x 48"W x 21.6"H (Extended)

Diameter (Retracted): 20"

Material: Crystal, Stainless Steel, Acrylic, Metal

Color: Chrome

Light Source Type: LED

Wattage: 72 watts

Brightness: 10800 lumens

Efficiency: 150 lumens per watt

Light Color: Warm White (2700K), Natural Light (4500K), Cool White (6500K)

Dimmable: Yes

Voltage: 120 Volts (AC)

Control Method: Remote Control, App

Installation Type: Semi Flush Mount, Downrod Mount

Max Ceiling Tilt: 22 degrees

Included Components: Bulb, Fan Blades, Light Kit, Shade

Item Weight: 29.9 pounds

Assembly Required: Yes

Indoor/Outdoor Usage: Indoor

UPC: 718687329986

WARRANTY INFORMATION

This NOXARTE ceiling fan comes with a **1-year warranty** for new items. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized repairs.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact NOXARTE customer service. Refer to your purchase documentation for contact details or visit the official NOXARTE website.