

GROHE 5010

User Manual for GROHE Moen 5010 Chrome Faucet

1. INTRODUCTION

Thank you for choosing the GROHE Moen 5010 Chrome Faucet. This manual provides essential information for the proper installation, operation, and maintenance of your new faucet. Please read these instructions carefully before beginning installation or use to ensure safe and efficient operation.

Important Safety Information: Always turn off the main water supply before installing or servicing the faucet. If you are unsure about any part of the installation process, consult a qualified plumber.

2. PRODUCT OVERVIEW

The GROHE Moen 5010 is a stylish and functional chrome faucet designed for bathroom sink applications. Its durable metal construction and polished chrome finish ensure longevity and a sleek appearance.

Key Features:

- Durable metal construction for long-lasting performance.
- Elegant chrome finish that resists tarnishing and corrosion.
- Lever handles for easy control of water flow and temperature.
- Deck mount installation for standard bathroom sinks.

Components:

- Faucet body with spout
- Hot and cold water handles
- Mounting hardware
- Water supply lines (may be integrated or separate)
- Drain assembly (if included)



Image 1: The GROHE Moen 5010 Chrome Faucet, showcasing its polished chrome finish and dual lever handles.

3. SETUP AND INSTALLATION

Before You Begin:

- Ensure all necessary components are present and undamaged.
- Turn off the main water supply to your home or the specific bathroom.
- Clear the area under the sink for easy access.

Tools Required:

- Adjustable wrench
- Phillips head screwdriver
- Plumber's putty or silicone sealant
- Flashlight (optional)

Installation Steps:

1. **Prepare the Sink:** Clean the faucet mounting holes on the sink. Apply a thin bead of plumber's putty or silicone sealant around the base of the faucet body where it will meet the sink surface.
2. **Mount the Faucet:** Insert the faucet body and handles through the corresponding holes in the sink. From underneath the sink, secure the faucet using the provided washers and mounting nuts. Tighten firmly but do not overtighten.
3. **Connect Water Supply Lines:** Attach the hot and cold water supply lines to the corresponding inlets on the faucet body. Connect the other ends of the supply lines to the hot and cold water shut-off valves. Ensure all connections are hand-tight, then use an adjustable wrench for a final quarter-turn.
4. **Install Drain Assembly (if applicable):** Follow the instructions provided with your drain assembly to install it into the sink basin and connect it to the P-trap.
5. **Test for Leaks:** Slowly turn on the main water supply. Check all connections for leaks. If leaks are present, tighten the connections slightly until they stop.
6. **Flush the Faucet:** Remove the aerator from the faucet spout. Turn on both hot and cold water for a few minutes to flush out any debris from the lines. Turn off the water, reattach the aerator, and test the water flow.

4. OPERATING INSTRUCTIONS

The GROHE Moen 5010 faucet features separate lever handles for hot and cold water, allowing for precise control of temperature and flow.

- **To Turn On/Off:** Lift the desired lever handle (left for hot, right for cold) upwards to turn on the water. Push the handle downwards to turn off the water.
- **To Adjust Water Flow:** The further you lift the handle, the greater the water flow.
- **To Adjust Water Temperature:** Use both handles simultaneously. Lift the hot water handle for warmer water and the cold water handle for cooler water. Adjust until the desired temperature is achieved.

5. MAINTENANCE

Regular cleaning and maintenance will help preserve the finish and functionality of your GROHE Moen 5010 faucet.

Cleaning the Finish:

- Use a soft, damp cloth and mild soap (non-abrasive) to clean the chrome finish.
- Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- *Avoid using abrasive cleaners, harsh chemicals, or scouring pads* as these can damage the chrome finish.

Aerator Maintenance:

- If water flow becomes restricted or uneven, the aerator may be clogged with mineral deposits or debris.
- Unscrew the aerator from the end of the spout.
- Rinse the aerator screen under running water to remove any particles. For stubborn deposits, soak the aerator in a solution of equal parts white vinegar and water.
- Reattach the aerator securely.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your faucet.

Problem	Possible Cause	Solution
Faucet leaks from spout	Worn out O-rings or cartridge	Replace O-rings or cartridge. Consult a plumber if unsure.
Faucet leaks at base	Loose mounting nuts or insufficient sealant	Tighten mounting nuts. Reapply plumber's putty/sealant if necessary.
Low water flow	Clogged aerator or partially closed shut-off valve	Clean aerator (see Maintenance section). Ensure shut-off valves are fully open.
No hot/cold water	Shut-off valve closed or supply line kinked	Check that hot/cold shut-off valves are fully open. Inspect supply lines for kinks.

If the problem persists after attempting these solutions, please contact GROHE customer support or a qualified plumber.

7. SPECIFICATIONS

Attribute	Detail
Brand	GROHE
Model Name	5010
Material	Metal
Finish Type	Chrome
Mounting Type	Deck Mount
Installation Type	Centerset
Handle Type	Lever
Item Weight	3.87 pounds
Product Dimensions	10.3 x 8.3 x 5.6 inches
Recommended Uses	Bathroom

8. WARRANTY AND SUPPORT

GROHE products are manufactured to the highest quality standards and are backed by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official GROHE website.

Customer Support:

If you have any questions, require technical assistance, or need to order replacement parts, please contact GROHE customer support. Contact information can typically be found on the GROHE website or on the product packaging.

For more information, visit the official GROHE Store on Amazon:[GROHE Store](#)