

**Greater Goods 0588**

# Greater Goods Cold Press Juicer Instruction Manual

Model: 0588

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Greater Goods Cold Press Juicer. Retain this manual for future reference.

- Always ensure the juicer is properly assembled and locked before operation.
- Do not operate the juicer with wet hands or near water.
- Keep hands and utensils out of the feed chute during operation. Use the food pusher provided.
- Unplug the juicer from the power outlet before cleaning or when not in use.
- This appliance is for household use only.
- Do not immerse the motor base in water or other liquids.
- Ensure the power cord is not damaged or pinched.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Greater Goods Cold Press Juicer.



The Greater Goods Cold Press Juicer, designed for efficient juice extraction.

## Components:

- Motor Base
- Juice Chute Assembly (includes feed chute, auger, strainer)
- Pulp Spout
- Juice Cup
- Pulp Container
- Cleaning Brush
- Food Pusher

## 3. SETUP AND ASSEMBLY

Follow these steps to correctly assemble your juicer before first use.

Watch this official video for a step-by-step guide on how to correctly assemble your juicer.

## Assembly Steps:

- Unpack and Clean:** Carefully unpack all components. Wash all removable parts (juice chute, auger, strainer, pulp spout, juice cup, pulp container, food pusher) with warm, soapy water and rinse thoroughly. Dry completely.
- Attach Juice Chute:** Hold down the lock button on top of the motor base. Slide the juice chute assembly onto the motor base. Release the button to lock it into place. Ensure the button is fully upright and the chute is securely attached.
- Insert Auger:** Place the auger into the juice chute, ensuring it sits correctly.
- Place Strainer:** Position the strainer over the auger.
- Attach Pulp Spout:** Align the indicator arrow on the pulp spout with the unlock icon on the juice chute. Push the spout in and twist counter-clockwise until the arrow aligns with the lock icon.
- Position Containers:** Place the juice cup under the juice outlet and the pulp container under the pulp spout.



All removable components of the juicer, ready for assembly or cleaning.

## 4. OPERATING INSTRUCTIONS

Your juicer is designed for efficient extraction of juice from various fruits and vegetables.

This video highlights the key features of the juicer, including its quiet operation and high juice yield.

### Preparation:

- Wash all fruits and vegetables thoroughly.
- For best results, cut ingredients into pieces that fit easily into the 3-inch feed chute. Harder ingredients like carrots or ginger may benefit from smaller pieces.
- Remove large seeds, pits, and hard skins (e.g., pineapple, melon rinds).

### Juicing Process:

- Plug the juicer into a power outlet.
- Press the ON button to start the juicer.
- Slowly feed prepared ingredients into the feed chute. Use the food pusher only if necessary to guide ingredients down. Do not force ingredients.
- The juicer will separate juice into the juice cup and pulp into the pulp container.

5. Once juicing is complete, press the OFF button and unplug the appliance.

## Reverse Function:

If ingredients become clogged, press and hold the REVERSE button for a few seconds. This will rotate the auger in the opposite direction to clear the blockage. Release the button, then press ON to resume juicing. Do not hold the REVERSE button for extended periods.

## Juice Whole Ingredients

The wide, 3 inch feed chute makes juicing whole fruits and veggies fast and easy.



The wide 3-inch feed chute accommodates larger fruits and vegetables, reducing preparation time.



The juicer efficiently extracts juice from hard vegetables like carrots.

## 5. CARE AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your juicer.

### Cleaning:

- 1. Disassemble:** Unplug the juicer. Press the lock button and remove the juice chute assembly. Disassemble the pulp spout, strainer, and auger.
- 2. Rinse:** Rinse all removable parts under running water immediately after use to prevent pulp from drying and sticking.
- 3. Wash:** Most removable parts are dishwasher-safe (top rack recommended). For hand washing, use warm, soapy water and the included cleaning brush to remove any stubborn pulp, especially from the strainer.
- 4. Motor Base:** Wipe the motor base with a damp cloth. **Never immerse the motor base in water.**
- 5. Dry and Store:** Ensure all parts are completely dry before reassembling or storing. Store the juicer in a clean, dry place.



Most parts of the juicer are dishwasher-safe for easy and convenient cleaning.

## 6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; improper assembly; power outage.	Ensure the power cord is securely plugged in. Check that the juice chute is properly locked and the lock button is fully upright. Verify power supply.
Juicer stops during operation or clogs.	Too much produce; hard ingredients; produce not cut small enough.	Press and hold the REVERSE button for a few seconds to clear the blockage. Release, then press ON. Cut ingredients into smaller pieces. Feed produce slowly.
Excessive foam in juice.	Certain fruits/vegetables naturally produce more foam.	Use the included juice cup with a foam separator if desired.
Low juice yield or wet pulp.	Strainer clogged; improper assembly.	Clean the strainer thoroughly. Ensure all parts are assembled correctly and securely.

## 7. SPECIFICATIONS

- **Brand:** Greater Goods
- **Model Number:** 0588
- **Color:** Onyx Black
- **Special Features:** Easy to Clean, Large Feed Chute (75mm), Low Speed (85 - 115 RPM), Quiet & Powerful Motor, Reverse Function
- **Product Dimensions:** 12.8"D x 5.1"W x 14.9"H
- **Capacity:** 0.6 Liters
- **Maximum Power:** 150 Watts
- **Power Source:** Corded Electric
- **Blade Material:** Plastic
- **Voltage:** 120 Volts
- **Item Weight:** 7 pounds

## 8. WARRANTY AND SUPPORT

Greater Goods products are designed with quality and durability in mind. For specific warranty details, please refer to the warranty card included with your purchase or visit our official website.

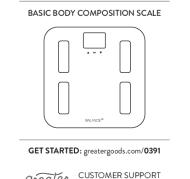
 
If you have any questions, require assistance with assembly, operation, or troubleshooting, please contact our helpful support team:

**Phone:** 866.991.8494

**Email:** [info@greatergoods.com](mailto:info@greatergoods.com)

© 2023 Greater Goods. All rights reserved.

### Related Documents - 0588

	<p><a href="#">LTE-M Scale Welcome Guide and Quick Start</a></p> <p>Welcome guide and quick start instructions for the LTE-M Scale, including setup, warnings, and FCC compliance information.</p>
	<p><a href="#">Greater Goods Balance Body Composition Scale User Manual</a></p> <p>User manual for the Greater Goods Balance Body Composition Scale. Provides instructions on setup, usage, safety, troubleshooting, and technical specifications for measuring weight, body fat, muscle mass, water weight, and bone density.</p>
	<p><a href="#">Mäusbacher Esstisch Assembly Instructions (Models 0588-104, 0588-120)</a></p> <p>Detailed assembly instructions for the Mäusbacher extendable dining table (Esstisch) in models 0588-104 and 0588-120. Includes part lists, step-by-step guidance, and safety information.</p>
	<p><a href="#">Me Health Hub and Power Device Setup Guide</a></p> <p>A guide to setting up the Me Health Hub and Power device, including connection instructions and status indicator explanations.</p>
	<p><a href="#">Omada Health Smart Scale Quick Start Guide</a></p> <p>Get started with your Omada Health smart scale (model 2ADUL0028), manufactured by Greater Goods, LLC. This guide covers setup, daily weighing habits, safety instructions, FCC compliance, and how to download the Omada mobile app for a connected health experience.</p>