

Solis 8161

Solis Rice & Potato Cooker 5 Litre Digital Multicooker

MODEL 8161 INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Solis Rice & Potato Cooker Model 8161. This versatile digital multicooker is designed to prepare a variety of dishes, including perfectly cooked rice, potatoes, steamed vegetables, and fish. Please read this instruction manual carefully before first use to ensure safe and optimal operation of your appliance. Keep this manual for future reference.

2. Safety Instructions

- Always place the appliance on a stable, heat-resistant, and dry surface.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Avoid touching hot surfaces. Use oven mitts or handles when opening the lid or handling the inner pot. Steam released during cooking is hot.
- Do not use accessories or attachments not recommended by the manufacturer.
- Unplug the appliance from the outlet when not in use and before cleaning.
- This appliance is for household use only.

3. Product Components

The Solis Rice & Potato Cooker Model 8161 includes the following items:

- Main Rice & Potato Cooker Unit
- Removable Inner Pot with non-stick coating
- Steamer Insert

- Measuring Cup
- Serving Spoon



Lieferumfang

-  Rice & Potato Cooker
Reiskocher und Dampfgarer Typ 8161
-  Dämpfeinsatz, Messbecher, Schöpflöffel

Image: Solis Rice & Potato Cooker with its included accessories (steamer insert, measuring cup, serving spoon) and indicated dimensions (30cm width, 30cm depth, 25cm height).

4. Setup

- Unpacking:** Carefully remove all packaging materials and check for any damage. Retain packaging for future transport if needed.
- First Use Cleaning:** Before initial use, wash the inner pot, steamer insert, measuring cup, and serving spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
- Placement:** Place the cooker on a flat, stable, and heat-resistant surface, away from walls and other appliances to allow for proper ventilation. Ensure there is enough space above the cooker for steam to escape freely.
- Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

5. Operating Instructions

The Solis Rice & Potato Cooker features a digital display and various cooking programs for ease of use.

Praktische Speicherfunktion

Mit dem Rice & Potato Cooker kannst du deine Lieblingsrezepte auf einem der **3 programmierbaren Speicherplätze** hinterlegen und immer wieder einfach zubereiten.



Image: Close-up of the Solis Rice & Potato Cooker's digital control panel, showing the display, 'Keep Warm', 'Start', 'Cancel', 'Cooking Mode', 'Timer', 'Set Time', 'OK', and '+' / '-' buttons, along with a list of cooking programs.

5.1 Cooking Modes

The cooker offers several pre-set programs and customizable options:

- **Rice Programs:** White Rice, Brown Rice, Sushi Rice.
- **Potato Programs:** Small Potatoes, Medium Potatoes, Large Potatoes.
- **Steaming:** For vegetables, fish, and other items using the steamer insert.
- **Memory 1, 2, 3:** Customizable programs to save your preferred settings.
- **DIY Mode:** Allows manual adjustment of temperature and cooking time.

5.2 General Operation

1. Add ingredients to the inner pot. For rice, use the provided measuring cup and fill water to the corresponding mark inside the pot.

2. Place the inner pot into the main unit and close the lid securely.
3. Press the 'Cooking Mode' button repeatedly to cycle through the available programs until your desired program is selected.
4. For programs like 'DIY Mode' or 'Memory' settings, use the '+' and '-' buttons to adjust cooking time or temperature as needed.
5. To use the timer function, press 'Timer' and then 'Set Time' to adjust the delayed start time.
6. Press the 'Start' button to begin the cooking process. The display will show the remaining cooking time.
7. Once cooking is complete, the cooker will automatically switch to the 'Keep Warm' function.
8. To cancel a program or turn off the 'Keep Warm' function, press the 'Cancel' button.

Multifunktionales Gargerät



Egal, ob du Reis oder Kartoffeln perfekt garen oder sogar Gemüse und Fisch dämpfen möchtest – kein Problem mit dem Rice & Potato Cooker.



Image: The Solis Rice & Potato Cooker with its lid open, revealing the inner pot filled with cooked rice, potatoes, and various steamed vegetables, demonstrating its multi-functional capability.

5.3 3D Heating System

The cooker features a 3D heating system that ensures even heat distribution from the bottom and sides of the inner pot.

This technology prevents food from sticking or boiling over, resulting in consistently perfect cooking results.



Image: The Solis Rice & Potato Cooker with its inner pot removed, showcasing the internal structure and hinting at the 3D heating system that surrounds the pot for even cooking.

5.4 Capacity and Non-Stick Pot

The 5-litre capacity inner pot is designed with a non-stick coating, making it suitable for preparing meals for the entire family and simplifying the cleaning process.



5 Liter Fassungsvermögen



Mit 5 Litern Kapazität und **Antihaftbeschichtung** ermöglicht mühelose Zubereitung von gesundem Essen. Perfekt für die ganze Familie.

Image: The Solis Rice & Potato Cooker's 5-litre non-stick inner pot, shown filled with small potatoes, positioned next to the main unit, illustrating its capacity and ease of use.

6. Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your Solis Rice & Potato Cooker.

- **Always unplug the appliance** and allow it to cool completely before cleaning.
- **Inner Pot and Accessories:** The inner pot, steamer insert, measuring cup, and serving spoon should be hand washed with warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating. Rinse thoroughly and dry completely before storing or next use.
- **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use harsh chemicals or immerse the unit in water.
- **Lid:** The lid can be wiped clean with a damp cloth. Ensure the steam vent is clear of any food debris.

7. Troubleshooting

If you encounter issues with your Solis Rice & Potato Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Food not cooking properly.	Incorrect program selected; insufficient water/ingredients; lid not closed properly.	Verify the correct cooking program is selected. Ensure proper water-to-ingredient ratio. Close the lid securely.
Steam escaping excessively from lid.	Lid not closed properly; steam vent blocked.	Ensure the lid is fully closed and sealed. Check if the steam vent is clear of any obstructions.
Food sticking to the inner pot.	Non-stick coating damaged; insufficient liquid.	Avoid using metal utensils. Ensure adequate liquid is used for cooking.

If the problem persists after attempting these solutions, please contact Solis customer support or your retailer for assistance.

8. Specifications

Feature	Specification
Brand	Solis
Model Name	8161
Capacity	5 Litres
Product Dimensions (D x W x H)	30D x 30W x 25H centimetres
Item Weight	3.9 Kilograms
Power Source	Corded Electric
Wattage	860 watts
Voltage	220 Volts
Material (Inner Pot)	Metal with non-stick coating
Lid Material	Stainless Steel
Special Features	Auto Shutdown, Timer, 3D Heating System
Product Care Instructions	Hand Wash (removable parts)

9. Warranty and Support

Solis products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to

the warranty card included with your product or visit the official Solis website. For technical support, spare parts, or service inquiries, please contact your retailer or Solis customer service directly. Keep your proof of purchase for warranty claims.

For more information, visit the [Solis Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question