Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Perlegear /
- > Perlegear PGTVS24 Universal Tabletop TV Stand Instruction Manual

Perlegear PGTVS24

Perlegear PGTVS24 Universal Tabletop TV Stand Instruction Manual

Model: PGTVS24

1. Introduction

Thank you for choosing the Perlegear PGTVS24 Universal Tabletop TV Stand. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new TV stand. Please read these instructions thoroughly before installation and keep them for future reference.

The Perlegear PGTVS24 is designed to provide a stable and adjustable base for most 22 to 60-inch flat or curved televisions, offering a reliable alternative to original TV feet. Its robust construction and height adjustment features ensure an optimal viewing experience.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to read and follow these instructions can result in serious personal injury, property damage, or voiding your warranty. If you do not understand these instructions or have doubts about the safety of the installation, please contact customer support.

- Weight Capacity: Do not exceed the maximum weight capacity of 88 lbs (40 kg). This stand is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.
- Screen Size: This stand is designed for televisions between 22 and 60 inches. Ensure your TV falls within this range.
- VESA Compatibility: Verify your TV's VESA mounting pattern is between 100x100mm and 400x400mm.
- **Proper Assembly:** Assemble the product strictly according to the instructions. Incorrect assembly can lead to product failure or injury.
- Surface Stability: Ensure the surface on which the stand is placed is stable, level, and capable of supporting the combined weight of the stand and the television.
- Children: Keep children away from the assembly area. Small parts may be a choking hazard.
- Tools: Use appropriate tools as specified in the assembly instructions.
- Regular Checks: Periodically check that all screws and connections are secure.

3. PACKAGE CONTENTS

Before assembly, please verify that all components are present and undamaged. If any parts are missing or defective, do not attempt to assemble. Contact Perlegear customer service for assistance. While specific part labels are not provided, the package typically includes:

- Base Plate (Reinforced Glass)
- Support Pillar
- TV Bracket (Horizontal Bar)
- TV Mounting Arms (Vertical Bars)
- · Various Screws, Washers, and Spacers for TV mounting
- Assembly Hardware for the stand structure
- Non-slip Pads for the base
- Cable Management Clips
- Instruction Manual

4. PRODUCT SPECIFICATIONS

| Specification | Detail |
|------------------------------|---|
| Model Number | PGTVS24 |
| Compatible TV Sizes | 22 - 60 inches (flat or curved) |
| Maximum Load Capacity | 88 lbs (40 kg) |
| VESA Compatibility | 100x100mm, 100x200mm, 200x100mm, 200x200mm, 200x300mm, 300x200mm, 300x300mm, 300x400mm, 400x200mm, 400x300mm, 400x400mm |
| Height Adjustment | 6 levels (3 on pillar, 2 on bracket hooks) |
| Height Range | 11.4 inches to 15.3 inches (from base to center of TV) |
| Base Material | Reinforced Glass |
| Base Dimensions | 15.8 inches (Length) x 10.2 inches (Width) |
| Construction Material | Steel (Pillar and Brackets) |
| Color | Black |
| Product Dimensions (Overall) | 44.2 x 28.96 x 5.08 cm (approx. 17.4 x 11.4 x 2 inches) |
| Product Weight | 3.58 kg (approx. 7.9 lbs) |

| Cable |
|------------|
| Management |

Integrated clips

5. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your Perlegear PGTVS24 TV stand.

Step 5.1: Prepare the Base

Attach the support pillar to the reinforced glass base. Ensure the non-slip pads are applied to the bottom of the glass base to prevent movement and protect surfaces.



Figure 5.1: Solid and Stable Base. This image shows the reinforced glass base with the central support pillar attached, highlighting its sturdy design and non-slip feet.

Step 5.2: Assemble the TV Bracket

Attach the horizontal TV bracket to the top of the support pillar. This bracket features the Perlegear logo and provides the main mounting point for your television.



Figure 5.2: Stand Overview. An assembled view of the Perlegear PGTVS24 TV stand, showing the base, support pillar, and horizontal TV bracket.

Step 5.3: Attach TV Mounting Arms to Your Television

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's specific mounting holes. Attach the two vertical TV mounting arms to the back of your television, ensuring they are securely fastened and oriented correctly (usually with the hooks facing upwards).

Strong & Stable Construction



Figure 5.3: Strong and Stable Construction. This image details the reinforced steel structure of the TV bracket, security lock mechanism, and non-slip feet on the base, illustrating the robust design.

Step 5.4: Mount the TV onto the Stand

With assistance, carefully lift your television and hook the attached mounting arms onto the horizontal TV bracket. Ensure both arms are securely seated on the bracket. Use the security lock mechanism (if applicable) to prevent accidental dislodgement.



Figure 5.4: Fast Installation. This image demonstrates the ease of installation, showing a user attaching a TV to the stand without the need for wall drilling.

Step 5.5: Cable Management

Utilize the integrated cable clips on the support pillar to route and organize your TV cables, maintaining a clean and tidy appearance.



Figure 5.5: Product Dimensions. This diagram illustrates the key dimensions of the assembled TV stand, including the base size, overall height, and TV bracket width.

6. OPERATING INSTRUCTIONS

Height Adjustment

The Perlegear PGTVS24 TV stand offers 6 levels of height adjustment to optimize your viewing angle. This is achieved through two mechanisms:

- 1. **Support Pillar Adjustment:** The main support pillar has 3 pre-drilled height settings. To adjust, you will need to partially disassemble the stand to reposition the horizontal TV bracket at a different height on the pillar.
- 2. **TV Mounting Arm Adjustment:** The vertical TV mounting arms have multiple hook positions. You can adjust the height of your TV by selecting a different set of hooks on the mounting arms when attaching them to the horizontal bracket. This allows for finer adjustments without disassembling the main stand structure.

To adjust the height, ensure the TV is safely supported or removed from the stand. Loosen the necessary screws, reposition the components to your desired height, and securely tighten all fasteners before re-mounting the TV.



Figure 6.1: Height Adjustment Options. This image illustrates the different height settings available, showing how the TV can be positioned at various levels (e.g., 11.4", 13.4", 15.3") to accommodate soundbars or personal preference.

TV Compatibility Overview

This stand is designed for a wide range of televisions. Refer to the image below for a visual representation of compatible TV sizes and VESA patterns.



Figure 6.2: Compatibility. This image highlights the stand's compatibility with 22-60 inch TVs, a maximum weight of 88 lbs, and VESA patterns ranging from 100x100mm to 400x400mm.

7. MAINTENANCE

- Cleaning: Use a soft, damp cloth to clean the stand. Avoid harsh chemicals or abrasive cleaners that could damage the finish or glass.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight and secure. Loose connections can lead to instability.
- Glass Care: Handle the glass base with care to prevent chips or cracks. Clean glass surfaces with a glass cleaner and a soft cloth.

8. TROUBLESHOOTING

- TV is not stable:
 - Ensure all screws are tightened securely, especially those connecting the TV mounting arms to the TV

and the arms to the horizontal bracket.

- Verify that the TV's weight and VESA pattern are within the stand's specifications.
- Check that the stand is placed on a flat, level, and stable surface.

• Difficulty attaching TV to the stand:

- Confirm you are using the correct screws, washers, and spacers for your TV's VESA holes.
- Ensure the TV mounting arms are oriented correctly on the back of your TV.
- Seek assistance from another person when lifting and mounting the TV.

• Stand appears wobbly:

- Re-check all assembly connections, particularly where the support pillar connects to the base and the horizontal bracket.
- Ensure the non-slip pads are properly installed on the base.

9. WARRANTY AND CUSTOMER SUPPORT

Perlegear stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Perlegear website.

If you encounter any issues during assembly or use, or if you have questions about your Perlegear PGTVS24 TV stand, please do not hesitate to contact our customer support team. Our representatives are available to assist you with technical support, missing parts, or any other concerns.

Contact Information: Please refer to the contact details provided on the Perlegear packaging or official website for the most up-to-date customer support information.

© 2023 Perlegear. All rights reserved.

Related Documents - PGTVS24



Perlegear PGTVS02 Table Top TV Stand Instruction Manual

Instruction manual for the Perlegear PGTVS02 Table Top TV Stand, covering safety information, parts list, assembly steps, and troubleshooting for mounting a TV.



Perlegear PGTVS05 Tabletop TV Stand Instruction Manual

This manual provides instructions for assembling and installing the Perlegear PGTVS05 Tabletop TV Stand. It includes compatibility checks, parts lists, and step-by-step assembly guides for attaching TV brackets, assembling the base, connecting support pillars, and mounting the TV.

