

GUTSTARK B0BL8HPS7S

GUTSTARK Mini Beverage Refrigerator Instruction Manual

Model: B0BL8HPS7S

Introduction
Safety Information
Product Overview
Setup
Operation
Maintenance
Troubleshooting
Specifications

1. INTRODUCTION

Thank you for purchasing the GUTSTARK Mini Beverage Refrigerator. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance must be properly installed and located in accordance with the installation instructions before it is used.
- Connect to properly grounded outlets only. See "Grounding Instructions" in the Setup section.
- Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug, or the connector end.

- Unplug your appliance before cleaning or before making any repairs.
- If the appliance is not in use for an extended period, unplug it.
- Do not use any electrical device or any sharp instrument in defrosting your appliance.
- After your appliance is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Do not place the appliance near heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Do not allow children to climb, stand, or hang on the shelves in the appliance. They could damage the appliance and seriously injure themselves.
- Keep fingers out of the "pinch point" areas; clearances between the doors and between the doors and cabinet are necessarily small. Be careful when closing doors when children are in the area.
- The refrigerant used in this appliance is R600A. Ensure proper handling and disposal.

3. PRODUCT OVERVIEW

The GUTSTARK Mini Beverage Refrigerator is designed to keep your beverages at an optimal temperature. It features a digital touch display, adjustable shelves, and efficient cooling technology.

Key Features:

- **70-Liter Capacity:** Ample space for various beverages.
- **Digital Touch Display:** Intuitive control panel for temperature settings and light.
- **Temperature Range:** Adjustable from 3°C to 18°C (37°F to 64°F).
- **Removable Shelves:** Three adjustable shelves for flexible storage.
- **LED Lighting:** Internal white LED light for visibility.
- **Stainless Steel Design:** Durable construction with a tempered glass door.
- **Compressor Cooling:** Efficient and consistent cooling.

Components:

1. Main Refrigerator Unit
2. Door Handle
3. Three Removable Shelves
4. Power Cord
5. Mounting Screws for Handle (2 x M4 x 30 mm)



Figure 1: Interior view of the GUTSTARK Mini Beverage Refrigerator with beverages.



4. SETUP

4.1 Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the appliance for any damage during transit. If damage is found, do not operate and contact customer support.
- Keep packaging materials out of reach of children.

4.2 Location

- Place the refrigerator on a flat, stable surface strong enough to support the unit when fully loaded.
- Ensure adequate ventilation around the unit. Allow at least 10 cm (4 inches) of space at the back and sides for proper air circulation.
- Avoid placing the appliance in direct sunlight or near heat sources (stoves, radiators, etc.) to maintain cooling efficiency.
- This appliance is designed for indoor use.

4.3 Leveling

- The appliance must be level for proper operation. Use the adjustable feet at the bottom to level the unit.
- A slight tilt to the rear is recommended to ensure the door closes properly.



Figure 3: Product dimensions for placement consideration.

4.4 Door Handle Installation

- Locate the door handle and the two M4 x 30 mm screws.
- Align the handle with the pre-drilled holes on the door.
- Secure the handle using the provided screws. Do not overtighten.

4.5 Electrical Connection

- Before plugging in, allow the appliance to stand upright for at least 2-4 hours to allow the refrigerant to settle.
- Connect the appliance to a dedicated, grounded 110V, 60Hz power outlet.
- Do not use extension cords or ungrounded adapters.

5. OPERATING INSTRUCTIONS

5.1 Initial Start-up

- After plugging in, the digital display will illuminate.
- Allow the refrigerator to operate empty for approximately 2-3 hours to reach the desired temperature before loading beverages.

5.2 Digital Touch Control Panel

The control panel is located at the top of the unit and features touch-sensitive buttons:

- **Light Button ():** Toggles the internal LED light ON/OFF. Also used to switch between Celsius (°C) and Fahrenheit (°F) display.
- **Temperature Up Button (▲):** Increases the set temperature.
- **Temperature Down Button (▼):** Decreases the set temperature.
- **Unlock Button ():** Unlocks the control panel for temperature adjustments. The panel automatically locks after a period of inactivity.



Figure 4: Digital touch control panel for temperature and light settings.

5.3 Temperature Adjustment

- Press the Unlock button to activate the control panel.
- Use the Up (▲) or Down (▼) buttons to set your desired temperature between 3°C and 18°C.
- The display will show the set temperature for a few seconds, then revert to showing the current internal temperature.

5.4 Loading Beverages

- Arrange beverages to allow for proper air circulation. Do not block the internal fan or vents.
- The three removable shelves can be adjusted to 5 different height levels to accommodate various bottle and can sizes.
- Avoid overloading the shelves.



Figure 5: Example of organized storage within the refrigerator.

6. MAINTENANCE

6.1 Cleaning

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth and a mild, non-abrasive detergent. Rinse with clean water and dry thoroughly.
- The removable shelves can be washed with warm soapy water.
- Clean the exterior with a soft cloth and mild detergent. Avoid harsh chemicals or abrasive cleaners.
- Ensure the door gasket is clean and free of debris to maintain a proper seal.

6.2 Defrosting

- This appliance features an automatic defrost system. Frost on the back wall will melt and drain into an evaporation tray.
- If excessive ice buildup occurs, manually defrost the unit by unplugging it and leaving the door open until the ice melts. Collect water with a towel.

6.3 Power Outage

- In case of a power outage, keep the door closed to maintain the internal temperature for as long as possible.

- Avoid opening the door unnecessarily.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Door not closed properly; excessive door openings; warm items added; poor ventilation; thermostat set too high.	Check door seal; reduce door openings; allow warm items to cool before placing inside; ensure proper clearance around unit; adjust thermostat to a lower setting.
Appliance makes too much noise.	Unit not level; loose parts; items vibrating inside.	Level the appliance using adjustable feet; check for loose components; rearrange items inside.
Door does not close properly.	Appliance not level; door gasket dirty or damaged; shelves out of position.	Level the appliance; clean or replace door gasket; ensure shelves are correctly inserted.

8. SPECIFICATIONS

Feature	Detail
Model	B0BL8HPS7S
Brand	GUTSTARK
Capacity	70 Liters
Temperature Range	3°C to 18°C (37°F to 64°F)
Voltage	110V
Frequency	60 Hz
Power	95W
Refrigerant	R600A (Cyclopentane)
Dimensions (L x W x H)	43.5 cm x 49 cm x 74.5 cm (17.1 in x 19.3 in x 29.3 in)
Weight	21.25 kg (46.85 lbs)

Feature	Detail
Number of Shelves	3 (Removable, 5 adjustment levels)
Defrost System	Automatic
LED Lighting	White LED

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official GUTSTARK website. Keep your proof of purchase for any warranty claims.
For technical assistance or service inquiries, please contact GUTSTARK customer service.

© 2026 GUTSTARK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question