

[Manuals.plus](#) /

› [Altec Lansing](#) /

› Altec Lansing Shockwave IMT7000RB Wireless LED Party Speaker User Manual

Altec Lansing IMT7000RB

Altec Lansing Shockwave IMT7000RB Wireless LED Party Speaker User Manual

INTRODUCTION

The Altec Lansing Shockwave IMT7000RB is a portable wireless LED party speaker designed for robust audio performance and dynamic visual effects. Featuring IP67 waterproof and dustproof construction, a convenient carrying strap, and a HyperEdge LED light show, this speaker is built for various environments. It offers 60 watts of peak power, up to 6 hours of battery life, and includes a built-in smartphone charger. Connectivity options include Bluetooth and AUX input.

PACKAGE CONTENTS


- Altec Lansing Shockwave IMT7000RB Speaker
- Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various controls and features of your Shockwave speaker.



Image: Top panel of the Shockwave speaker showing the power button, volume controls, mode selection (AUX, Radio), LED light control, and True Wireless Pairing button.

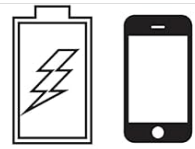

BUILT-IN
SMARTPHONE
CHARGER



Image: Side panel of the Shockwave speaker displaying the charging port, AUX input, and USB output for smartphone charging.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the charging cable to the speaker's charging port and a standard USB power adapter (not included). The charging indicator light will show the charging status.

Power On/Off

- To power on: Press and hold the **Power button** until the LED lights illuminate.
- To power off: Press and hold the **Power button** until the LED lights turn off.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing Bluetooth LED).
2. On your mobile device, navigate to the Bluetooth settings.
3. Select "Altec Shockwave" from the list of available devices.
4. Once paired, the Bluetooth LED will glow solid, and you will hear an audible confirmation.

True Wireless Pairing (TWS)

You can pair two Altec Lansing Shockwave IMT7000RB speakers together for a stereo sound experience.



Image: Two Shockwave speakers wirelessly connected, demonstrating the True Wireless Pairing feature for enhanced audio.

1. Ensure both Shockwave speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be your primary speaker), press and hold the **True Wireless Pairing button** (often indicated by two speaker icons).
3. The primary speaker will search for the secondary speaker. Once connected, you will hear an audible confirmation, and the LED indicators on both speakers will change.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described above. Audio will play through both speakers in stereo.

OPERATING THE SPEAKER

Basic Controls

- **Power Button:** Press and hold to power on/off. Short press to cycle through modes (Bluetooth, AUX, Radio).
- **Volume Up/Next Track:** Short press for volume up. Long press for next track.
- **Volume Down/Previous Track:** Short press for volume down. Long press for previous track.
- **Play/Pause:** Press to play or pause audio.
- **Bass Boost:** Press the **BASS button** to activate or deactivate bass boost.

LED Light Control

The Shockwave speaker features a HyperEdge LED light show with multiple modes.



Image: The Shockwave speaker showcasing its dynamic multi-light and strobe modes.

- Press the **LED Light Control button** (often indicated by a star or light icon) to cycle through different light modes.
- Press and hold the **LED Light Control button** to turn the lights off or on.

AUX Mode

To play audio from a device without Bluetooth, use the AUX input.

1. Connect a 3.5mm audio cable (not included) from your audio device's headphone jack to the speaker's AUX input port.
2. Press the **Mode button** (or Power button if it cycles modes) until the speaker enters AUX mode.
3. Control playback and volume from your connected audio device.

Radio Function

The speaker includes an FM radio tuner.

1. Press the **Mode button** until the speaker enters Radio mode.
2. Use the **Play/Pause button** to auto-scan and save available FM stations.
3. Use the **Next/Previous Track buttons** to navigate through saved stations.

IP67 Waterproof and Dustproof

The Shockwave speaker is rated IP67, meaning it is protected against dust ingress and can withstand immersion in water up to 1 meter for 30 minutes. Ensure all port covers are securely closed before exposing the speaker to water or dust.

Built-in Smartphone Charger

You can use the speaker's built-in USB port to charge your smartphone or other USB-powered devices.

- Connect your device's USB charging cable to the USB output port on the speaker.
- Charging will begin automatically. Note that using this feature will consume the speaker's battery life.

MAINTENANCE

Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Ensure all ports are dry before charging.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its lifespan.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode. Turn off and on your device's Bluetooth. Forget the speaker from your device's Bluetooth list and try pairing again. Ensure no other devices are connected to the speaker.
No sound.	Check speaker and device volume levels. Ensure the correct input mode (Bluetooth, AUX) is selected. Check cable connections for AUX mode.

Problem	Solution
Poor radio reception.	Move the speaker to a different location. Extend any external antenna if available.
LED lights not working.	Press the LED Light Control button to cycle through modes or turn them on.

SPECIFICATIONS

- **Model Number:** IMT7000RB
- **Model Name:** Shockwave
- **Brand:** Altec Lansing
- **Speaker Type:** Portable Bluetooth Speaker
- **Speaker Maximum Output Power:** 60 watts
- **Connectivity Technology:** Bluetooth, RCA (AUX)
- **Audio Output Mode:** Stereo
- **Waterproof Rating:** IP67 (Waterproof and Dustproof)
- **Battery Average Life:** Up to 6 hours
- **Power Source:** Battery Powered
- **Control Method:** Touch
- **Item Dimensions (D x W x H):** 16.9" x 9.8" x 9.1"
- **Compatible Devices:** Laptop, MP3 Player, Smartphone, Tablet, Television
- **Additional Features:** Multi Room Audio (True Wireless Pairing), Wireless, HyperEdge LED Light Show, Built-in Smartphone Charger

WARRANTY INFORMATION

This Altec Lansing Shockwave IMT7000RB speaker comes with a 90-day limited warranty. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, troubleshooting, or warranty inquiries, please visit the official Altec Lansing website or contact their customer support. Refer to the packaging or official website for the most current contact information.

© 2023 Altec Lansing. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question