

[Manuals.plus](#) /

> [ODK](#) /

> ODK 47-Inch Computer Desk with 3 Fabric Drawers User Manual

ODK B01XS011547SA

ODK 47-Inch Computer Desk with 3 Fabric Drawers User Manual

Model: B01XS011547SA

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ODK 47-Inch Computer Desk. Please read this manual thoroughly before beginning assembly or use to ensure proper setup and safe operation. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Tighten all screws and bolts securely, but do not overtighten. Periodically check and retighten fasteners as needed.
- Do not stand or sit on the desk.
- Distribute weight evenly on the desktop and shelves. The fabric drawers have a weight capacity of approximately 8 lbs each.
- Keep small parts away from children during assembly.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer service.

- A. Desktop Panel
- B. Monitor Stand Panel
- C. Left Leg Frame
- D. Right Leg Frame
- E. Crossbars (x2)
- F. Fabric Drawers (x3)
- G. Accessory Kit (Screws, Allen Wrench, Hook, etc.)



Figure 1: Overview of the ODK 47-Inch Computer Desk. This image displays the fully assembled desk with a monitor stand, three fabric drawers, and a side hook, illustrating its functional design for a home office setup.

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your ODK computer desk. It is recommended to have two people for easier assembly, though one person can complete it.

1. Step 1: Assemble the Leg Frames

Attach the crossbars (E) to the left (C) and right (D) leg frames using the provided screws. Ensure the frames are oriented correctly as shown in the diagram.

2. Step 2: Attach Desktop Panel

Carefully place the desktop panel (A) upside down on a soft surface. Align the assembled leg frames with the pre-drilled holes on the underside of the desktop. Secure them with the appropriate screws.

3. Step 3: Install Monitor Stand

Attach the monitor stand panel (B) to the designated slots or pre-drilled holes on the desktop. The monitor stand is adjustable; ensure it is securely fastened at your desired height.

4. Step 4: Insert Fabric Drawers

Unfold the fabric drawers (F) and insert the stiff bottom inserts. Slide the assembled drawers into their respective compartments under the desktop.

5. Step 5: Attach Versatile Hook

Locate the pre-drilled hole on the side of the desk frame. Screw in the versatile hook (from G) securely.

6. Step 6: Final Check

Once assembled, gently turn the desk upright. Check that all screws are tight and the desk is stable.

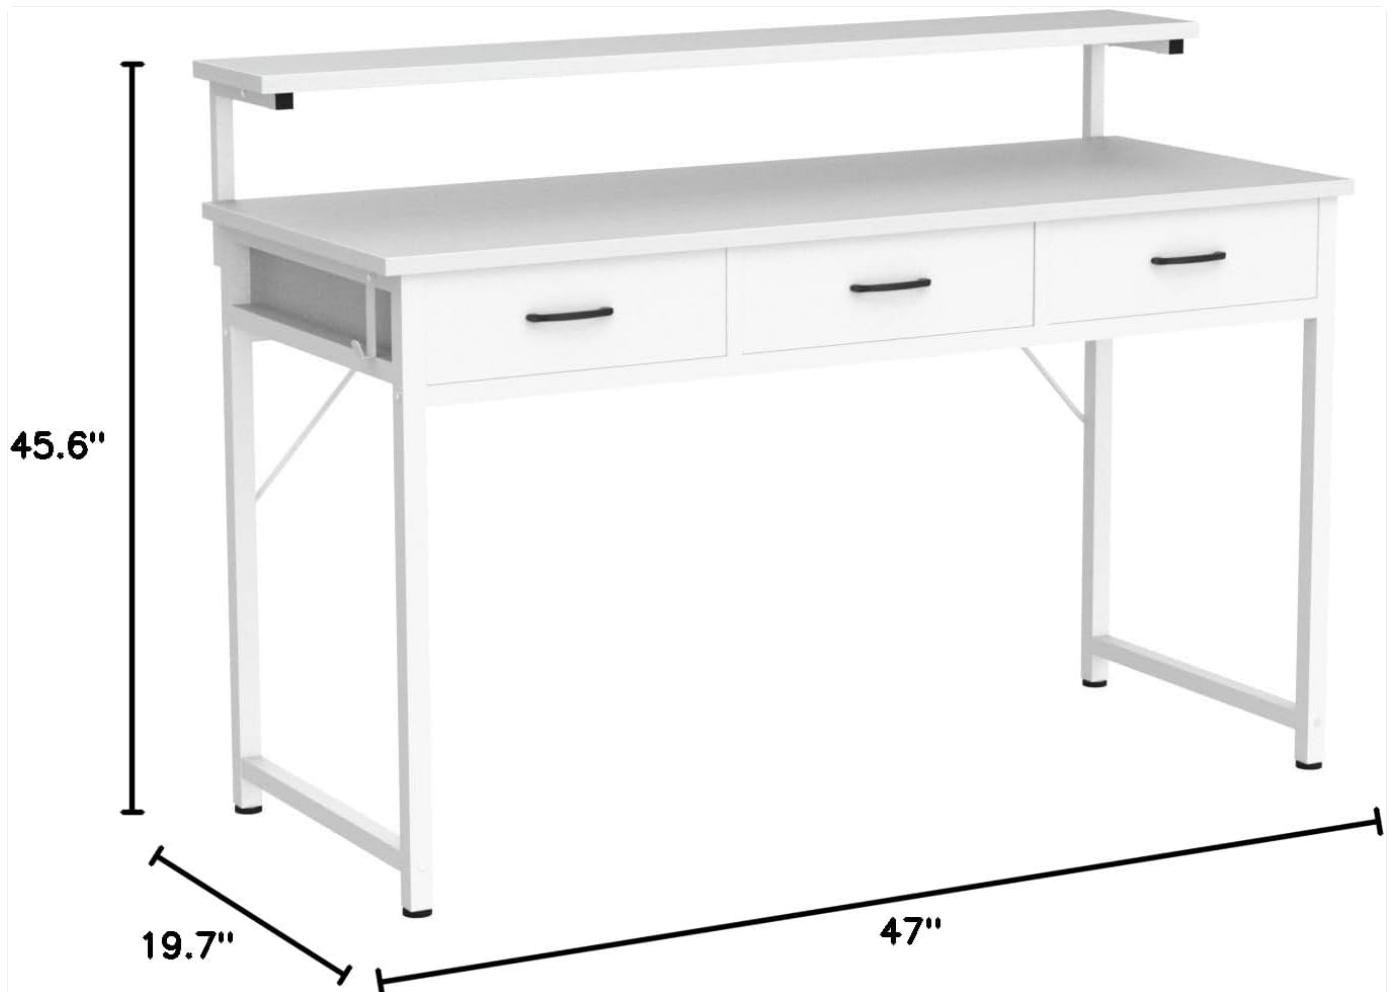


Figure 2: Dimensional view of the ODK 47-Inch Computer Desk. This diagram illustrates the overall dimensions of the desk, including its width (47 inches), depth (19.7 inches), and total height (45.6 inches), which includes the monitor stand.

5. OPERATING AND USAGE

5.1 Desktop Surface

The main desktop provides a spacious work area for your computer, keyboard, mouse, and other essentials. Avoid placing excessively hot or cold items directly on the surface without protection.

5.2 Fabric Drawers

The three pull-out fabric drawers are designed for organized storage of office supplies, documents, or personal items.

Each drawer can support up to 8 lbs. To open, gently pull the handle. To close, push firmly until fully recessed.

5.3 Monitor Stand

The elevated monitor stand helps to position your screen at an ergonomic height, reducing neck and eye strain. It also creates additional storage space underneath for keyboards, notebooks, or other accessories.

5.4 Versatile Hook

The side hook is ideal for hanging headphones, bags, or other small items, keeping your workspace tidy and accessible.



Figure 3: The ODK 47-Inch Computer Desk positioned in a room, showcasing its minimalist design and how it integrates into a living space. A laptop is placed on the desktop, and the monitor stand is visible.

6. MAINTENANCE

6.1 Cleaning

- Wipe the desk surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- For fabric drawers, spot clean with a mild detergent and water. Allow to air dry completely. Do not machine wash.

6.2 Care

- Avoid direct sunlight exposure for prolonged periods to prevent fading or warping.
- Keep the desk away from excessive moisture or humidity.
- Periodically check and tighten all assembly hardware to ensure stability.

7. TROUBLESHOOTING

- **Desk is wobbly:** Ensure all screws are securely tightened. Check that the desk is on a level surface. Adjust foot pads if available.
- **Drawers do not slide smoothly:** Check for any obstructions in the drawer compartments. Ensure the fabric drawers are properly unfolded and the bottom inserts are correctly placed.
- **Missing parts:** Refer to the "Package Contents" section. If parts are missing, contact ODK customer service with your model number and a description of the missing part.

8. SPECIFICATIONS

Brand	ODK
Model Number	B01XS011547SA
Product Dimensions	19.7"D x 47"W x 45.6"H
Color	Pure White
Material	Wood (Desktop), Metal (Frame), Fabric (Drawers)
Number of Drawers	3
Drawer Weight Capacity	Approx. 8 lbs per drawer
Assembly Required	Yes

9. WARRANTY AND CUSTOMER SUPPORT

This ODK product comes with a **Limited Warranty**. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact ODK customer service.

If you encounter any issues, require assistance with assembly, or have questions about your product, please contact ODK customer support. Our team is available to help resolve problems within 24 hours.

For further information, you may visit the [ODK Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BLBFS9VR>

More documents and user manuals: <https://manuals.plus/>