

[Manuals.plus](#) /

› [Umelome](#) /

› Umelome 6kg Spin Dryer Instruction Manual

Umelome Black

Umelome 6kg Spin Dryer Instruction Manual

Model: Black

1. INTRODUCTION

Thank you for choosing the Umelome 6kg Spin Dryer. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before operation and keep it for future reference.



Image 1.1: The Umelome 6kg Spin Dryer, showcasing its compact design, black finish, and included water collection bucket and drain filter.

2. SAFETY INFORMATION

Your safety is paramount. Please observe all safety warnings and instructions to prevent injury or damage.

General Safety Precautions:

- Always ensure the appliance is placed on a stable, level surface.
- Do not operate the spin dryer if it is violently shaking or accidentally overturned. The unit features an automatic shut-off in such cases.
- Keep children away from the appliance during operation. The unit includes a child safety lock.
- Do not open the lid until the drum has completely stopped spinning. The safety switch prevents opening while the drum is in motion.
- Ensure the power cord is not damaged and is properly connected to a grounded outlet.
- Do not overload the spin dryer beyond its 6kg capacity.

Safety Features:

- **Safety Switch and Child Safety:** Prevents operation or lid opening under unsafe conditions.
- **Anti-slip Feet:** Large anti-slip feet enhance stability during operation.
- **5-Minute Timer Function:** The spin dryer automatically stops after 5 minutes to prevent unsupervised prolonged operation and potential safety risks.
- **Automatic Shut-off:** The unit will automatically stop if it shakes violently or is accidentally knocked over.

3. PRODUCT OVERVIEW

The Umelome 6kg Spin Dryer is designed for efficient water extraction from laundry, reducing drying time and energy consumption.

Key Features:

- **Large Capacity:** Features a 6kg stainless steel drum, capable of spinning approximately 15 T-shirts, 7 pairs of jeans, 4 jackets, or 2 bedding sets at once.
- **High Spin Speed:** An ultra-high spin speed of 2800 RPM generates centrifugal force to remove excess water, achieving up to a 95% drainage rate in 2-3 minutes.
- **Durable Construction:** The inner drum and outer shell are made from high-quality stainless steel, offering corrosion resistance, high strength, and enhanced stability compared to plastic alternatives.
- **Compact and Portable:** With dimensions of 35 cm diameter and 64.7 cm height, and weighing 11 kg, it is ideal for apartments, dorms, RVs, boats, and travel.

6KG STAINLESS STEEL DRUM

Mini Body But Large Capacity



T-Shirt x 15



Jacket x 4



Jeans x 7



Bedding-Set x 2



STEEL SHELL

Safer And More Stable Than
Other Plastic Material

Image 3.1: Illustration of the 6kg stainless steel drum, highlighting its capacity for various clothing items.

STAINLESS STEEL SHELL

corrosion resistance

good sealing

high strength

high temperature resistance

beautiful durability

VS

NORMAL PLASTIC MATERIAL

low strength
easy to break



Image 3.2: Comparison showing the robust stainless steel shell of the Umelome spin dryer against a typical plastic model.

3200 RPM POWERFUL SPIN DRY

Time-Saving

Clothes drying time reduced by 1/2

Energy-Saving

Help you save more energy and electricity bills

Effort-Saving

Powerful spin dry can dry more clothes one time



Image 3.3: Diagram illustrating the powerful 2800 RPM motor and its effect on water extraction.

4. SETUP

Before using your Umelome Spin Dryer, follow these steps for proper installation and preparation.

Initial Setup:

1. **Unpack the Appliance:** Carefully remove the spin dryer from its packaging.
2. **Remove Protective Lock:** Before first use, locate and remove the protective lock from the bottom of the machine. Failure to do so will prevent the machine from operating correctly.

1



2



3



ACTIONS BEFOR USE

Take out the protective lock before use. Or the machine cannot work properly.



Image 4.1: Visual guide demonstrating the three steps to remove the protective lock from the base of the spin dryer before initial use.

3. **Position the Dryer:** Place the spin dryer on a firm, level surface. Ensure there is enough space around it for ventilation and operation.
4. **Connect Power:** Plug the power cord into a suitable grounded electrical outlet (240 Volts).
5. **Prepare Drainage:** Position the included water collection bucket or direct the drain hose into a sink or drain.

5. OPERATING INSTRUCTIONS

Follow these steps to effectively use your Umelome Spin Dryer.

1. **Load Laundry:** Open the lid and place your wet laundry evenly inside the stainless steel drum. Do not exceed the 6kg capacity.
2. **Close Lid:** Securely close the lid. The machine will not operate if the lid is not properly closed due to the safety switch.
3. **Set Timer:** Turn the timer knob to the desired spin duration. The maximum run time is 5 minutes. For most

loads, 2-3 minutes is sufficient to achieve up to 95% water removal.

- 4. **Start Operation:** The spin dryer will begin operation once the timer is set and the lid is closed.
- 5. **Monitor Drainage:** Water will be extracted and collected in the drainage bucket or directed to your drain.
- 6. **Completion:** The machine will automatically stop when the timer runs out. Wait for the drum to come to a complete stop before opening the lid.
- 7. **Unload Laundry:** Carefully remove the spun laundry. It will be significantly drier and ready for air drying or a shorter tumble dry cycle.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your spin dryer.

Cleaning:

- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Interior Drum:** Periodically wipe the stainless steel drum with a damp cloth. For stubborn residues, use a mild detergent and rinse thoroughly.
- **Drain Filter/Bucket:** Empty and clean the water collection bucket and drain filter after each use to prevent odor and blockages.

Storage:

- Ensure the spin dryer is clean and dry before storing.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your spin dryer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Dryer does not start	1. Power cord not plugged in. 2. Lid not closed properly. 3. Protective lock not removed (first use). 4. Timer not set.	1. Ensure power cord is securely plugged in. 2. Close the lid firmly until it clicks. 3. Remove the protective lock from the bottom of the unit. 4. Turn the timer knob to the desired spin time.
Excessive vibration or noise	1. Uneven load distribution. 2. Dryer not on a level surface. 3. Protective lock not removed.	1. Redistribute laundry evenly in the drum. 2. Place the dryer on a stable, level surface. 3. Ensure the protective lock has been removed.
Poor water extraction	1. Overloaded drum. 2. Insufficient spin time.	1. Reduce the amount of laundry. 2. Increase spin time (up to 5 minutes).

Problem	Possible Cause	Solution
Lid cannot be opened	Drum is still spinning.	Wait for the drum to come to a complete stop. The safety mechanism prevents opening during rotation.

8. SPECIFICATIONS

Technical details for the Umelome 6kg Spin Dryer.

Specification	Detail
Brand	Umelome
Model	Black
Dimensions (L x W x H)	35 x 35 x 64.7 cm
Weight	11 kg
Capacity	6 Kilograms
Noise Level	55 dB
Type	Vertical loading, Top loading
Color	Black
Voltage	240 Volts
Power	300 Watts
Certification	CE
Material	Stainless steel
ASIN	B0BLBTMX16



Image 8.1: Detailed dimensions of the Umelome Spin Dryer.

9. WARRANTY AND SUPPORT

Umelome provides a quality guarantee for your peace of mind.

- **Warranty:** This product comes with a 1-year warranty.
- **Customer Support:** If you encounter any issues or have questions, please contact the manufacturer directly at service@umelome.vip.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question