



[Manuals.plus](#) /

> [Graflsoa](#) /

> Graflsoa PG-9078 Bluetooth Wireless Gamepad User Manual

Graflsoa PG-9078

Graflsoa PG-9078 Bluetooth Wireless Gamepad User Manual

Model: PG-9078

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Graflsoa PG-9078 Bluetooth Wireless Gamepad. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your gaming experience. This gamepad is compatible with iOS, Android, Tablet, Phone, PC, Smart TV, and Set Top Box devices.

2. SAFETY INFORMATION

- Do not expose the gamepad to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the gamepad to strong impacts.
- Do not attempt to disassemble or modify the gamepad. This will void the warranty.
- Keep the gamepad away from water and other liquids.
- Use only the provided charging cable or a certified equivalent.
- Store the gamepad in a clean, dry place when not in use.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Graflsoa PG-9078 Wireless Gamepad
- USB Charging Cable
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and features of your PG-9078 gamepad.



Figure 4.1: Graflosoa PG-9078 Wireless Gamepad with a smartphone mounted in the integrated holder.

The Graflosoa PG-9078 is a versatile Bluetooth gamepad designed for various gaming platforms. It features a comfortable ergonomic design, precise controls, and an integrated phone holder.

4.1 Key Features

- **Integrated Phone Holder:** Supports smartphones from 4 to 5.5 inches, with an adjustable angle for optimal viewing.
- **Hall Effect Sensor Switches:** Provides durable and responsive trigger input.
- **High Accuracy Joysticks:** 360-degree precision joysticks with anti-slip texture to prevent operational errors.
- **Responsive Buttons:** Fast response time for all face buttons and shoulder buttons.
- **Analog L2/R2 Triggers:** Offers precise control for racing and other games requiring nuanced input.
- **Bluetooth Connectivity:** Stable wireless connection with a transmission distance of up to 8 meters.

Standard package with phone holder

Support 4–5.5 inch cellphone, angle could be adjusted freely, playing at any time anywhere.



Figure 4.2: The adjustable phone holder, designed to securely hold smartphones between 4 and 5.5 inches. The angle can be freely adjusted for user comfort.

High accuracy joystick, sensibility without dead zone

360 degree high sensibility & accuracy joystick, with anti-slip texture, avoid being killed due to operation slip.



Figure 4.3: The high-accuracy joystick, featuring 360-degree movement and an anti-slip texture for enhanced control.

Top speed & high sensibility bottoms

Top bottom respond speed, no matter click or combination key click, gamepad can respond quickly.



Figure 4.4: The highly sensitive and responsive face buttons and shoulder buttons, designed for quick input.

Analog Function, more accurate controlled

L2/R2 Analog function, focus on operating details, make games controlled exactly.

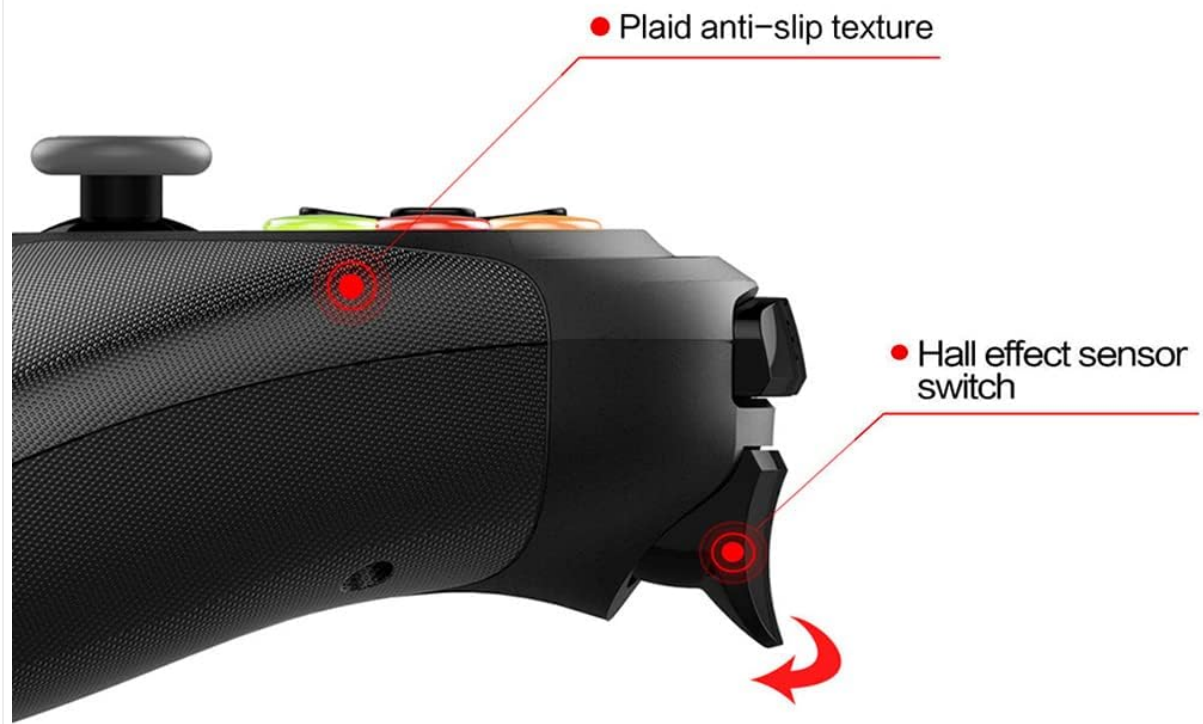


Figure 4.5: The L2/R2 analog triggers, providing accurate and detailed control for various in-game actions.

BT

BT transmission
distance up to 8M.



Figure 4.6: The gamepad utilizes Bluetooth technology for wireless connectivity, offering a stable connection up to 8 meters.

5. SETUP INSTRUCTIONS

5.1 Charging the Gamepad

1. Connect the small end of the USB charging cable to the charging port on the gamepad.
2. Connect the larger end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light on the gamepad will illuminate during charging and turn off or change color when fully charged.
4. A full charge typically takes approximately 2-3 hours.

5.2 Attaching the Phone Holder

1. Locate the phone holder attachment point on the top of the gamepad.

2. Carefully slide the phone holder into the designated slot until it clicks securely into place.
3. Adjust the angle of the holder to your preferred viewing position.
4. Gently place your smartphone (4-5.5 inches) into the holder, ensuring it is securely gripped.

5.3 Bluetooth Pairing

The PG-9078 supports multiple connection modes. Select the appropriate mode for your device.

5.3.1 Android Standard Mode

1. Ensure the gamepad is powered off.
2. Press and hold the **"X" button + HOME button** simultaneously until the indicator light flashes rapidly.
3. On your Android device, enable Bluetooth and search for available devices.
4. Select "PG-9078" from the list to pair. The indicator light will become solid once connected.

5.3.2 iOS Standard Mode

1. Ensure the gamepad is powered off.
2. Press and hold the **"Y" button + HOME button** simultaneously until the indicator light flashes rapidly.
3. On your iOS device, enable Bluetooth and search for available devices.
4. Select "PG-9078" from the list to pair. The indicator light will become solid once connected.

5.3.3 PC/Smart TV Mode (Direct Play)

1. Ensure the gamepad is powered off.
2. Press and hold the **"A" button + HOME button** simultaneously until the indicator light flashes rapidly.
3. On your PC or Smart TV, enable Bluetooth and search for available devices.
4. Select "PG-9078" from the list to pair. The indicator light will become solid once connected.

Note: After successful pairing, the gamepad will automatically connect to the last paired device when powered on in the same mode.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Power On:** Press the **HOME button** for 1 second. The indicator light will flash, then connect to the last paired device.
- **Power Off:** Press and hold the **HOME button** for 5 seconds until the indicator light turns off. The gamepad will also automatically power off after 5 minutes of inactivity.

6.2 Gamepad Modes

The PG-9078 supports different modes for optimal compatibility:

- **Android Standard Mode (X + HOME):** For most Android games and emulators.
- **iOS Standard Mode (Y + HOME):** For iOS games that support MFi controllers or specific gamepad protocols.
- **PC/Smart TV Mode (A + HOME):** For direct play on Windows PCs (requires Bluetooth adapter) and compatible Smart TVs.

Note: Game compatibility varies by platform and game title. Some games may require specific mapping or may not support external controllers.

6.3 Using the Controls

The gamepad features standard controls:

- **Directional Pad (D-Pad):** For precise directional input.
- **Left/Right Analog Sticks:** For 360-degree movement and camera control.
- **Face Buttons (A, B, X, Y):** For in-game actions.
- **Shoulder Buttons (L1, R1):** For quick actions.
- **Analog Triggers (L2, R2):** For pressure-sensitive input, ideal for acceleration/braking in racing games.
- **SELECT/START Buttons:** For menu navigation and game functions.
- **HOME Button:** For power on/off and mode switching.

Hall effect sensor switch

Playing games is cool, and require comfortable hand feel. Ergonomic grips match up with exquisite anti-slip texture provide you comfortable hand feel.



Figure 6.1: Proper grip and button access on the Grafisoa PG-9078 gamepad, highlighting its ergonomic design and Hall effect sensor switches.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the gamepad. Do not use harsh chemicals or

abrasive cleaners.

- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the gamepad frequently. Charge it regularly, even if not in constant use. If storing for an extended period, charge it to about 50% every few months.

8. TROUBLESHOOTING

8.1 Gamepad Does Not Power On

- Ensure the gamepad is charged. Connect it to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to power on again.
- Press and hold the HOME button for 1 second to power on.

8.2 Unable to Pair via Bluetooth

- Ensure the gamepad is in the correct pairing mode for your device (Android: X+HOME, iOS: Y+HOME, PC/Smart TV: A+HOME).
- Make sure Bluetooth is enabled on your device and it is discoverable.
- Move the gamepad closer to your device (within 8 meters).
- Forget/remove "PG-9078" from your device's Bluetooth list and attempt to pair again.
- Restart both your device and the gamepad.

8.3 Buttons/Joysticks Not Responding

- Verify that the gamepad is successfully connected to your device.
- Check game settings to ensure controller support is enabled and controls are mapped correctly.
- Some games may not fully support external gamepads.
- Try restarting the gamepad and your device.

9. SPECIFICATIONS

Model	PG-9078
Connectivity	Bluetooth Wireless
Bluetooth Range	Up to 8 meters
Compatibility	iOS, Android, Tablet, Phone, PC, Smart TV, Set Top Box
Phone Holder Support	4 - 5.5 inch smartphones
Special Features	Hall Effect Sensor Switches, 360-degree High Accuracy Joysticks, Analog L2/R2 Triggers
Power Source	Rechargeable Battery (Internal)

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

