

Wundermix SW11698

Wundermix WunderSlicer Vegetable Cutter User Manual

MODEL: SW11698

1. Introduction

Thank you for choosing the Wundermix WunderSlicer Vegetable Cutter. This accessory is designed to enhance your Monsieur Cuisine Connect, Trend, or Smart food processor by providing efficient slicing and grating capabilities for various fruits and vegetables. Manufactured in Germany, the WunderSlicer is built with quality and user convenience in mind.

This manual provides essential information for the safe and effective use, assembly, operation, and maintenance of your WunderSlicer. Please read it thoroughly before first use and keep it for future reference.

2. Important Safety Instructions

- Always handle the cutting discs with extreme care. Blades are sharp and can cause injury.
- Ensure the WunderSlicer is correctly assembled and securely attached to your Monsieur Cuisine food processor before operation.
- Do not operate the appliance with damaged parts. Inspect all components before each use.
- Keep hands and utensils away from the cutting discs during operation. Always use the food pusher provided.
- Unplug the Monsieur Cuisine food processor from the power outlet before assembling, disassembling, or cleaning the WunderSlicer.
- This appliance is not intended for use by children. Keep the WunderSlicer and its components out of reach of children.
- Only use the WunderSlicer with compatible Monsieur Cuisine models (Connect, Trend, Smart).
- Do not overload the appliance. Process food in appropriate quantities.
- Avoid processing extremely hard foods that may damage the blades or motor.

3. Product Components

The Wundermix WunderSlicer consists of several key components designed for easy assembly and effective food processing:

- Main housing unit (attaches to Monsieur Cuisine)
- Transparent collection container
- Lid with feeding chute
- Food pusher
- Reversible cutting discs (for slicing and grating)

WunderSlicer®



 wundermix®



Figure 1: WunderSlicer components and approximate dimensions (22 cm width, 24.5 cm height).



Figure 2: Detailed view of the transparent lid and food pusher.

4. Assembly and Setup

Follow these steps to correctly assemble your WunderSlicer and attach it to your Monsieur Cuisine food processor:

1. Ensure your Monsieur Cuisine food processor is unplugged and turned off.
2. Place the main housing unit of the WunderSlicer onto the motor unit of your Monsieur Cuisine, aligning the connection points. Twist gently until it locks securely into place.
3. Insert the desired reversible cutting disc into the collection container. Ensure it is seated correctly on the central spindle. The discs are reversible, offering different thickness options for slicing or grating.
4. Place the transparent collection container with the cutting disc onto the main housing unit.
5. Secure the lid onto the collection container, ensuring it clicks into place.
6. Insert the food pusher into the feeding chute of the lid.



Figure 3: Fully assembled WunderSlicer.



Figure 4: WunderSlicer correctly attached to a Monsieur Cuisine food processor.

5. Operating Instructions

The WunderSlicer is designed for automatic operation with your Monsieur Cuisine food processor. It is compatible with Monsieur Cuisine Connect, Trend, and Smart models.

1. Ensure the WunderSlicer is correctly assembled and attached to your Monsieur Cuisine as described in Section 4.
2. Plug in and turn on your Monsieur Cuisine food processor.
3. Select the appropriate setting on your Monsieur Cuisine. For optimal results, it is recommended to use the **anti-clockwise rotation** and a **speed setting of 2**.
4. Prepare your fruits or vegetables by washing them and cutting them into pieces that fit comfortably into the feeding chute.
5. Carefully place the prepared food into the feeding chute.
6. Use the food pusher to gently guide the food towards the rotating cutting disc. **Never use your fingers or other utensils to push food.**

7. Continue feeding until all food is processed or the collection container is full.
8. Once finished, turn off and unplug your Monsieur Cuisine food processor before disassembling the WunderSlicer.

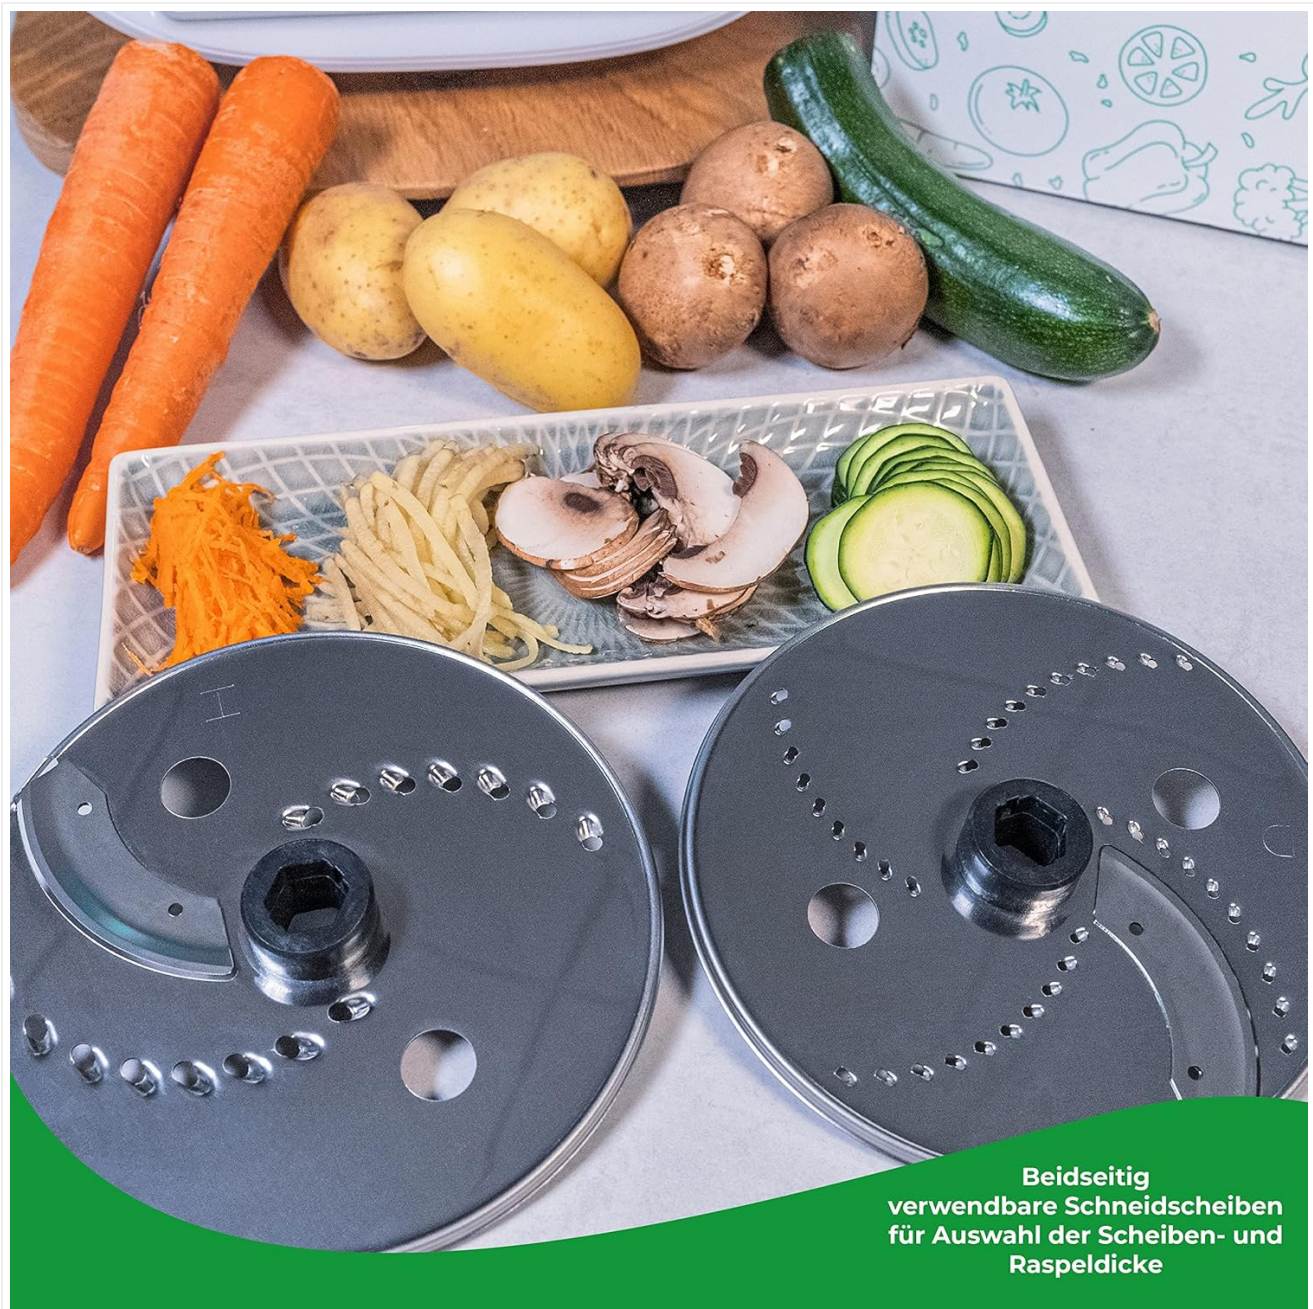


Figure 5: Reversible cutting discs and examples of processed vegetables.

6. Care and Maintenance

Proper cleaning and maintenance will ensure the longevity and optimal performance of your WunderSlicer.

- **Disassembly:** After use, turn off and unplug the Monsieur Cuisine. Carefully disassemble the WunderSlicer by reversing the assembly steps.
- **Cleaning:** All components of the WunderSlicer are dishwasher safe. For manual cleaning, wash all parts with warm, soapy water immediately after use to prevent food residue from drying. Use a brush for hard-to-reach areas, especially around the blades. Rinse thoroughly.
- **Drying:** Allow all parts to air dry completely before reassembling or storing.
- **Storage:** Store the WunderSlicer and its components in a clean, dry place, away from direct sunlight and extreme temperatures. Store cutting discs safely to prevent accidental cuts.

- **Material:** The WunderSlicer is made from BPA-free, food-safe plastic and stainless steel blades.

7. Troubleshooting

If you encounter any issues with your WunderSlicer, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Food is not slicing/grating effectively.	Incorrect speed setting; dull blade; food too soft/hard.	Ensure Monsieur Cuisine is set to anti-clockwise rotation and speed 2. Check blade for damage. Adjust food type or pre-chill soft foods.
WunderSlicer is not attaching securely.	Misalignment; obstruction.	Ensure proper alignment with the Monsieur Cuisine motor unit. Check for any food debris or obstructions.
Lid is difficult to close.	Misalignment of components.	Ensure the collection container and cutting disc are correctly seated before attempting to close the lid.
Unusual noise during operation.	Improper assembly; foreign object; damaged part.	Turn off immediately. Disassemble and check all parts for correct placement and any foreign objects. Inspect for damage.

8. Product Specifications

Feature	Detail
Model Number	SW11698
Brand	Wundermix
Compatibility	Monsieur Cuisine Connect, Trend, Smart
Material	Plastic (BPA-free, food-safe), Stainless Steel (blades)
Dimensions (L x W x H)	9.65 x 8.66 x 7.87 inches (approx. 24.5 x 22 x 20 cm)
Item Weight	1.98 Pounds (900 Grams)
Special Features	BPA Free, Food safe, Machine washable, Made in Germany
Operation Mode	Automatic (via Monsieur Cuisine)

9. Warranty and Support

For warranty information, technical support, or any questions regarding your Wundermix WunderSlicer, please contact Wundermix customer service. Refer to the official Wundermix website or your purchase documentation for specific contact details and warranty terms.

You can typically find support information on the manufacturer's website: www.wundermix.de

