

[Manuals.plus](#) /

› [Cubiker](#) /

› Cubiker Standing Desk 55x24 Inch with Drawer User Manual

Cubiker B0BLC9QFK1

Cubiker Standing Desk 55x24 Inch with Drawer User Manual

Model: B0BLC9QFK1

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Cubiker Electric Standing Desk. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.



Image: The Cubiker Standing Desk in a typical home office setup, showcasing its design and functionality.

SETUP AND ASSEMBLY

The Cubiker Standing Desk is designed for straightforward assembly. It is recommended that two people assemble the desk to ensure safety and ease. All necessary tools are provided, and screw hole locations are embedded for convenience.

Assembly Steps:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the included parts list are present and undamaged.
- 2. Assemble Desk Frame:** Follow the detailed instructions in the separate assembly guide to connect the leg columns to the feet and crossbars.
- 3. Attach Desktop:** Secure the desktop panels to the assembled frame using the provided screws. Ensure proper alignment.
- 4. Install Control Panel and Motor:** Mount the electric motor and control panel to the underside of the desktop as indicated in the assembly guide. Connect all cables securely.
- 5. Install Drawer:** Attach the storage drawer to the designated location under the desktop.

6. **Attach Accessories:** Install the headset hooks and choose between the adjustable feet or the detachable swivel casters for the desk base.

7. **Cable Management:** Utilize the cable management cage to organize power strips and cables for a tidy workspace.



Image: A diagram illustrating the key dimensions of the standing desk, including its 55-inch width, 24-inch depth, and the 15.7-inch width of the integrated drawer.

OPERATING INSTRUCTIONS

Your Cubiker Standing Desk features an electric lift system for smooth height adjustments and convenient memory presets.

Height Adjustment:

- Use the **Up (▲)** and **Down (▼)** buttons on the control panel to adjust the desk height.
- The desk can be adjusted freely between 27.16 inches and 46.06 inches.
- Release the button to stop the desk at your desired height.

Memory Presets:

The control panel allows you to save up to three preferred height settings for quick adjustments.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the **"S"** button (Set) once. The display will flash.
3. Immediately press one of the numbered preset buttons (**"1"**, **"2"**, or **"3"**) before the display stops flashing. The height is now saved to that preset.
4. To recall a saved height, simply press the corresponding numbered preset button. The desk will automatically move to the saved position.

Child-Friendly Lock / Screen Lock:

To prevent accidental adjustments, press and hold the **"S"** button for 3 seconds to activate or deactivate the child-friendly lock/screen lock function.

Automatic Anti-Collision Technology:

The desk is equipped with an anti-collision system. If the desk encounters an obstruction during movement, it will automatically stop and reverse slightly to prevent damage.



Odorless, durable,
exquisite yet space saving



Weight Capacity

Image: A detailed view of the multi-function intelligent keypad, highlighting the up/down buttons, set button, and three memory preset buttons for easy height control.

Storage Drawer:

The integrated storage drawer provides 15.7 inches of width and 3.15 inches of height for organizing small office supplies, keeping your desktop clear.




Image: The desk's storage drawer, open and containing various small items, demonstrating its practical use for organization.

Headset Hooks and Casters:

- The desk includes two detachable headset hooks that can be placed on the underside of the desktop for convenient storage of headphones or bags.
- Detachable swivel casters are provided, allowing for easy movement and relocation of the desk. Alternatively, adjustable feet can be installed for a stationary setup.

Child-Friendly Design

Round Corner and Collision Detection

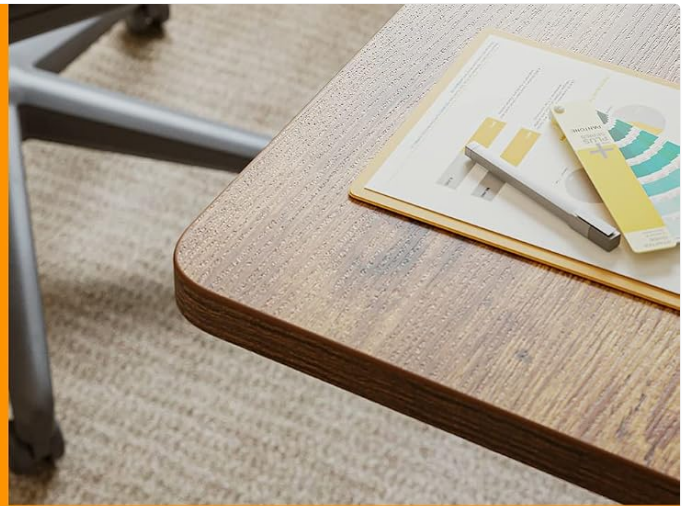

Hooks

Hook your bag, headphones, as well as standing desk balance board.

Detachable Swivel Casters

Swivel casters make housemoving and relocating the standing desk easy



Image: Details of the desk's features, including a headset hook for accessories and a swivel caster for mobility, highlighting the child-friendly design with round corners.

MAINTENANCE

Regular maintenance ensures the optimal performance and appearance of your standing desk.

Cleaning:

- Wipe the desktop and frame with a soft, damp cloth.
- Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- For spills, clean immediately to prevent staining.

General Care:

- Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- Do not overload the desk beyond its maximum weight capacity of 176 lbs.

- Ensure cables are not pinched or tangled during height adjustments.
- Keep the area around the desk clear of obstructions to allow for smooth movement.

TROUBLESHOOTING

If you encounter issues with your standing desk, refer to the following common troubleshooting steps.

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	No power, loose cable connection, motor error.	Check power cord connection to outlet and desk. Ensure all motor cables are securely plugged in. Try unplugging the desk for 30 seconds and plugging it back in to reset.
Desk moves unevenly or makes unusual noises.	Uneven weight distribution, obstruction, loose components.	Ensure weight on the desktop is evenly distributed and within the weight limit. Check for any obstructions under or around the desk. Verify all assembly screws are tight.
Anti-collision feature activates frequently.	Obstruction in the path of movement.	Clear any objects from the desk's path, both above and below the desktop.
Control panel displays an error code.	Specific system malfunction.	Refer to the detailed assembly guide for specific error code meanings and solutions. If the issue persists, contact customer support.

SPECIFICATIONS

Key technical specifications for the Cubiker Standing Desk.

Feature	Detail
Brand	Cubiker
Model Name	Cubiker Standing Desk
Product Dimensions (D x W x H)	24"D x 55"W x 27.16"H
Adjustable Height Range	27.16" to 46.06"
Maximum Weight Recommendation	176 Pounds (80 kg)
Lifting Mechanism	Electric
Lift Speed	1 inch per second
Top Material Type	Alloy Steel
Base Material	Metal
Number of Drawers	1 (Standard Storage Drawer)
Drawer Dimensions	15.7" Wide x 3.15" High

Feature	Detail
Special Features	Adjustable Height, Storage Drawer, Memory Presets, Anti-Collision Technology, Detachable Swivel Casters
Required Assembly	Yes (Recommended 2 people)

WARRANTY INFORMATION

Cubiker provides a comprehensive warranty for your standing desk.

- **Warranty Period:** 5 Years
- **Warranty Type:** Full, standard warranty.
- **Coverage:** This warranty covers non-artificial damage and manufacturing defects.
- **Exclusions:** Damage resulting from improper assembly, misuse, neglect, accidents, alterations, or normal wear and tear is not covered.
- **Claim Process:** For warranty claims, please retain your proof of purchase and contact Cubiker Customer Service.

CUSTOMER SUPPORT

For any questions, concerns, or issues regarding your Cubiker Standing Desk, please contact our customer service team.

- **Contact Method:** Please refer to the contact information provided with your product packaging or visit the official Cubiker website for support options.
- Our team is committed to assisting you with product quality issues or any problems encountered during use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question