

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Yaheetech](#) /

› [Yaheetech Model 592495 Dining Chairs \(Set of 6\) Instruction Manual](#)

## Yaheetech 592495

# Yaheetech Model 592495 Dining Chairs (Set of 6) Instruction Manual

## 1. INTRODUCTION

---

Thank you for choosing Yaheetech Dining Chairs. This manual provides detailed instructions for the proper assembly, safe use, and effective maintenance of your new dining chairs. Please read this manual thoroughly before assembly and retain it for future reference.

## 2. SAFETY INFORMATION

---

- **Do not stand on the chair.** Standing on the chair can lead to instability and potential injury.
- The maximum weight capacity for each dining chair is **136 kg (300 lb)**. Exceeding this limit may compromise the chair's structural integrity and safety.
- Ensure all screws and bolts are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Assemble the chairs on a soft, clean surface to prevent scratching the product or your floor.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact Yaheetech customer support.

- Dining Chair Backrest (6 units)
- Dining Chair Seat (6 units)
- Front Legs (6 pairs)
- Rear Legs (6 pairs)
- Hardware Pack (screws, washers, Allen wrench)
- User Manual (this document)



Figure 3.1: Overview of six Yaheetech dining chairs.

#### 4. ASSEMBLY INSTRUCTIONS

Assembly typically requires one person and approximately 15-20 minutes per chair. An Allen wrench is included in the hardware pack.

1. **Attach Legs to Seat:** Carefully align the chair legs with the pre-drilled holes on the underside of the chair seat. Insert the screws with washers and hand-tighten them initially.
2. **Attach Backrest:** Connect the backrest to the seat frame, ensuring proper alignment. Insert screws and washers, hand-tightening them.
3. **Balance and Tighen:** Once all components are loosely assembled, stand the chair upright on a flat, level surface. Gently apply pressure to the seat to ensure all legs are balanced and touching the floor evenly. Then, securely tighten all screws using the provided Allen wrench. Do not overtighten.

4. **Adjust Foot Pads:** The front legs are equipped with adjustable foot pads. Rotate these pads to fine-tune the chair's stability and prevent wobbling on uneven floors.



Figure 4.1: Visual guide for chair assembly steps.



Figure 4.2: Detailed view of chair components and features.

## 5. USAGE INSTRUCTIONS

These dining chairs are designed for indoor use in dining rooms, kitchens, living rooms, and similar environments. Ensure the chair is placed on a stable, level surface before sitting. The ergonomically curved backrest is designed to provide comfortable support during use.



Figure 5.1: Yaheetech dining chairs in a kitchen environment.

## 6. MAINTENANCE

---

To maintain the appearance and longevity of your Yaheetech dining chairs, follow these care instructions:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the fabric and wood finish.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub, as this can spread the stain.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.
- **Inspection:** Periodically inspect all fasteners and re-tighten if necessary to ensure stability.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your dining chairs, refer to the following common solutions:

- **Chair Wobbles:** Check if all legs are evenly touching the floor. Adjust the foot pads on the front legs by rotating

them until the chair is stable. Ensure all assembly screws are securely tightened.

- **Loose Nailhead Trims:** If any decorative nailhead trims become loose, gently push them back into place. If they continue to loosen, a small amount of fabric adhesive can be used to secure them.
- **Squeaking Noises:** Squeaking can often be resolved by re-tightening all assembly screws. If the issue persists, disassemble and reassemble the chair, ensuring all parts are correctly aligned.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Yaheetech
Model Number	592495
Color	Beige
Product Dimensions (each)	23"D x 17"W x 38"H
Seat Height	20 Inches
Seat Depth	17 Inches
Seat Length	16.5 Inches
Maximum Weight Capacity (per chair)	300 Pounds (136 kg)
Materials	Polyester, Rubberwood, Solid Wood, Engineered Wood, Foam, Sinuous Spring, Non-woven Fabrics
Special Feature	Adjustable Feet
Product Care Instructions	Wipe Clean

**Max Weight  
Capacity: 300lb**



Figure 8.1: Detailed dimensions of the dining chair.

## 9. WARRANTY AND SUPPORT

For warranty information, missing parts, or any product-related inquiries, please contact Yaheetech customer support directly. Refer to your purchase documentation or the Yaheetech official website for contact details.

**Manufacturer:** Yaheetech

