

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Brother](#) /
- › [Brother MFC-J4340DWE Multifunction Printer User Manual](#)

Brother MFC-J4340DWE

Brother MFC-J4340DWE Multifunction Printer User Manual

Model: MFC-J4340DWE

[Instructions](#) [Maintenance](#) [Overview](#) [Setup](#) [Operating](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Brother MFC-J4340DWE is a professional A4 wireless color inkjet multifunction printer designed for home and small office use. It integrates high-quality printing, copying, scanning, and faxing functionalities. Key features include extensive connectivity options, a 20-sheet automatic document feeder (ADF) for enhanced productivity, and the ability to print continuously with included ink cartridges that yield up to 3000 pages. This compact and robust multifunction device is an ideal solution for remote work environments.



Front view of the Brother MFC-J4340DWE multifunction printer, showcasing its compact design and front-loading paper tray.

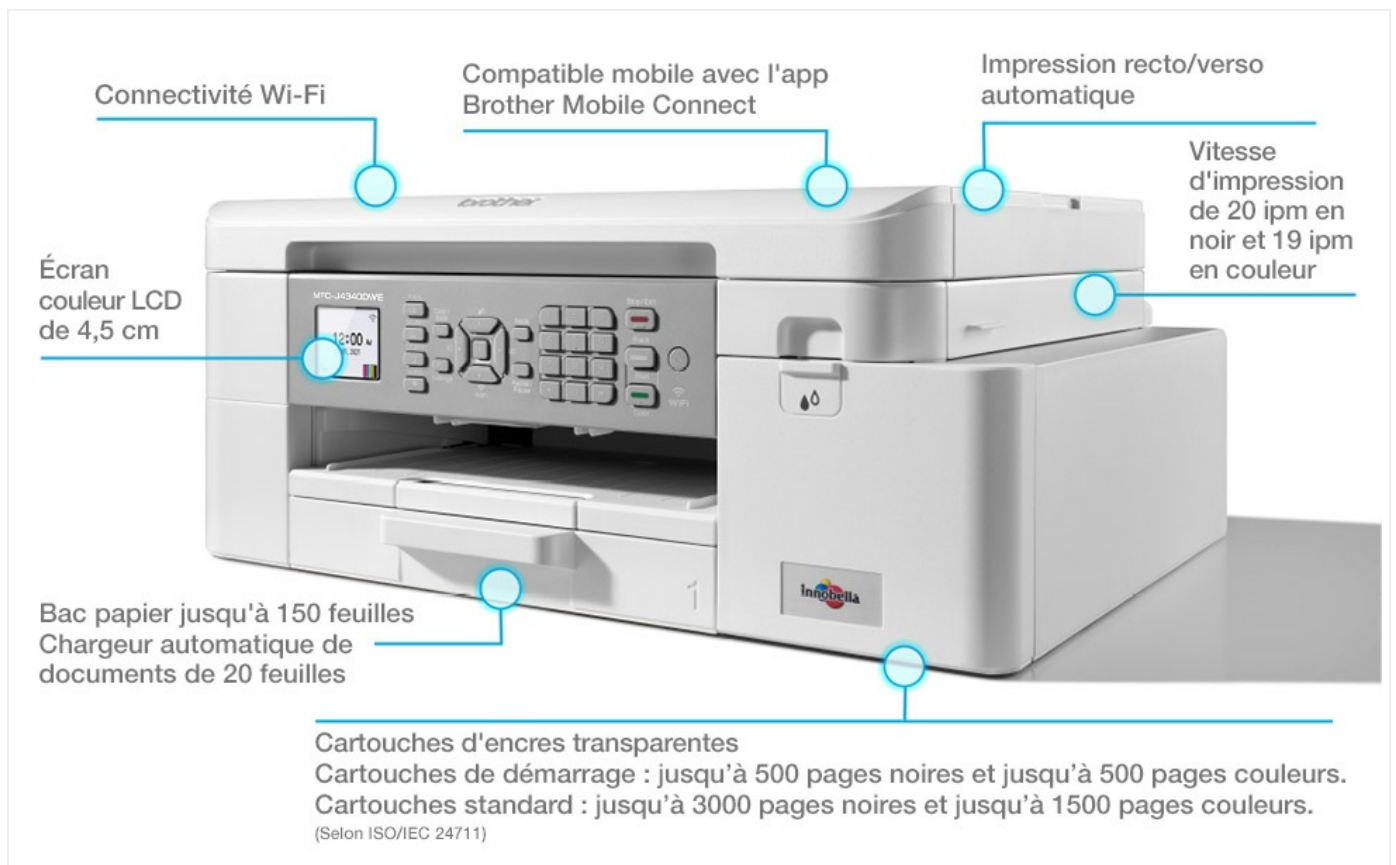


Diagram highlighting key features of the MFC-J4340DWE, including Wi-Fi connectivity, mobile compatibility, automatic duplex printing, 4.5 cm LCD screen, 150-sheet paper tray, 20-sheet ADF, and transparent ink cartridges.

2. INITIAL SETUP

2.1 Unpacking and Placement

1. Carefully remove the printer from its packaging. Retain all packaging materials for future transport or service.
2. Remove all protective tapes and packing materials from the exterior and interior of the printer. Refer to the quick setup guide for specific locations.
3. Place the printer on a flat, stable surface with adequate space around it for ventilation and access to cables.

2.2 Power Connection

- Connect the power cord to the printer's power input.
- Plug the other end of the power cord into a grounded electrical outlet.
- Press the power button to turn on the printer.

2.3 Ink Cartridge Installation

1. Open the ink cartridge cover located on the front of the printer.
2. Unpack each ink cartridge (Black, Cyan, Magenta, Yellow).
3. Insert each cartridge into its corresponding slot, ensuring it clicks into place.
4. Close the ink cartridge cover. The printer will initiate an ink charging process.



Close-up view of the ink cartridge compartment, showing the four color cartridges being inserted into their respective slots.

2.4 Paper Loading

- Pull out the paper tray completely from the printer.
- Adjust the paper guides to fit the size of the paper you are loading (e.g., A4).
- Load up to 150 sheets of paper into the tray, print side down.
- Gently push the paper tray back into the printer until it locks.

2.5 Network Connection (Wi-Fi)

1. On the printer's 4.5 cm LCD screen, navigate to the "Network" or "Wi-Fi" settings.
2. Select "Setup Wizard" or "WLAN Setup".
3. The printer will search for available networks. Select your Wi-Fi network from the list.
4. Enter your Wi-Fi password (network key) using the on-screen keyboard.
5. Confirm the connection. The printer should display a "Connected" message.

2.6 Driver Installation

- Visit the official Brother support website for MFC-J4340DWE.
- Download the latest drivers and software package compatible with your operating system (e.g., Windows).
- Run the installer and follow the on-screen instructions to complete the installation.
- For mobile devices, download the Brother Mobile Connect app from your device's app store.

3. OPERATING INSTRUCTIONS

3.1 Printing Documents

- Ensure the printer is powered on and connected to your network or computer.
- Open the document you wish to print on your computer or mobile device.
- Select "Print" from the application's menu.
- Choose "Brother MFC-J4340DWE" as your printer.
- Adjust print settings such as paper size, orientation, color/monochrome, and duplex printing (automatic double-sided printing is supported).

- Click "Print". The printer has a maximum print speed of 20 pages per minute for monochrome and 19 pages per minute for color.

3.2 Copying Documents

1. Place the document face down on the scanner glass or face up in the Automatic Document Feeder (ADF). The ADF can hold up to 20 sheets.
2. On the printer's LCD screen, select "Copy".
3. Adjust settings such as number of copies (up to 780), color/monochrome, and quality.
4. Press "Start" or the corresponding button to begin copying. The maximum copy speed for black and white is 13 pages per minute.

3.3 Scanning Documents

- Place the document on the scanner glass or in the ADF.
- On the printer's LCD screen, select "Scan".
- Choose your desired scan destination (e.g., computer, USB drive, email).
- Adjust scan settings such as resolution (up to 4800 dpi color, 600 dpi monochrome), color mode, and file format.
- Press "Start" to begin scanning.

3.4 Faxing Documents

1. Load the document face down on the scanner glass or face up in the ADF.
2. On the printer's LCD screen, select "Fax".
3. Enter the recipient's fax number using the numeric keypad.
4. Press "Start" to send the fax.

4. MAINTENANCE

4.1 Replacing Ink Cartridges

- The printer will display a message on the LCD screen when an ink cartridge is low or empty.
- Open the ink cartridge cover.
- Press the release lever for the empty cartridge and pull it out.
- Unpack a new genuine Brother ink cartridge and insert it firmly into the correct slot until it clicks.
- Close the ink cartridge cover.

4.2 Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Scanner Glass:** Gently clean the scanner glass with a soft, lint-free cloth moistened with a non-abrasive glass cleaner.
- **Print Head Cleaning:** If print quality deteriorates (e.g., streaks, missing colors), perform a print head cleaning cycle from the printer's maintenance menu on the LCD screen.

4.3 Paper Jam Removal

- If a paper jam occurs, the printer's LCD screen will display instructions.

- Carefully open the necessary covers (e.g., rear cover, front cover) as indicated.
- Gently pull out the jammed paper in the direction of the paper path. Avoid tearing the paper.
- Close all covers securely.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not power on.	Power cord not connected, power outlet issue.	Ensure power cord is securely connected to both printer and outlet. Test outlet with another device.
Poor print quality (streaks, faded colors).	Low ink, clogged print head, incorrect paper type.	Check ink levels and replace if necessary. Perform print head cleaning. Ensure correct paper type is selected in print settings.
Cannot connect to Wi-Fi.	Incorrect password, printer too far from router, network interference.	Verify Wi-Fi password. Move printer closer to router. Restart router and printer.
Paper jam.	Improper paper loading, foreign object in paper path.	Follow on-screen instructions to clear jam. Ensure paper is loaded correctly and not creased.
Printer offline.	Network disconnection, printer driver issue.	Check network connection. Restart printer and computer. Reinstall printer drivers if necessary.

For further assistance, refer to the Brother support website or contact customer service.

6. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	MFC-J4340DWE
Brand	Brother
Product Dimensions	34.3D x 43.5W x 18H centimeters
Printing Technology	Inkjet
Connectivity Technology	USB, Wi-Fi
Print Output	Color
Max Monochrome Print Speed	20 Pages per minute
Max Color Print Speed	19 Pages per minute
Max Media Size	A4
Max Sheet Feeding Capacity	150 sheets
Scanner Type	Sheet, Flatbed
Max Copy Speed (B&W)	13 Pages per minute

Feature	Detail
Max Copies per Series	780 copies
Duplex Printing	Yes
Display Size	4.5 Centimeters (LCD)
Compatible Devices	Smartphone
Operating System	Windows
Included Components	Brother MFC-J4340DWE, Inkjet Cartridges, Power Cord
Special Features	Eligible for ECOPRO subscription
Item Weight	8.8 Kilograms

7. WARRANTY AND SUPPORT

7.1 Product Warranty

Brother products typically come with a standard manufacturer's warranty. For specific warranty terms and conditions applicable to your region and purchase, please refer to the documentation included with your printer or visit the official Brother website. The EcoPro subscription may offer extended warranty benefits as long as the subscription is active.

7.2 Customer Support

For technical assistance, driver downloads, FAQs, and other support resources, please visit the official Brother support website. You can also find contact information for customer service in your region on their website.

- **Online Support:** [Brother Support Website](#)
- **Driver & Software:** Download the latest drivers and utilities from the support site.
- **Manuals:** Digital copies of user manuals and guides are available online.

© 2024 Brother International Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.