

[Manuals.plus](#) /

› [CubiCubi](#) /

› CubiCubi Electric Standing Desk (Model CB-DJ) User Manual

## CubiCubi CB-DJ

# CubiCubi Electric Standing Desk (Model CB-DJ) User Manual

Model: CB-DJ | Brand: CubiCubi

## 1. INTRODUCTION

Thank you for choosing the CubiCubi Electric Standing Desk. This desk is designed to provide a versatile and ergonomic workspace, allowing you to easily switch between sitting and standing positions. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new desk.



Image: The CubiCubi Electric Standing Desk in a modern home office environment, showcasing its design and functionality.

## 2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the desk during operation.
- Ensure all connections are secure before operating the desk.
- Do not overload the desk. The maximum weight capacity is 176 lbs (80 kg).
- Avoid placing liquids directly on the control panel or near electrical components.
- Do not attempt to disassemble or repair the motor or control system yourself. Contact customer service for assistance.
- Ensure there are no obstructions above or below the desk when adjusting its height to prevent damage or injury. The anti-collision feature helps prevent this, but caution is always advised.

### 3. PACKAGE CONTENTS

---

Please verify that all components are present before beginning assembly. Parts are labeled for easier identification.

- Desktop (48" x 24")
- Electric Lift System (Legs and Motor)
- Control Panel with 3 Memory Presets
- Power Adapter and Cable
- Storage Hooks (for headphones, etc.)
- Assembly Hardware (screws, bolts, etc.)
- Basic Assembly Tools (Allen wrench)
- Instruction Manual

### 4. SETUP & ASSEMBLY

---

Assembly typically requires one person and takes approximately 30-60 minutes. An Allen wrench is provided; a screwdriver may also be required for certain steps (not included).

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the lifting columns to the desktop using the provided hardware. Ensure all screws are tightened securely.
3. Install the foot pads onto the bottom of the lifting columns.
4. Connect the motor cables to the control box and the control panel cable to the control box.
5. Mount the control panel to the underside of the desktop in a convenient location.
6. Attach the storage hooks to the side of the desktop as desired.
7. Carefully flip the desk upright.
8. Plug the power adapter into the control box and then into a wall outlet.

For a visual guide, please refer to the official assembly video:

Your browser does not support the video tag.

Video: Detailed assembly instructions for the CubiCubi Electric Standing Desk.

# Desk Dimensions



Image: Visual representation of the desk dimensions: 48 inches wide, 24 inches deep, with a height adjustment range from 28.3 inches to 45 inches.

## 5. OPERATING INSTRUCTIONS

### 5.1 Height Adjustment

- **Up/Down Buttons:** Use the ^ (Up) and v (Down) buttons on the control panel for momentary height adjustments. The desk

will move as long as the button is pressed.

- The desk can be adjusted from a minimum height of 27.4 inches (69.6 cm) to a maximum height of 45.5 inches (115.6 cm).

## 5.2 Memory Presets

The control panel features 3 preset buttons (1, 2, S) to store and recall your preferred sitting and standing heights.

1. **To Set a Preset:** Adjust the desk to your desired height using the Up/Down buttons. Press and hold one of the preset buttons (1, 2, or S) until you hear a beep or the display flashes, indicating the height has been saved.
2. **To Use a Preset:** Press the desired preset button (1, 2, or S). The desk will automatically move to the stored height.

## 5.3 Anti-Collision Technology

The desk is equipped with an anti-collision sensor. If the desk encounters an obstruction during height adjustment, it will automatically stop and reverse slightly to prevent damage or injury.



Image: Illustration of the anti-collision feature, showing the desk reversing upon contact with an object, and a close-up of the sturdy steel frame construction.

## 5.4 Reset Procedure

If the desk is not functioning correctly or displays an error code, a reset may be necessary.

- To reset the desk, press and hold the **v** (Down) button for 5 seconds. The desk will move to its lowest position and then slightly up, indicating a successful reset.

For further details on operation and troubleshooting, including reset and memory settings, please watch the following video:

Your browser does not support the video tag.

Video: Frequently Asked Questions covering reset procedures, memory height settings, and adjusting desk legs.

# Standing Schedule

set a reminder to stand more often



Up&Down Buttons  
for Momentary Control



Automatic Anti-  
Collision Technology



2 Height's Memory  
Presets Buttons

Reset: Press and hold the DOWN button for 5 seconds


Image: Close-up of the desk's control panel, showing the Up/Down buttons and memory presets (1, 2, S), along with icons for anti-collision technology and quiet design.

# Ultra Quiet Design

50dB

60dB

 80dB



Our Product



Normal Voice



Engine Sound



Image: The desk in operation with a cat sleeping peacefully on it, demonstrating the ultra-quiet motor design, rated at approximately 50dB.

## 6. MAINTENANCE

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cable Management:** Periodically check that all cables are neatly organized and not pinched or tangled, especially during height adjustments.

- **Fastener Check:** Occasionally check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Motor Care:** The electric lift system is designed for durability. Avoid excessive or continuous operation without short breaks to prevent overheating.

## 7. TROUBLESHOOTING

| Problem                                                   | Possible Cause                                                       | Solution                                                                                                       |
|-----------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Desk does not move.                                       | Power cable disconnected; motor cable loose; overload; system error. | Check power and motor connections. Reduce weight on desk. Perform a reset (hold Down button for 5 seconds).    |
| Desk moves unevenly or makes unusual noises.              | Loose fasteners; uneven weight distribution; obstruction.            | Check and tighten all assembly fasteners. Redistribute weight evenly. Ensure no obstructions. Perform a reset. |
| Anti-collision feature triggers too easily or not at all. | Sensor sensitivity setting (not user adjustable); obstruction.       | Ensure no light obstructions are present. If issues persist, contact customer service.                         |
| Memory presets not working.                               | Presets not saved correctly; system error.                           | Re-save your desired heights. Perform a reset.                                                                 |

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact CubiCubi customer service.

## 8. SPECIFICATIONS

| Feature                    | Detail                                                      |
|----------------------------|-------------------------------------------------------------|
| Model Number               | CB-DJ                                                       |
| Desktop Dimensions (W x D) | 48 inches x 24 inches (121.9 cm x 61 cm)                    |
| Height Adjustment Range    | 27.4 inches - 45.5 inches (69.6 cm - 115.6 cm)              |
| Weight Capacity            | 176 lbs (80 kg)                                             |
| Material                   | Wood (desktop), Alloy Steel (frame)                         |
| Control Type               | Electric with Digital Control Panel                         |
| Memory Presets             | 3                                                           |
| Special Features           | Anti-collision technology, Ultra-quiet motor, Storage hooks |
| Assembly Time (Approx.)    | 30-60 minutes (1 person)                                    |

# Wide Height Adjustment

Adjust height from 28.3" to 45"



Image: The desk demonstrating its wide height adjustment capabilities, illustrating comfortable positions for sitting and standing users.

## 9. WARRANTY AND SUPPORT

CubiCubi provides a limited warranty for this product. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact customer service.

Our professional after-sales service team is available 24 hours online to assist you with any issues regarding product quality or problems encountered during use. Please do not hesitate to reach out for support.

### Contact Information:

- Refer to your purchase documentation for direct contact methods.
- Visit the official CubiCubi website for support resources.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question