

Glem GFU98BK S6V3

Glem Gas GFU98BK S6V3 Built-in Electric Oven Instruction Manual

Model: GFU98BK S6V3

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installing, operating, or performing maintenance on your Glem Gas GFU98BK S6V3 built-in electric oven. Keep this manual for future reference.

- **Electrical Safety:** Ensure the oven is correctly earthed and connected to a suitable power supply. Do not use adapters or extension cords. Disconnect power before any maintenance or cleaning.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Hot Surfaces:** The oven and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- **Proper Use:** This oven is intended for domestic use only for cooking food. Do not use it for other purposes, such as heating rooms.
- **Installation:** Installation must be carried out by a qualified technician in accordance with local regulations.

2. PRODUCT OVERVIEW

The Glem Gas GFU98BK S6V3 is a medium-sized, 64-liter capacity built-in electric oven designed for modern kitchens. It features convection heating for even cooking and a self-cleaning function for convenience. The control panel combines rotary knobs and touch controls with a digital timer for precise operation.



This image shows the front view of the Glem Gas GFU98BK S6V3 built-in electric oven, featuring its black finish and control panel with rotary knobs and a digital display.

3. INSTALLATION (SETUP)

The GFU98BK S6V3 oven is designed for built-in installation into a kitchen cabinet. Proper ventilation and electrical connection are crucial for safe and efficient operation.

3.1. Cabinet Dimensions

Ensure your cabinet opening meets the following minimum dimensions:

- **Width:** 56.5 cm
- **Depth:** 56 cm
- **Height:** 59.5 cm

3.2. Electrical Connection

The oven must be connected to the mains electricity supply by a qualified electrician. Ensure the voltage and frequency match the specifications on the rating plate of the appliance. A dedicated circuit breaker is recommended.

3.3. Securing the Oven

Once positioned in the cabinet opening, secure the oven using the provided screws through the designated holes in the oven frame. This prevents accidental tipping.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before first use.

4.1. First Use

1. Remove all packaging materials and accessories from the oven cavity.
2. Clean the interior with a damp cloth.
3. Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure adequate ventilation during this process.

4.2. Setting the Time

Upon initial power-up or after a power cut, the digital display will flash. Use the touch controls to set the current time. Refer to the specific icons on your control panel for 'hour' and 'minute' adjustments.

4.3. Cooking Functions

Turn the function selector knob to choose your desired cooking mode (e.g., Convection, Grill, Bottom Heat). The oven features convection heating for even heat distribution, ideal for baking and roasting.

4.4. Setting Temperature

After selecting a function, turn the temperature selector knob to set the desired cooking temperature. The oven will begin to heat up, and an indicator light will typically turn off once the set temperature is reached.

4.5. Using the Digital Timer

The digital timer can be used for various functions:

- **Minute Minder:** Sets an audible alarm without turning the oven off.
- **Cooking Duration:** Sets the cooking time, after which the oven will automatically switch off.
- **End Time:** Sets a specific time for the oven to switch off.

Consult the detailed timer section in the full manual for specific programming steps.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

5.1. General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- For the interior, wipe spills immediately. Use a damp cloth and a small amount of dish soap. For stubborn stains, specialized oven cleaners can be used, following the product instructions carefully.
- Removable parts like oven racks can be washed in warm soapy water.

5.2. Self-Cleaning Function (Pyrolytic)

The GFU98BK S6V3 features a self-cleaning (pyrolytic) function. This process heats the oven to a very high temperature, turning food residues into ash that can be easily wiped away.

1. Remove all accessories (racks, trays, side supports) from the oven cavity before starting the self-cleaning cycle.
2. Wipe away any large food debris or excessive grease.
3. Close the oven door securely.
4. Select the pyrolytic cleaning function on the control panel. Follow the specific instructions on the display for cycle duration.
5. During the cycle, the oven door will lock automatically. Do not attempt to open it.
6. Once the cycle is complete and the oven has cooled down, wipe away the ash with a damp cloth.

Ensure good ventilation during and after the self-cleaning cycle.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect function/temperature setting; door not closed properly.	Check power connection and circuit breaker. Ensure function and temperature are set. Close door firmly.
Digital display is flashing.	Power interruption; time not set.	Set the current time as per section 4.2.
Oven light not working.	Bulb needs replacement.	Ensure oven is cool and disconnected from power. Replace bulb with a suitable high-temperature bulb.
Excessive smoke during cooking.	Food spills or grease build-up.	Clean the oven interior thoroughly. Use a drip tray for fatty foods.

If the problem persists after attempting these solutions, please contact Glem Gas customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Glem Gas GFU98BK S6V3 built-in electric oven:

Feature	Specification
Model Number	GFU98BK-S6V3
Type	Built-in Electric Oven
Heating Method	Convection
Capacity	64 Liters
Controls	Rotary, Touch, Digital Timer
Special Function	Self-cleaning (Pyrolytic)
Energy Consumption (Conventional)	0.97 kWh

Feature	Specification
Energy Consumption (Forced Convection)	0.78 kWh
Energy Efficiency Class	A+++ to D (Range provided by manufacturer)
Product Dimensions (W x D x H)	54.3 x 59.7 x 59 cm
Installation Compartment Dimensions (W x D x H)	56.5 x 56 x 59.5 cm
Material	Stainless Steel
Color	Black

8. WARRANTY AND SUPPORT

Your Glem Gas GFU98BK S6V3 oven comes with a manufacturer's warranty. The specific terms and duration of the warranty may vary by region and retailer. Please refer to the warranty card included with your product or contact your point of purchase for detailed information.

For technical assistance, spare parts, or to schedule a service appointment, please contact Glem Gas customer support. Contact details can typically be found on the official Glem Gas website or in the product packaging.

When contacting support, please have your oven's model number (GFU98BK S6V3) and serial number ready. The serial number is usually located on a label inside the oven door frame or on the back of the appliance.