

[Manuals.plus](#) /

› [Nokia](#) /

› Nokia 2780 Flip Phone User Manual

Nokia TA-1420

Nokia 2780 Flip Phone User Manual

Model: TA-1420

INTRODUCTION

Welcome to the user manual for your Nokia 2780 Flip phone. This guide provides comprehensive instructions on how to set up, operate, maintain, and troubleshoot your device. The Nokia 2780 Flip combines a classic flip phone design with modern 4G capabilities, offering an intuitive interface, large buttons, and essential features for staying connected.

Please read this manual carefully to ensure proper use and to maximize the features of your phone.

WHAT'S IN THE BOX

Upon unboxing your Nokia 2780 Flip, you should find the following items:

- Nokia 2780 Flip Phone
- Removable Battery
- Micro USB Charger
- USB Cable
- User Guide (this manual)



Figure 1: Items included in the Nokia 2780 Flip retail package.

GETTING STARTED (SETUP)

1. Installing the Battery and SIM Card

Your Nokia 2780 Flip uses a removable battery and a nano SIM card. Ensure the phone is powered off before proceeding.

1. Carefully remove the back cover of the phone.
2. Insert your nano SIM card into the designated SIM card slot.
3. If you wish to expand storage, insert a microSD card into the memory card slot.

4. Align the battery contacts with the phone's terminals and gently press the battery into place.
5. Replace the back cover, ensuring it clicks securely into position.





Figure 2: The Nokia 2780 Flip phone, ready for battery and SIM card installation.

2. Charging the Battery

Before first use, it is recommended to fully charge the battery. Use only the charger and USB cable provided with your phone.

1. Connect the micro USB end of the cable to the charging port on your phone.
2. Plug the other end of the USB cable into the power adapter, and then plug the adapter into a wall outlet.
3. The battery indicator on the screen will show the charging status. A full charge typically takes approximately 3 hours.

The Nokia 2780 Flip offers impressive battery life, with up to 18 days of standby time and up to 7 hours of talk time on a single charge.



Long-lasting battery

Up to 18 days of standby time.
Up to 7 hours of active talk time.



Figure 3: Battery life features of the Nokia 2780 Flip.

3. Powering On and Off

- **To Power On:** Press and hold the Power/End Call key until the phone vibrates and the screen lights up.
- **To Power Off:** Press and hold the Power/End Call key, then select "Power off" from the options on the screen.

OPERATING YOUR PHONE

Basic Navigation

The Nokia 2780 Flip operates on KaiOS, designed for simplicity and ease of use. Navigate through menus and options using the directional keys and the center selection key on the keypad.

Making Calls

1. From the home screen, enter the phone number using the keypad.

2. Press the Call key (green button) to initiate the call.
3. To end a call, press the End Call key (red button). You can also close the flip to end a call.

Sending Messages

1. Go to the Messages application from the main menu.
2. Select "New message" or similar option.
3. Enter the recipient's number or select from your contacts.
4. Type your message using the keypad. The large, responsive keys make typing straightforward.
5. Press the Send option to deliver your message.

Using the Camera

The Nokia 2780 Flip is equipped with a 5 MP rear camera, capable of capturing photos and recording videos.

1. Access the Camera application from the main menu.
2. Frame your shot using the screen as a viewfinder.
3. Press the center selection key to take a photo.
4. To switch to video recording, look for the video icon within the camera interface and select it.



Figure 4: The 5 MP main camera of the Nokia 2780 Flip.

Accessibility Features

The Nokia 2780 Flip is designed with enhanced accessibility in mind, featuring:

- **Big Buttons:** For easier dialing and navigation.
- **Hearing Aid Compatibility (HAC):** Ensures clear audio for hearing aid users.
- **Real-Time Text (RTT):** Allows text to be sent and received simultaneously during a call.
- **Programmable Side Button:** Can be customized to quickly dial a loved one in case of emergency.

FM Radio and Audio Jack

Enjoy your favorite radio stations on the go using the built-in FM radio. Simply plug in your headphones (not included) into the 3.5mm audio jack, as they act as the antenna.

Connectivity (4G, Wi-Fi, Bluetooth)

Stay connected with 4G LTE for clear VoLTE calls and internet browsing. The phone also supports Wi-Fi and Bluetooth for versatile connectivity options.



Universal Carrier Compatibility

T Mobile

verizon✓



Tracfone®

metro
by T Mobile



NET10
WIRELESS

cricket®

SIMPLE Mobile

**Consumer
Cellular**

Figure 5: Key connectivity and performance features.



In the Box

Micro USB Charger
Removable Battery
Micro USB Cable
User Guide



Figure 6: Universal carrier compatibility of the Nokia 2780 Flip.

MAINTENANCE

To ensure the longevity and optimal performance of your Nokia 2780 Flip, follow these maintenance guidelines:

- Keep the phone dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty or dirty areas.
- Do not store the phone in high temperatures. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold temperatures. When the phone returns to its normal temperature, moisture can form inside the phone and damage electronic circuit boards.
- Do not attempt to open the phone other than to install the battery, SIM card, or memory card.

- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards and fine mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the phone.

TROUBLESHOOTING

If you encounter issues with your Nokia 2780 Flip, try the following common troubleshooting steps:

- **Phone not turning on:** Ensure the battery is correctly installed and fully charged. Try connecting the charger and waiting a few minutes before attempting to power on.
- **No network signal:** Check that your SIM card is properly inserted. Move to an area with better network coverage. Contact your carrier to confirm service is active.
- **Cannot make/receive calls or messages:** Verify network signal. Check if airplane mode is off. Ensure you have sufficient credit or an active plan with your carrier.
- **Battery not charging:** Ensure the charger and USB cable are securely connected to both the phone and the power outlet. Try a different outlet or charger if available.
- **Phone is slow or unresponsive:** Restart the phone. Close any unnecessary applications running in the background.

For more detailed troubleshooting or specific technical support, you may refer to the official Nokia support resources. A video demonstrating how to chat with Nokia Support is provided below:

Your browser does not support the video tag.

Video 1: Instructions on how to chat with Nokia Support for assistance.

SPECIFICATIONS

Feature	Detail
Model Name	2780
Item Model Number	TA-1420
Operating System	KaiOS
RAM	0.5 GB (512 MB)
Memory Storage Capacity	4 GB (Expandable with microSD)
Screen Size	2.8 Inches (Main Display), 1.77 Inches (Secondary Display)
Resolution	240 x 320
Rear Camera	5 MP
Battery Capacity	1450 mAh
Phone Talk Time	12 Hours
Phone Standby Time	432 Hours (18 Days)
Connectivity	4G LTE, Wi-Fi, Bluetooth, USB
Audio Jack	3.5 mm
Dimensions	7.96 x 2.28 x 0.45 inches
Item Weight	4.6 ounces

Manufacturer	HMD Global Oy
--------------	---------------

WARRANTY AND SUPPORT

Your Nokia 2780 Flip phone is manufactured by HMD Global Oy. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Nokia support website.

An official User Guide in PDF format is also available for download, providing additional detailed information:

[Download Official User Guide \(PDF\)](#)

For further assistance, technical support, or service inquiries, please contact Nokia customer support through their official channels.

© 2024 Nokia. All rights reserved. Nokia and the Nokia logo are trademarks of Nokia Corporation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the function of button #15 on the Nokia 2780 Flip (TA-1420)?

According to the Keys and Parts diagram in the Nokia 2780 Flip (TA-1420) user manual, button #15 is the SOS call key. The SOS call key is a programmable side button designed for emergency use....

[Read full answer](#)

