

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [STEELPLAY](#) /

› [STEELPLAY Wireless Controller LA-0HNY-U4YG User Manual](#)

STEELPLAY LA-0HNY-U4YG

STEELPLAY Wireless Controller User Manual

Model: LA-0HNY-U4YG

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your STEELPLAY Wireless Controller, model LA-0HNY-U4YG. Please read this manual carefully before using the product to ensure proper functionality and to prevent damage.

SETUP

Package Contents

Verify that all items are present in the package:

- STEELPLAY Wireless Controller (LA-0HNY-U4YG)
- USB Charging Cable
- User Manual (this document)

Charging the Controller

Before first use, fully charge the controller. Connect the USB charging cable to the controller's charging port and the other end to a powered USB port (e.g., gaming console, PC, USB wall adapter).



Image: The STEELPLAY Wireless Controller with a charging cable connected. This image illustrates the controller's design and potential charging port location.

Pairing with a Device

Follow these steps to pair your wireless controller with your gaming console or PC:

1. Ensure the controller is charged.
2. Turn on your gaming console or PC.
3. On the controller, press and hold the **SHARE** button and the **PS** button simultaneously until the light bar begins to flash.
4. On your device, navigate to Bluetooth settings and select the "STEELPLAY Wireless Controller" from the list of available devices.
5. Once paired, the light bar will stop flashing and remain lit, indicating a successful connection.

OPERATING INSTRUCTIONS

Basic Controls

The STEELPLAY Wireless Controller features standard gamepad controls. Familiarize yourself with the button layout:

- **Directional Pad (D-Pad):** For precise directional input.
- **Left/Right Analog Sticks:** For movement and camera control.
- **Action Buttons (Triangle, Circle, Cross, Square):** For in-game actions.

- **Shoulder Buttons (L1, R1) and Triggers (L2, R2):** For various in-game functions.
- **SHARE Button:** To share gameplay content.
- **OPTIONS Button:** To access in-game menus or pause.
- **PS Button:** To access the console's home menu or power on/off the controller.
- **Touch Pad:** For additional input, often used for navigation or specific game mechanics.



Image: A detailed view of the STEELPLAY Wireless Controller, highlighting the layout of its 14 buttons, D-pad, and analog sticks.

Powering On/Off

- To power on: Press the **PS** button.
- To power off: Press and hold the **PS** button for approximately 10 seconds until the controller powers down.

Reconnecting

Once paired, the controller should automatically reconnect to the last paired device when powered on. If it does not, press the **PS** button to initiate reconnection.

MAINTENANCE

Cleaning

To clean the controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish and internal components.

Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller.

Battery Care

The controller contains a rechargeable battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the controller regularly, even if not in use for extended periods.
- Do not expose the controller to temperatures above 60°C (140°F).

TROUBLESHOOTING

Controller does not power on:

Ensure the controller is fully charged. Connect it to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to power it on again.

Controller does not connect or pair:

- Ensure the controller is in pairing mode (light bar flashing).
- Verify that the device you are trying to connect to has Bluetooth enabled.
- Remove any previous pairings of the controller from your device's Bluetooth settings and attempt to pair again.
- Move the controller closer to the device to ensure a strong signal.
- Restart both the controller and the device.

Input lag or unresponsive buttons:

- Ensure the controller is fully charged. Low battery can affect performance.
- Reduce interference by moving away from other wireless devices (Wi-Fi routers, other Bluetooth devices).
- If possible, try connecting the controller via a USB cable to see if the issue persists (if wired mode is supported).

SPECIFICATIONS

Feature	Detail
Model Name	LA-0HNY-U4YG
Brand (Manufacturer)	STEELPLAY
Brand (Retail)	Lexip
Connectivity	Wireless
Number of Buttons	14
Dimensions	17.5 x 13 x 8.3 cm

Weight	350 g
Batteries Included	No (Features an internal rechargeable battery)

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. Please refer to the retailer's purchase terms or the manufacturer's official website for detailed warranty policies and support contact information.

For further assistance, please contact STEELPLAY customer support through their official channels.

