

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KODAK](#) /
- › [KODAK PIXPRO AZ255 Digital Camera User Manual](#)

## KODAK AZ255

# KODAK PIXPRO AZ255 Digital Camera User Manual

Model: AZ255

## INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your KODAK PIXPRO AZ255 Digital Camera. Please read this manual thoroughly before using your camera to ensure proper function and optimal performance. Keep this manual for future reference.



*Image: Front view of the KODAK PIXPRO AZ255 Digital Camera in white, showcasing its lens and grip.*

## PACKAGE CONTENTS

---

Verify that all items are present in your camera package:

- KODAK PIXPRO AZ255 Digital Camera
- AA Batteries (4 included)
- USB Cable
- Neck Strap
- Lens Cap
- Quick Start Guide

## SETUP

---

### 1. Battery Installation

The KODAK PIXPRO AZ255 camera operates on four AA batteries. For optimal performance, use high-quality alkaline or rechargeable Ni-MH batteries.

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert four AA batteries according to the polarity indicators (+/-) inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

### 2. SD Card Installation

A memory card (SD, SDHC, or SDXC, Class 10 or higher, up to 512GB) is required to store photos and videos.

1. Open the battery compartment cover. The SD card slot is usually located next to the battery slots.
2. Insert the SD card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove the SD card, press it gently until it springs out, then pull it from the slot.
4. Close the battery compartment cover.



# 25X OPTICAL ZOOM

*Image: Rear view of the camera displaying the 3-inch LCD screen and various control buttons.*

## OPERATING THE CAMERA

### 1. Powering On/Off

Press the **Power** button located on the top of the camera to turn it on or off.

### 2. Taking Photos

1. Turn on the camera.
2. Frame your shot using the 3-inch LCD screen.
3. Use the zoom lever (W/T) to adjust the 25x optical zoom.
4. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
5. Press the shutter button fully to capture the image.



*Image: The KODAK PIXPRO AZ255 camera highlighting its 16 Megapixel sensor and Full HD video capabilities.*

### **3. Zoom Function**

The camera features a 25x optical zoom and 4x digital zoom. Use the zoom lever around the shutter button to adjust the focal length. The 24mm wide-angle lens allows for expansive landscape shots.



# LCD SCREEN 3"

*Image: The camera with its built-in flash raised, illustrating the 24mm wide-angle lens feature.*



*Image: A visual demonstration of the 25x optical zoom, comparing a wide shot of a building with a magnified view of its architectural details.*

#### **4. Recording Videos**

The camera supports 1080P Full HD video recording.

1. Switch the camera to video mode (refer to your camera's mode dial or menu).
2. Press the dedicated video recording button (often marked with a red dot) to start recording.
3. Press the button again to stop recording.

#### **5. Optical Image Stabilization (OIS)**

The built-in Optical Image Stabilization helps reduce blur caused by camera shake, especially useful when using the zoom or shooting in low light conditions.



# OPTICAL IMAGE STABILISATION



*Image: A graphic illustrating Optical Image Stabilization, depicted with a child holding a pinwheel, suggesting clear photos even with movement.*

## 6. Shooting Modes

The camera offers various shooting modes to suit different scenarios:

- **Automatic Mode:** The camera automatically adjusts settings for optimal results.
- **Manual Mode:** Provides full control over aperture, shutter speed, and ISO.
- **Program Mode:** Camera sets aperture and shutter speed, while you control other settings.
- **Aperture Priority (A):** You set the aperture, camera sets shutter speed.
- **Shutter Priority (S):** You set the shutter speed, camera sets aperture.
- **Panorama Capture:** Stitch multiple photos together to create a wide panoramic image.

# PANORAMA



# CAPTURE

*Image: A scenic panoramic landscape, demonstrating the camera's panorama capture feature.*

## 7. Flash Modes

The built-in flash can be adjusted for various lighting conditions:

- **Auto:** Flash fires automatically when needed.
- **Fill-in:** Flash fires regardless of ambient light.
- **Off:** Flash is disabled.
- **Red-Eye Reduction:** Fires a pre-flash to reduce red-eye effect.
- **Slow Sync:** Combines flash with a slow shutter speed for balanced exposure in low light.

## MAINTENANCE

### 1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens surface with your

fingers.

- Do not use harsh chemicals or abrasive materials.

## 2. Battery Care

- Remove batteries if the camera will not be used for an extended period.
- Store batteries in a cool, dry place.
- Dispose of used batteries responsibly according to local regulations.

## 3. Storage

Store the camera in a dry, dust-free environment, away from extreme temperatures and direct sunlight. Use a camera bag for protection during transport.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace batteries or ensure correct polarity.
Cannot take pictures.	Memory card full, locked, or not inserted.	Insert a new card, unlock the card, or delete unnecessary files.
Images are blurry.	Camera shake, out of focus, or low light.	Hold camera steady, use Optical Image Stabilization, ensure proper focus, or use flash.
Flash does not fire.	Flash mode set to "Off" or batteries low.	Change flash mode setting or replace batteries.
LCD screen is blank.	Camera off, display setting, or battery issue.	Turn camera on, check "DISP" button, or replace batteries.

## SPECIFICATIONS

Feature	Detail
Model Name	AZ255
Effective Still Resolution	16 MP
Optical Zoom	25x
Digital Zoom	4x
Lens Type	Wide Angle (24-600mm equivalent)
Image Stabilization	Optical
Video Resolution	1080p Full HD
Screen Size	3 Inches LCD (460,000 Dot)
Photo Sensor Technology	BSI CMOS

Feature	Detail
Supported File Format	JPEG (Stills), MOV (Video)
Memory Card Compatibility	SD, SDHC, SDXC (up to 512GB, Class 10+)
Power Source	4 AA Batteries
Connectivity	USB
Dimensions (D x W x H)	4.47"D x 3.06"W x 2.74"H
Weight	1 Pound
Minimum Shutter Speed	30 Seconds
Maximum Shutter Speed	1/2000 Seconds
Flash Modes	Auto, Fill In, Off, Red-Eye Reduction, Slow Sync, Slow Sync/Red-Eye Reduction

## WARRANTY AND SUPPORT

The KODAK PIXPRO AZ255 Digital Camera comes with a **1-year manufacturer's warranty**.

For detailed information, troubleshooting, or further assistance, please refer to the official User Guide PDF:

[Download KODAK PIXPRO AZ255 User Guide \(PDF\)](#)

You may also visit the [KODAK Store on Amazon](#) for additional product information and support resources.