

## SINGER 220442103

# SINGER Handheld Garment Steamer User Manual

Model: 220442103

## INTRODUCTION

Thank you for choosing the SINGER Handheld Garment Steamer. This powerful and portable steamer is designed to quickly and efficiently remove wrinkles from clothes, curtains, upholstery, and other fabrics. With its 1500W steam output, fast 20-second heat-up time, and convenient features, it provides a hassle-free alternative to traditional ironing. Please read this manual thoroughly before first use to ensure safe and optimal performance of your new garment steamer.

## IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Use the appliance only for its intended household use.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Always turn off and unplug the appliance from the electrical outlet before filling with water, emptying, or cleaning, and when not in use.
- Do not operate the appliance with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Do not allow the cord to touch hot surfaces. Let the appliance cool completely before putting away.
- Always ensure the water tank is securely attached before operating.
- Use distilled water for optimal performance and to prevent mineral buildup.
- Keep the steamer away from children and pets.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your SINGER Handheld Garment Steamer:



**Main Unit:** The core handheld steamer with a comfortable grip and steam nozzle.



**Steamer and Included Accessories:** The steamer comes with various attachments for different fabric types and a convenient carrying bag.

## Accessories Included In The Box




**Lint Brush**

Removes Lints  
From Garment



**Fabric Brush**

Removes visible  
Dust/Hair  
From Garment

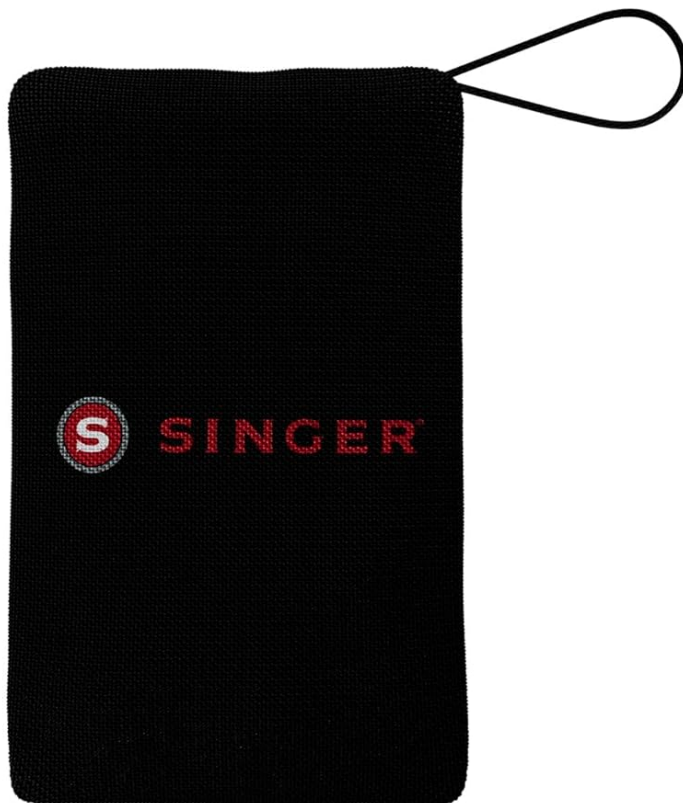

**Carrying Bag**

Protect & Store  
Steamer & Accessories

**Accessories:** Includes a lint brush for removing lint, a fabric brush for visible dust/hair, a measuring cup for filling, and a carrying bag for storage and travel.



**Key Features:** Detachable 280ML water tank, up to 15 minutes of continuous steam, 30-minute auto shut-off for safety, and an extra-long 10-foot power cord for extended reach.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Detach the water tank from the main unit. Fill the tank with distilled water. The 280ML capacity allows for up to 15 minutes of continuous steaming.





280 ML

Large Detachable  
Water Tank

10 Mins

Continuous  
Steaming

30-Minute  
Auto-Off

Extended  
10-Foot Cord

*The detachable water tank is easy to fill.*

3. **Attach Tank:** Securely reattach the filled water tank to the steamer unit.
4. **Plug In:** Plug the steamer into a standard electrical outlet. The extra-long 10-foot cord provides flexibility.

## OPERATING INSTRUCTIONS

1. **Power On:** Press the power button. The steamer will begin to heat up. It features a quick 20-second heat-up time.



**20-Second**

Ultra-Fast  
Heat-Up Time

**25 g/min**

Continuous  
Steam Output

*The steamer heats up in just 20 seconds, delivering 25 g/min continuous steam.*

2. **Prepare Garment:** Hang the garment on a hanger or lay it flat on a clean, heat-resistant surface.
3. **Steam:** Hold the steamer upright and direct the steam nozzle towards the fabric. Move the steamer slowly up and down over the wrinkles. For best results, gently pull the fabric taut with your free hand.

Before



After



## 1500W Handheld Steamer For Superior Fabric Care And Quick Wrinkle Removal

*Achieve wrinkle-free results quickly and easily.*

### 4. Use Attachments:

- **Lint Brush:** Attach the lint brush to remove lint and pet hair while steaming.
- **Fabric Brush:** Use the fabric brush for deeper penetration of steam on heavier fabrics and to remove visible dust/hair.

5. **Auto Shut-Off:** The steamer is equipped with a 30-minute auto shut-off feature for safety, automatically turning off after inactivity.

6. **Finish:** Once steaming is complete, press the power button to turn off the unit and unplug it from the outlet. Allow the garment to cool and dry before wearing or storing.

## MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your steamer.

- **Empty Water Tank:** After each use, always empty any remaining water from the tank. This prevents mineral buildup and bacterial growth.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (Monthly):** If you notice reduced steam output or mineral residue, descale the steamer. Mix equal parts white vinegar and distilled water. Fill the tank with this solution and run the steamer until half the solution is used. Unplug and let it



sit for 30 minutes, then run the rest of the solution. Rinse the tank thoroughly with fresh distilled water.

- **Storage:** Ensure the steamer is completely cool and dry before storing. Store it in a cool, dry place, preferably in its original packaging or the provided carrying bag.

## TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Mineral buildup. Steamer not heated sufficiently.	Fill the water tank. Perform descaling. Allow the steamer to heat up for the full 20 seconds.
Water spitting from nozzle.	Overfilled water tank. Steamer not hot enough.	Do not overfill the water tank. Allow the steamer to fully heat up before use.
Power light is dim or not visible.	Environmental lighting conditions. Minor manufacturing variation.	This is generally a cosmetic issue and does not affect the steamer's functionality. Ensure the steamer is heating up and producing steam as expected.
Steamer not turning on.	Not plugged in correctly. Power outlet issue. Auto shut-off activated.	Check power connection. Try a different outlet. Press the power button again to restart.

## SPECIFICATIONS

**Brand:** SINGER

**Model Number:** 220442103

**Color:** Teal

**Item Weight:** 1.9 Pounds

**Style:** Freestanding, Handheld

**Wattage:** 1500 watts

**Voltage:** 150 Volts (AC)

**Heat Time:** Approximately 20 seconds

**Product Benefits:** Remove Wrinkles, Fabric Refreshening

**Water Tank Capacity:** 280 Milliliters

**UPC:** 840163304290

**Product Dimensions:** 5 x 6.75 x 11.25 inches

**Country of Origin:** China

**Included Components:** Fabric Brush, Lint Brush, Storage Bag

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official SINGER website. You can also contact SINGER customer service for assistance with product registration, troubleshooting, or replacement parts.

**SINGER Official Website:** [www.singer.com](http://www.singer.com)

