

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crompton](#) /

› [Crompton ChopMaxx Electric Vegetable Chopper Instruction Manual](#)

## Crompton ACGCP-CHOPMAXX

# Crompton ChopMaxx Electric Vegetable Chopper Instruction Manual

Model: ACGCP-CHOPMAXX

## 1. INTRODUCTION

---

Thank you for choosing the Crompton ChopMaxx Electric Vegetable Chopper. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

## 2. PRODUCT OVERVIEW AND COMPONENTS

---

The Crompton ChopMaxx is designed to simplify your food preparation tasks, offering efficient chopping, grinding, and whisking capabilities. Familiarize yourself with the main components of your chopper:

- **Motor Unit:** The main power unit with a 300-watt motor and single-touch operation button.
- **800ml See-Through Food Grade Bowl:** Transparent bowl for processing ingredients.
- **Twin S-Shaped Ninja Blades:** Stainless steel blades for efficient chopping and grinding.
- **Whisking Attachment:** For whipping cream, beating eggs, and preparing batters.
- **Splash Guard Lid:** Helps prevent spills during operation.
- **Anti-Slip Base:** Ensures stability during use.



Figure 2.1: Crompton ChopMaxx Components

### 3. SETUP

Before using your Crompton ChopMaxx for the first time, ensure all packaging materials are removed and components are clean. Refer to the "Maintenance and Cleaning" section for initial cleaning instructions.

1. Place the anti-slip base on a flat, stable surface.
2. Position the 800ml see-through bowl onto the base, ensuring it is securely seated.
3. Carefully place either the Twin S-Shaped Ninja Blades or the Whisking Attachment onto the central shaft inside the bowl. Ensure it clicks into place. **Caution: Blades are extremely sharp. Handle with care.**
4. Add your ingredients to the bowl. Do not exceed the maximum fill line.
5. Place the motor unit onto the top of the bowl, aligning the grooves. Twist gently until it locks securely.
6. Plug the power cord into a suitable electrical outlet.

Your browser does not support the video tag.

Video 3.1: Visual guide demonstrating the assembly and basic operation of the Crompton ChopMaxx Electric Vegetable Chopper, including placing the bowl, inserting blades, adding ingredients, and securing the motor unit.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Chopping and Grinding

Use the Twin S-Shaped Ninja Blades for chopping vegetables, fruits, nuts, and grinding spices.

1. Ensure the chopper is correctly assembled with the Twin S-Shaped Ninja Blades.
2. Add pre-cut ingredients to the bowl. For best results, cut larger items into smaller, uniform pieces (approximately 1-2 inches). Do not overfill the bowl.
3. Press down firmly on the motor unit's top button for single-touch operation.
4. Pulse in short bursts (1-3 seconds) for coarse chopping, or hold down for longer periods for finer results. Monitor the consistency through the transparent bowl.
5. Release the button to stop operation. Wait for the blades to completely stop before removing the motor unit.
6. Carefully remove the motor unit, then the blades, and empty the chopped ingredients.

# Chop & Whisk

## All Ingredients In Seconds



 Tomato



 Veggies



 Onion



 Garlic



 Curd



 Egg



 Batter



 Whipped Cream

Figure 4.1: Examples of chopped ingredients



Figure 4.2: Single-touch operation

## 4.2 Whisking

Use the Whisking Attachment for whipping cream, beating eggs, or mixing light batters.

1. Ensure the chopper is correctly assembled with the Whisking Attachment.
2. Add liquid ingredients (e.g., cream, eggs) to the bowl.
3. Press down firmly on the motor unit's top button to start whisking.
4. Continue whisking until the desired consistency is achieved.
5. Release the button to stop operation. Wait for the attachment to stop completely before removing the motor unit.
6. Carefully remove the motor unit, then the whisking attachment, and pour out the prepared mixture.



Figure 4.3: Whisking Attachment



Figure 4.4: Chopping and Whisking Capabilities

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Crompton ChopMaxx. Always unplug the appliance before cleaning.

1. **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
2. **Bowl, Blades, and Whisking Attachment:** These parts can be washed with warm, soapy water. Rinse thoroughly and dry immediately. **Caution: The blades are very sharp. Handle them with extreme care to avoid injury.**
3. **Dishwasher Safety:** The bowl, blades, and whisking attachment are **NOT** dishwasher safe. Hand wash only.
4. **Storage:** Store the chopper in a dry place, ensuring all components are clean and dry before storage.

**Product Care Instructions:** Be careful of blades while cleaning. Keep the chopper on a flat surface during operation.

## 6. TROUBLESHOOTING

If you encounter any issues with your Crompton ChopMaxx, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chopper does not turn on.	Not plugged in; motor unit not properly secured; power outage.	Ensure the power cord is securely plugged into a working outlet. Check that the motor unit is correctly locked onto the bowl. Verify power supply.

Problem	Possible Cause	Solution
Ingredients are not chopping evenly.	Bowl is overfilled; ingredients are too large; insufficient pulsing.	Reduce the quantity of ingredients. Cut larger items into smaller, uniform pieces. Use short, controlled pulses rather than continuous operation.
Motor sounds strained or stops.	Overloading the motor; ingredients are too hard or dense.	Reduce the amount of ingredients. For hard ingredients, process in smaller batches or pre-cut them further. Allow the motor to cool down if it has stopped due to overheating.
Leakage from the bowl.	Bowl or lid not properly assembled; overfilling.	Ensure the bowl is correctly seated on the base and the motor unit is securely locked. Do not fill ingredients above the maximum fill line.

## 7. SPECIFICATIONS

---

Technical details for the Crompton ChopMaxx Electric Vegetable Chopper:

- **Brand:** Crompton
- **Model Name:** ChopMaxx
- **Item Model Number:** ACGCP-CHOPMAXX
- **Power:** 300 Watts
- **Bowl Capacity:** 800 ml
- **Product Dimensions:** 12D x 12W x 26H Centimeters
- **Item Weight:** 865 Grams
- **Blade Material:** Stainless Steel
- **Body Material:** Plastic
- **Number of Speeds:** 1
- **Special Feature:** Built-in Grinder (referring to chopping/grinding function)
- **Recommended Uses:** Chop, Mince, Whisk
- **Included Components:** Chopper, User Manual with Warranty Card

## 8. WARRANTY AND SUPPORT

---

The Crompton ChopMaxx Electric Vegetable Chopper comes with a **2-year warranty** on the product, covering manufacturing defects from the date of purchase. Please retain your purchase receipt for warranty claims.

For technical assistance, service, or warranty inquiries, please contact Crompton customer support. Contact details can typically be found on the warranty card included with your product or on the official Crompton website.

Manufacturer: Crompton Greaves Consumer Electricals Limited, Equinox Business Park, 1st Floor, Tower 3, LBS Marg, Kurla (W), Mumbai 400070, Maharashtra, India.