

- Manuals.plus /
- › TecTecTec /
- › TecTecTec ULT-X High-Precision Golf Rangefinder Instruction Manual

TecTecTec ULT-X

TecTecTec ULT-X High-Precision Golf Rangefinder Instruction Manual

MODEL: ULT-X

1. PRODUCT OVERVIEW

The TecTecTec ULT-X High-Precision Golf Rangefinder is a versatile laser range finder designed for accurate distance measurement in golfing, hunting, and other outdoor applications. It features advanced optical technology, multiple measurement modes, and a durable, lightweight design.



Figure 1: Front view of the TecTecTec ULT-X Golf Rangefinder, showcasing its compact design and optical lenses.

2. SETUP

2.1 Unboxing and Initial Contents

Upon opening the package, ensure all components are present:

- TecTecTec ULT-X Rangefinder
- Premium Carrying Pouch
- CR2 Battery
- Wrist Strap
- Microfiber Cleaning Cloth
- Quick Start Guide

2.2 Battery Installation

The TecTecTec ULT-X Rangefinder uses one CR2 battery. Locate the battery compartment, typically on the underside or side of the device. Insert the CR2 battery, ensuring correct polarity as indicated inside the compartment. Close the compartment securely.

2.3 Adjusting Focus

To ensure a clear view, adjust the eyepiece by rotating it until the display and target appear sharp. This adjustment is smooth and allows for precise focusing for individual users.



Figure 2: The rangefinder is designed to fit comfortably in hand, allowing for easy focus adjustment.

3. OPERATING INSTRUCTIONS

3.1 Powering On and Off

Press the power button (usually located on the top) to turn on the device. The display will illuminate. The device typically powers off automatically after a period of inactivity to conserve battery life.

3.2 Measurement Modes

The ULT-X offers three primary measurement modes:

- **Mode 1 (M1) - Normal/Scan Mode:** This mode provides standard distance measurement. By holding down the power button, the device enters continuous scan mode, constantly updating distances as you pan across targets.

This is useful for quickly getting distances to multiple objects.

- **Mode 2 (M2) - Flag Seeker Mode:** Indicated by a small flag icon on the display, this mode is optimized for golf. It prioritizes the closest object in the field of view, making it easier to lock onto the flagstick even with trees or other objects in the background. Upon successful flag lock, the device provides a short vibration alert.
- **Mode 3 (M3) - Slope Mode:** This mode provides a slope-adjusted distance, which accounts for changes in elevation between your position and the target. To engage Slope Mode, pull out the yellow ring located near the optical lenses. The display will show both the actual distance and the slope-adjusted distance. This feature is particularly useful for golfers to get a more accurate 'play as' distance.



Figure 3: Top view of the rangefinder, showing the mode and power buttons for easy operation.

3.3 Measurement Accuracy and Range

The TecTecTec ULT-X offers high-precision measurements:

- Accuracy: ± 0.3 yards at distances up to 300 yards.
- Accuracy: ± 0.5 yards at distances up to 600 yards.
- Accuracy: ± 1 yard at distances up to 1,000 yards.
- Maximum Measuring Range: Up to 1,000 yards.

4. MAINTENANCE

Proper maintenance ensures the longevity and performance of your rangefinder:

- **Cleaning:** Use the provided microfiber cleaning cloth to gently wipe the lenses and exterior. Avoid abrasive materials or harsh chemicals.
- **Water Resistance:** The device is waterproof. However, avoid prolonged submersion or exposing the battery compartment to water.
- **Storage:** Store the rangefinder in its premium carrying pouch when not in use to protect it from dust, dirt, and physical damage.

5. TROUBLESHOOTING

If you encounter issues with your rangefinder, consider the following:

- **No Power:** Ensure the CR2 battery is correctly installed and has sufficient charge. Replace the battery if necessary.
- **Inaccurate Readings:** Clean the lenses with the microfiber cloth. Ensure you have a stable hold on the device and are targeting a clear object. Re-measure the distance.
- **Difficulty Locking On:** Switch to Flag Seeker Mode (M2) if targeting a flagstick. Ensure there are no obstructions between the rangefinder and the target.

6. SPECIFICATIONS

Feature	Specification
Brand	TecTecTec
Model Name	ULTX PINK
Color	Pink
Material	Rubber
Item Weight	16 ounces
Battery Description	Lithium (CR2)
Water Resistance Level	Waterproof
Magnification Maximum	6 x
Measuring Range	1000 yards
Item Package Dimensions L x W x H	6.1 x 4.6 x 3.4 inches
Package Weight	0.52 Kilograms
UPC	852627007722

7. WARRANTY AND SUPPORT

Your TecTecTec ULT-X Rangefinder comes with a **2 Years Happiness Guarantee**. Online registration is required to activate your warranty. For any questions or assistance, lifetime customer support is available.

Please refer to the included warranty card for detailed terms and conditions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What type of battery does the TecTecTec ULT-X rangefinder use, and how do I replace it if the device won't power on?

The TecTecTec ULT-X High-Precision Golf Rangefinder uses one CR2 lithium battery. If your device has not been used for a long time (such as the 10 years mentioned) and will not power on, the...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0BLGT8QCG>

More documents and user manuals: <https://manuals.plus/>