



Manuals.plus /

› AceGamer /

› AceGamer Wireless Controller for PS4 - Instruction Manual

AceGamer V2 Gamepad Joystick (Galaxy)

AceGamer Wireless Controller for PS4 - Instruction Manual

Model: V2 Gamepad Joystick (Galaxy)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your AceGamer Wireless Controller for PS4. Designed for an immersive gaming experience, this controller features a unique Galaxy design, comfortable non-slip grips, and advanced functionalities like the Turbo function and sensitive 6-axis somatosensory.

The controller is compatible with PS4, PS4 Pro, PS4 Slim, and Windows PC.

PACKAGE CONTENTS

- 1x AceGamer Wireless Controller for PS4
- 1x USB-C Charge Cable
- 1x User Manual
- Thumb Caps (Included)

PRODUCT FEATURES



Figure 1: AceGamer Wireless Controller (Galaxy Design)

The controller features a unique Galaxy design, inspired by the vast universe, with different colors of nebulae and meteorites. This design is applied using a water transfer process, not cheap stickers, and is coated with a smooth hand-feel oil for durability against sweat.



Built-in 6-axis gyro chip makes somatosensory assist subtle, making drifting actions smoother and faster.

SENSITIVE 6-AXIS SOMATOSENSORY

Figure 2: Sensitive 6-Axis Somatosensory

Built-in 6-axis gyro chip makes somatosensory assist subtle, leading to smoother and faster actions in games.

VIBRATION FEEDBACK

Double Vibration function
brings you more authentic
game experience



Figure 3: Vibration Feedback

The double vibration function provides a more authentic and immersive gaming experience.

ERGONOMIG DESIGN SENSITIVE TOUCH CONTROL PANEL One-click quick sharing



Figure 4: Ergonomic Design & Touch Control Panel

Features an ergonomic design for comfortable grip and less finger fatigue, along with a sensitive touch control panel for quick sharing and interaction.

SETUP & CONNECTION

Connecting to PS4/PS4 Pro/PS4 Slim

1. For the first-time connection, ensure your PS4 console is powered on.
2. Connect the AceGamer Wireless Controller to your PS4 console using the provided USB-C charge cable.
3. Press and hold the 'HOME' button on the controller for approximately 2 seconds. The LED indicator on the controller will flash white, indicating it is in connection state.
4. Wait for approximately 3 seconds. The LED indicator will change color, signifying a successful connection. You can now disconnect the USB cable and use the controller wirelessly.

Your browser does not support the video tag.

Video 1: Initial Connection of AceGamer Wireless Controller to PS4. This video demonstrates the unboxing and the initial wired connection process to a PS4 console, showing the controller's LED indicator changing color upon successful pairing.

Connecting to Windows PC

1. Ensure your PC's Bluetooth is enabled.
2. On the controller, simultaneously press and hold the 'SHARE' button and the 'HOME' button for 3 seconds.
3. The controller's white light will begin to flash.
4. On your PC, navigate to your Bluetooth settings. You should see the controller listed with the Bluetooth name 'wireless controller'. Select it to pair.

OPERATING INSTRUCTIONS

Basic Controls



Figure 5: Controller Layout and Button Functions
 Familiarize yourself with the controller's layout:

Share Button: Used for sharing gameplay content.

Light Bar: Indicates controller status and player assignment.

Options Button: Accesses in-game menus and options.

D-pad: Directional input.

Left Joystick: Primary movement control.

Right Joystick: Camera control and aiming.

Action Buttons (Triangle, Circle, Cross, Square): Perform various in-game actions.

3.5mm Headphone Port: Connect compatible headsets for audio and communication.

RB/LB (Right/Left Bumper): Top shoulder buttons.

RT/LT (Right/Left Trigger): Bottom shoulder triggers.

USB Charging Jack: For charging the controller.

Turbo Function

The Turbo function allows you to rapidly press a button by holding it down, which can be useful for certain in-game actions.

1. **To Customize a Turbo Key:** Hold down the 'SHARE' key, then press the button you wish to set as a Turbo key.
2. **To Adjust Turbo Frequency:** Hold down the 'SHARE' key, then move the right joystick up or down. There are three adjustable frequency gears.

Audio Port

The integrated 3.5mm audio jack allows you to connect your gaming headset directly to the controller for in-game audio and voice chat.

CHARGING

The AceGamer Wireless Controller is equipped with a built-in 800mAh Lithium Ion battery. To charge the controller, connect the provided USB-C charge cable to the USB Charging Jack on the controller and plug the other end into a compatible USB power source (e.g., PS4 console, PC, or USB wall adapter).

The light bar on the controller will indicate charging status (e.g., pulsing light) and will turn off or change color when fully charged.

MAINTENANCE & CARE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.
- Do not attempt to disassemble or modify the controller, as this will void the warranty.

TROUBLESHOOTING

If you encounter issues with your AceGamer Wireless Controller, please refer to the following common solutions:

- **Controller Not Connecting/Responding:**
 - Ensure the controller is fully charged.
 - For initial PS4 connection, use the provided USB-C cable and follow the setup steps.
 - For PC connection, ensure Bluetooth is enabled and follow the 'SHARE + HOME' pairing method.
 - Try resetting the controller by inserting a small pin into the reset hole (usually located near the L2 button) for 3-5 seconds.
- **Buttons/Joysticks Not Responding Correctly:**

- Ensure the controller is properly connected.
- Clean around the buttons and joysticks to remove any debris.
- If the issue persists, contact customer support.

- **No Audio from Headphone Jack:**

- Ensure your headset is fully plugged into the 3.5mm port.
- Check your console's audio settings to ensure output is directed to the headset.

SPECIFICATIONS

Feature	Detail
Model	V2 Gamepad Joystick (Galaxy)
Brand	AceGamer
Compatibility	PS4, PS4 Pro, PS4 Slim, Windows PC
Connectivity	Wireless (Bluetooth), Wired (USB-C)
Battery Capacity	800mAh Lithium Ion (Included)
Input Voltage	DC 5V 0.5A
Dimensions	6.46 x 4.49 x 2.76 inches
Item Weight	11.36 ounces
Manufacturer	AceGamer
Country of Origin	China

WARRANTY & SUPPORT

AceGamer specializes in providing high-quality customized controllers for game lovers. We are committed to ensuring your satisfaction with our products.

If you encounter any problems or have questions regarding your AceGamer Wireless Controller, please do not hesitate to contact our customer support team. We aim to reply to all messages within 24 hours to provide prompt assistance.

For support, please refer to the contact information provided on the product packaging or the official AceGamer website.