

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sun Joe](#) /

› [Sun Joe SPX4600-MAX Electric Pressure Washer Instruction Manual](#)

## Sun Joe SPX4600-MAX

# Sun Joe SPX4600-MAX Electric Pressure Washer Instruction Manual

Model: SPX4600-MAX | Brand: Sun Joe

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Sun Joe SPX4600-MAX High Performance Brushless Induction Electric Pressure Washer. Please read this manual thoroughly before operating the unit and keep it for future reference.

The Sun Joe SPX4600-MAX is designed for tackling tough home, outdoor, and auto cleaning tasks. It features a powerful 14.5-amp induction motor, a 1-gallon onboard detergent tank, and a Total Stop System (TSS) for energy efficiency and extended pump life.

## 2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Grounding instructions:** This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.
- **GFCI protection:** The pressure washer is equipped with a Ground Fault Circuit Interrupter (GFCI) in the power cord. This provides additional protection from the risk of electric shock.
- **Keep clear:** Keep the operating area clear of all persons, especially children and pets.
- **Wear safety gear:** Always wear appropriate eye protection (safety glasses) and hearing protection.
- **Avoid direct spray:** Never direct the water stream at people, pets, or electrical devices.
- **Water supply:** Ensure the water supply is clean and free of debris. Do not use hot water.
- **Extension cords:** If an extension cord is used, ensure it is rated for outdoor use and has a GFCI.
- **Unplug when not in use:** Always unplug the pressure washer from the power outlet when not in use or before performing any maintenance.

## 3. PACKAGE CONTENTS

Upon opening the package, ensure all items listed below are present and undamaged. If any items are missing or damaged, do not operate the unit and contact customer support.

- Sun Joe SPX4600-MAX Electric Pressure Washer Unit
- 34-inch Extension Wand
- 20-foot High Pressure Hose
- 35-foot Power Cord with GFCI Protection
- Garden Hose Adapter
- Needle Clean-out Tool
- Quick-Connect Spray Tips (0°, 15°, 25°, 40°, and Soap)
- Instruction Manual

## **4. SETUP AND ASSEMBLY**

---

Follow these steps to assemble and prepare your pressure washer for first use.

### **4.1 Unpacking and Initial Inspection**

Carefully remove all components from the packaging. Inspect each part for any signs of damage. If damage is found, do not proceed with assembly or operation.

### **4.2 Attaching the Handle and Wheels**

Attach the handle to the main unit frame using the provided hardware. Secure the wheels to the axle if they are not pre-assembled.



Figure 4.1: Fully assembled Sun Joe SPX4600-MAX pressure washer, showing the handle, wheels, and main unit.

#### 4.3 Connecting the High-Pressure Hose

Connect one end of the 20-foot high-pressure hose to the high-pressure outlet on the pressure washer unit. Ensure it is securely tightened. Connect the other end to the spray gun assembly.



Figure 4.2: Side view of the pressure washer with the high-pressure hose and spray wand connected.

#### 4.4 Connecting the Water Supply

Connect a standard garden hose (not included) to the water inlet on the pressure washer. Ensure the connection is tight to prevent leaks. Turn on the water supply fully before starting the unit.



Figure 4.3: Detailed view of the water inlet connection point on the pressure washer.

#### 4.5 Attaching Spray Tips

Select the desired quick-connect spray tip (0°, 15°, 25°, 40°, or soap) and firmly push it into the quick-connect collar on the spray wand until it clicks into place. Ensure it is securely seated before operating.



Figure 4.4: Storage area for the quick-connect spray tips on the pressure washer.

#### 4.6 Filling the Detergent Tank

For detergent application, fill the 1-gallon onboard detergent tank with a pressure washer safe detergent. Do not use bleach or solvents.



Figure 4.5: Front view of the pressure washer, highlighting the translucent detergent tank.

## 5. OPERATING INSTRUCTIONS

Once assembled and connected, follow these steps to operate your pressure washer.

### 5.1 Starting the Pressure Washer

1. Ensure the water supply is fully open.
2. Plug the GFCI-protected power cord into a suitable grounded electrical outlet.
3. Press the ON/OFF switch to the "ON" position.
4. Squeeze the trigger on the spray gun to release air and allow water to flow through the system until a steady stream is achieved. This primes the pump.



Figure 5.1: Top view of the pressure washer showing the power ON/OFF switch and other controls.

### 5.2 Using Spray Tips

The pressure washer comes with five quick-connect spray tips for various cleaning tasks:

- **0° (Red):** For concentrated, high-pressure cleaning of stubborn spots. Use with extreme caution.
- **15° (Yellow):** For intense cleaning of hard surfaces with a narrow fan spray.
- **25° (Green):** For general cleaning of most surfaces with a medium fan spray.
- **40° (White):** For gentle cleaning of delicate surfaces with a wide fan spray.
- **Soap (Black):** For applying detergent at low pressure.

Always change spray tips only when the pressure washer is off and the trigger is not engaged.

## 5.3 Applying Detergent

To apply detergent, ensure the soap (black) nozzle is attached. The pressure washer will automatically draw detergent from the onboard tank when this nozzle is in use. After applying detergent, switch to a high-pressure nozzle (e.g., 25° or 15°) to rinse the surface thoroughly.

## 5.4 Total Stop System (TSS)

The TSS automatically shuts off the pump and power when the trigger is not engaged. This saves energy, reduces noise, and prolongs the life of the pump. The unit will restart automatically when the trigger is squeezed again.

## 5.5 Shutting Down the Pressure Washer

1. Turn the ON/OFF switch to the "OFF" position.
2. Turn off the water supply.
3. Squeeze the spray gun trigger to release any remaining pressure in the system.
4. Disconnect the garden hose from the unit.
5. Unplug the power cord from the electrical outlet.

# 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

## 6.1 Cleaning the Nozzles

If a nozzle becomes clogged, use the provided needle clean-out tool to clear any debris. Insert the tool into the nozzle opening and gently push to dislodge obstructions. Rinse the nozzle with water.

## 6.2 Water Inlet Filter

Periodically check the water inlet filter for debris. Remove and rinse it under running water if necessary. A clogged filter can restrict water flow and reduce performance.

## 6.3 Storage

Before storing, especially in freezing temperatures, ensure all water is drained from the pump, hose, and spray gun. Run a pump protector or non-toxic antifreeze through the system to prevent damage from freezing. Store the unit in a dry, protected area.

# 7. TROUBLESHOOTING

---

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in; GFCI tripped; ON/OFF switch off; Low voltage.	Plug in cord; Reset GFCI; Turn switch ON; Check power supply.
No water pressure	Water supply off; Kinked hose; Clogged nozzle; Air in pump.	Turn on water; Straighten hose; Clean nozzle; Squeeze trigger to purge air.
Pulsating pressure	Air in pump; Insufficient water supply; Clogged nozzle.	Purge air; Ensure full water flow; Clean nozzle.
Detergent not dispensing	Soap nozzle not attached; Detergent tank empty; Clogged detergent line.	Attach black nozzle; Fill tank; Clear line.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	SPX4600-MAX
Brand	Sun Joe
Motor	14.5 Amp / 2,000 W Induction Motor
Power Source	Corded Electric
Hose Length	20 Feet (High Pressure)
Power Cord Length	35 Feet (with GFCI protection)
Detergent Tank Volume	1 Gallon
Product Dimensions (L x W x H)	17.3" L x 14.7" W x 24" H
Item Weight	50.9 pounds
Safety Certification	CSA

## 9. WARRANTY AND SUPPORT

Your Sun Joe SPX4600-MAX pressure washer comes backed by a complete 2-year warranty, ensuring continuous and reliable performance.

For customer support, technical assistance, or warranty claims, please visit the official Sun Joe website or refer to the contact information provided with your purchase documentation.

You can also find more information and support resources by visiting the [Sun Joe Store on Amazon](#).

	<p><a href="#"><b>Sun Joe SPX4600-MAX Electric Pressure Washer Operator's Manual</b></a></p> <p>Comprehensive operator's manual for the Sun Joe SPX4600-MAX electric pressure washer, covering safety instructions, product features, technical data, assembly, operation, and maintenance.</p>
	<p><a href="#"><b>Sun Joe Pressure Washer Auto Cleaning System Accessories &amp; Guides</b></a></p> <p>Comprehensive guide to Sun Joe pressure washer accessories, including adapters, brushes, and nozzles, along with assembly instructions and warranty information. Compatible with various Sun Joe pressure washer models like SPX-ACS-MAX.</p>
	<p><a href="#"><b>Snow Joe &amp; Sun Joe Pressure Washer Accessories - Assembly Guides and Warranty Information</b></a></p> <p>Comprehensive assembly quick guides for Snow Joe and Sun Joe pressure washer accessories, including rotating surface cleaners, extension spray wands, gutter cleaning attachments, turbo head spray nozzles, and splash guard brushes, along with warranty details.</p>
	<p><a href="#"><b>Sun Joe SPX4600-RM Electric Pressure Washer Operator's Manual</b></a></p> <p>Comprehensive operator's manual for the Sun Joe SPX4600-RM electric pressure washer, detailing safety instructions, assembly, operation, maintenance, and troubleshooting for efficient residential cleaning.</p>
	<p><a href="#"><b>Sun Joe SPX2688-MAX-RM Electric Pressure Washer: Operator's Manual</b></a></p> <p>Explore the Sun Joe SPX2688-MAX-RM electric pressure washer with this comprehensive operator's manual. Learn about safe operation, assembly, maintenance, and troubleshooting for efficient cleaning.</p>
	<p><a href="#"><b>Sun Joe SPX2598-MAX 13A Electric Pressure Washer Operator's Manual</b></a></p> <p>This operator's manual provides essential safety instructions, product details, and operating guidelines for the Sun Joe SPX2598-MAX 13A Electric Pressure Washer. Learn about proper usage, maintenance, and safety precautions for effective and safe operation.</p>

Documents - Sun Joe – SPX4600-MAX



## Sun Joe SPX4600-MAX Electric Pressure Washer Operator's Manual

Comprehensive operator's manual for the Sun Joe SPX4600-MAX electric pressure washer, covering safety instructions, product features, technical data, assembly, operation, and maintenance.

lang:en score:44 filesize: 9.13 M page\_count: 56 document date: 2020-10-20



## [pdf] User Manual Instructions Label

snowjoe OPERATORS MANUAL Model SPX4600 MAX RM Form No SJ 880E V1 R ELECTRIC PRESSURE WASHER 3000 PSI MAX\* 1 3 GPM 14 5 AMP HOSE HOLDER 2 IMPORTANT! Safety Instructions All Operators Must Read These Before Use m WARNING! This indicates a hazardous situation which if not avoided could result in death or serious ENG files product manuals

RRR R OOPPEERRAATTOORR S MMAANNUUALL

OPAAEDDiRvviissAiiooTnnOooffRSSn nSoowwMJJooAeeN,, LULLLACCL ...

NLRPEAL PRAHESSODURASEETPESHTTIENOGRLSDER MMooddeell

S2SP4PXVX2-3A50J90C80-L--MRTEMA-RXM-RM Model **SPX4600-MAX-RM**

FoFromrmNFoNr.omS. JSN-JSo-P.2S4XVJ2-5AS9JP8CX-M-3L0AT0XE0--RRMM--888800EE--VV11 For...

lang:en score:44 filesize: 3.52 M page\_count: 20 document date: 2020-06-15