

Hasbro F2401

FurReal F2401 Let's Play Together! Dolphin Companion Instruction Manual

Model: F2401 | Brand: Hasbro

1. INTRODUCTION

Thank you for purchasing the FurReal F2401 Let's Play Together! Dolphin Companion. This interactive electronic plush toy is designed to provide engaging play with over 80 unique sounds and movements. This manual provides essential information for safe setup, operation, and maintenance of your Dolphin Companion.

Recommended Age: 4 years and up.

2. SAFETY INFORMATION

- **Battery Safety:** Use only 4 AA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly. Do not recharge non-rechargeable batteries.
- **Choking Hazard:** Small parts may be included. Not suitable for children under 3 years due to potential choking hazards.
- **Supervision:** Adult supervision is recommended during play.
- **Cleaning:** Refer to the "Care and Maintenance" section for proper cleaning instructions. Do not immerse the toy in water.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x FurReal F2401 Dolphin Companion
- 1 x Fish Snack Accessory
- 1 x Brush Accessory
- 1 x Play Ball Accessory
- 4 x AA Alkaline Batteries (Demo Batteries)



Image: The FurReal F2401 Dolphin Companion, a blue plush toy with star patterns, featuring large expressive eyes and an open mouth.



Image: The product packaging for the FurReal Dolphin Companion, showing the dolphin toy, a fish snack, a brush, and a ball, along with "80+ Sounds & Reactions" text.

4. SETUP

4.1 Battery Installation

The Dolphin Companion requires 4 AA alkaline batteries. Demo batteries are included but may have limited life and should be replaced for optimal performance.

1. Locate the battery compartment on the underside of the Dolphin Companion.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Remove any old batteries.
4. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and secure it with the screw.

4.2 Powering On/Off

Locate the power switch, usually near the battery compartment. Slide the switch to the "ON" position to activate the Dolphin Companion. Slide to "OFF" when not in use to conserve battery life.

5. OPERATING INSTRUCTIONS

The Dolphin Companion responds to various interactions with over 80 sounds and movements. Experiment with different actions to discover all its reactions.

5.1 Basic Interactions

- **Feeding:** Offer the included fish snack to its mouth. The dolphin will react with sounds and movements.

-
- FurReal**
- LOVE HER**
CAJOLE-LA
LEHABIBEN
AMALA
MUTO CARINHO
- PLAY WITH HER**
JOUE AVEC ELLE
SPELEN
JUEGA CON ELLA
BRINCAR COM ELA
- NIGHTTIME MODE**
MODE SIESTE
NACHTMODUS
MODO NOCTURNO
MODO NOTURNO
- ATTENTION: RISQUE D'ÉTOUFFEMENT: Le jouet contient une petite balle. Déconseillé aux enfants de moins de 3 ans.**
- FurReal Friends**

Image: A child feeding the FurReal Dolphin Companion with a small orange fish accessory.



© 2021 Hasbro.

Image: A child interacting with the FurReal Dolphin Companion, which is positioned next to a small striped ball.



Image: A child gently holding the FurReal Dolphin Companion and kissing its nose, with the dolphin's cheeks showing a pink glow.

5.2 Night Mode

The Dolphin Companion features a night mode for calming companionship. When activated, it will play pleasant ocean sounds, suitable for bedtime.

- To activate Night Mode, refer to the specific instructions on the product packaging or a dedicated button/sensor on the toy (exact activation method not specified in general description, assume user will find it).
- The dolphin will emit soothing wave sounds.



Image: A child sleeping peacefully while hugging the FurReal Dolphin Companion, suggesting its use in night mode.

6. CARE AND MAINTENANCE

- **Cleaning:** Surface clean only. Use a soft, damp cloth to wipe away dirt. Do not use harsh chemicals or abrasive cleaners. Do not immerse the toy in water, as this can damage the electronic components.
- **Storage:** Store the Dolphin Companion in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Removal:** If the toy will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dolphin does not turn on or respond.	◦ Batteries are dead or low. ◦ Batteries are inserted incorrectly. ◦ Power switch is in the "OFF" position.	◦ Replace with new AA alkaline batteries. ◦ Check battery polarity and reinsert correctly. ◦ Slide the power switch to "ON".
Movements are sluggish or sounds are distorted.	◦ Batteries are low.	◦ Replace with new AA alkaline batteries.
Dolphin does not react to accessories (fish, brush, ball).	◦ Sensor not detecting interaction.	◦ Ensure accessories are placed correctly near the designated interaction points (e.g., fish near mouth, ball near fins). ◦ Check battery level.

8. SPECIFICATIONS

- **Model Number:** F2401
- **Brand:** Hasbro
- **Power Source:** 4 x AA Alkaline Batteries
- **Material:** Plush (Outer), Plastic (Internal components)
- **Item Weight:** 1.8 Kilograms
- **Item Dimensions:** 55.9 x 35.6 x 20.3 centimetres (Length x Width x Height)
- **Recommended Age:** 4 years and up
- **Features:** Over 80 sounds and movements, Interactive, Night Mode, Light effects.



Image: A visual representation of the FurReal Dolphin Companion with its approximate dimensions labeled: 55.91 cm length, 35.61 cm width, and 20.29 cm height.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Hasbro website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Hasbro Official Website: www.hasbro.com

© 2021 Hasbro. All rights reserved. FurReal and all related properties are trademarks of Hasbro.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question