



Manuals.plus /

- › KODAK /
- › KODAK PIXPRO AZ405 Digital Camera User Manual

KODAK AZ405-BK

KODAK PIXPRO AZ405 Digital Camera User Manual

Model: AZ405-BK | Brand: KODAK

INTRODUCTION

Passion and performance go hand in hand with our KODAK PIXPRO AZ405 digital camera from the Astro Zoom Collection. A 40X ultra long zoom lens with optical image stabilization delivers crisp, clear 20 megapixel close-ups, panorama or HD videos. Auto scene, object tracking, post-editing features and a host of powerful yet user-friendly settings make photography easy, fun and zero hassle. KODAK PIXPRO Digital Camera - Tell your story.



Front view of the KODAK PIXPRO AZ405 Digital Camera, showcasing its lens and ergonomic design.

WHAT'S IN THE BOX

Your KODAK PIXPRO AZ405 package includes the following items:

- KODAK PIXPRO AZ405 Digital Camera
- AA Alkaline Batteries (x4)
- USB Cable
- Neck Strap
- Lens Cap with Cord
- Quick Start Guide
- Warranty Card
- Service Card



All items included in the KODAK PIXPRO AZ405 retail box, neatly laid out.

Unboxing Video

Official unboxing video for the KODAK PIXPRO AZ405, demonstrating how to unpack and identify all included components.

SETUP

Inserting Batteries and SD Card


The KODAK PIXPRO AZ405 uses 4 AA alkaline batteries. To insert them, open the battery compartment located at the bottom of the camera. Ensure the batteries are inserted with the correct polarity (+/-) as indicated inside the compartment. The camera supports SD, SDHC, and SDXC cards up to 512GB. Insert the SD card into the dedicated slot next to the battery compartment until it clicks into place. Close the compartment cover securely.

A short video demonstrating the process of inserting batteries and an SD card into the camera, highlighting the compartment location and proper insertion technique.

OPERATING YOUR CAMERA

Optical Zoom (40X)

The AZ405 features a powerful 40X optical zoom lens, allowing you to capture distant subjects with clarity. Use the zoom lever around the shutter button to zoom in and out. Optical Image Stabilization (OIS) helps to minimize blur caused by camera shake, especially at longer zoom ranges.

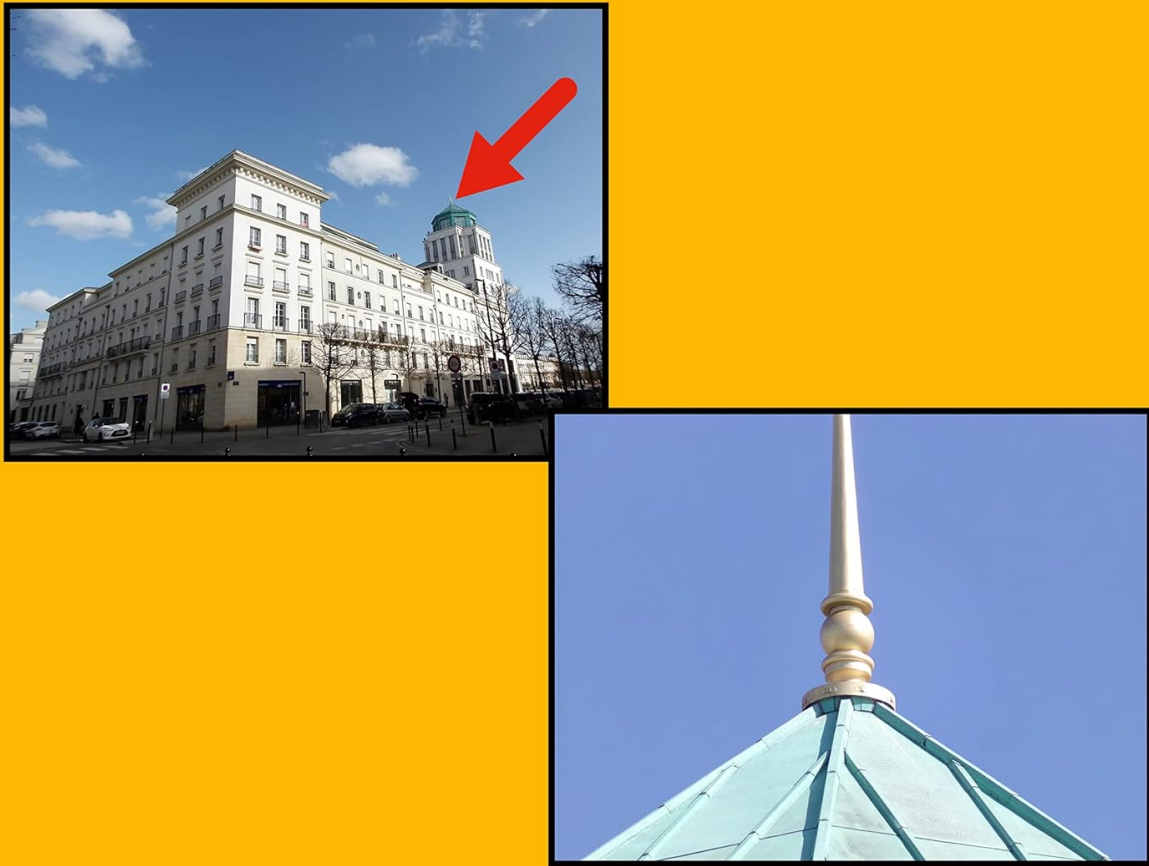

40X OPTICAL ZOOM

An image illustrating the impressive 40X optical zoom capability of the KODAK PIXPRO AZ405, showing a distant object brought into clear focus.

Optical Image Stabilization (OIS)

Equipped with Optical Image Stabilization, the AZ405 reduces the effects of camera shake, ensuring sharper images and smoother videos, even when shooting handheld or in challenging lighting conditions.



OPTICAL IMAGE STABILISATION



A visual representation of the camera's optical image stabilization feature, showing a steady shot despite potential movement.

Wide Angle Lens (24mm)

The 24mm wide-angle lens allows you to capture more of the scene, perfect for landscapes, group photos, and architectural shots. This broad perspective ensures you don't miss any details.



An image highlighting the 24mm wide-angle lens, demonstrating its ability to capture a broader field of view.

Panorama Capture

Utilize the panorama mode to stitch multiple photos together, creating stunning wide-angle panoramic images of landscapes or cityscapes.

PANORAMA



CAPTURE

A panoramic image captured with the KODAK PIXPRO AZ405, showcasing the camera's ability to create expansive landscape shots.

3" LCD Screen

Frame your shots and review your photos and videos on the bright 3-inch LCD screen. The clear display makes it easy to navigate menus and compose your images.



LCD SCREEN 3"

Rear view of the KODAK PIXPRO AZ405, showing the vibrant 3-inch LCD screen displaying an image.

MAINTENANCE

To ensure the longevity and optimal performance of your KODAK PIXPRO AZ405 camera, regular maintenance is recommended:

- **Lens Care:** Keep the lens clean using a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens surface with your fingers. Always use the provided lens cap when the camera is not in use to protect the lens from dust and scratches.
- **Body Cleaning:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water, but avoid excessive moisture.
- **Battery Storage:** If storing the camera for an extended period, remove the AA batteries to prevent leakage and corrosion.
- **Storage Conditions:** Store the camera in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

If you encounter any issues with your KODAK PIXPRO AZ405, please refer to the official user manual for detailed troubleshooting steps. Common issues often relate to battery life, SD card compatibility, or basic settings. Ensure your batteries are fresh and correctly inserted, and that your SD card meets the Class 10 or higher requirement and is no larger than 512GB.

For more in-depth solutions, please consult the comprehensive User Manual (PDF) available via the link below.

[Download User Manual \(PDF\)](#)

SPECIFICATIONS

Feature	Detail
Model Name	AZ405
Photo Sensor Resolution	20 MP
Optical Zoom	40 x
Video Resolution	1080p Full HD
Screen Size	3 Inches LCD
Image Stabilization	Optical
Lens Type	24mm Wide Angle
Battery Type	4 AA Alkaline Batteries
Flash Memory Type	SDHC (up to 512GB)
Connectivity Technology	Wired, Wireless (Wi-Fi)
Item Weight	15.37 Ounces

WARRANTY AND SUPPORT

Your KODAK PIXPRO AZ405 Digital Camera comes with a **1-year manufacturer warranty**. For any warranty claims or technical support, please refer to the contact information provided in your Warranty Card or Service Card included in the box.

Additionally, Amazon offers a **30-day refund/replacement return policy** for this product.

For further assistance or to access the full user guide, please use the links below:

- [User Guide \(PDF\)](#)
- [User Manual \(PDF\)](#)

