

IPRO A6 mini

IPRO A6 mini Dual SIM Feature Phone User Manual

Model: A6 mini

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your IPRO A6 mini Dual SIM Feature Phone. Please read this manual thoroughly before using the device and keep it for future reference.

The IPRO A6 mini is a compact and reliable feature phone designed for basic communication needs, offering dual SIM capability, FM radio, and a flashlight function.

PACKAGE CONTENTS

- IPRO A6 mini Feature Phone
- BL-5C Li-ion Battery (600mAh or 800mAh)
- Charger
- User Manual

DEVICE OVERVIEW



Image 1: Front and back view of the IPRO A6 mini feature phone. The front displays the 1.8-inch screen above a numeric keypad with navigation buttons. The back panel features a small camera lens and a speaker grille at the top.

The IPRO A6 mini features a compact design with a 1.8-inch display and a traditional numeric keypad. It supports dual SIM cards for flexible network usage.

- **Front:** 1.8-inch display, navigation keys, call/end keys, numeric keypad.
- **Back:** Camera, speaker.
- **Sides:** Charging port, headphone jack (location may vary).

SETUP

1. Inserting SIM Cards and Battery

1. **Remove the back cover:** Gently pry open the back cover from the notch usually located at the bottom or side of the phone.
2. **Insert SIM cards:** Locate the SIM card slots. This phone supports dual SIM. Carefully insert your SIM cards into the designated slots with the gold contacts facing down. Ensure they are properly seated.
3. **Insert MicroSD card (optional):** If you wish to expand storage, insert a MicroSD card into its dedicated slot.
4. **Insert the battery:** Place the BL-5C Li-ion battery into the battery compartment, ensuring the gold contacts on the battery align with the contacts in the phone.
5. **Replace the back cover:** Align the back cover and press it firmly until it clicks into place.

2. Charging the Battery

Before first use, fully charge the battery. Connect the charger to the phone's charging port and plug it into a power outlet. The battery indicator on the screen will show charging progress. Disconnect the charger once the battery is full.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the Power/End Call key (**red button**) until the phone vibrates and the screen lights up.
- **To Power Off:** Press and hold the Power/End Call key until the power off options appear, then select "Power off".

Making Calls

1. From the idle screen, enter the phone number using the keypad.
2. Press the Call key (**green button**) to dial.
3. To end a call, press the Power/End Call key.

Sending SMS

1. Go to "Menu" > "Messages" > "Write message".
2. Enter your message using the keypad.
3. Enter the recipient's number or select from contacts.

- 4. Select "Send".

Using FM Radio

The phone supports FM radio. You may need to connect headphones (not included) to act as an antenna for optimal reception.

- 1. Go to "Menu" > "FM Radio".
- 2. Use the navigation keys to scan for channels or tune manually.

Using Flashlight

The phone includes a built-in flashlight.

- **To turn on/off:** Typically, press and hold the '0' key or a dedicated flashlight key (refer to your phone's specific key mapping).

MAINTENANCE AND CARE

- **Keep Dry:** Keep the phone dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- **Avoid Extreme Temperatures:** High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. Low temperatures can form moisture inside the phone, which can damage electronic circuit boards.
- **Handle Gently:** Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards and fine mechanics.
- **Clean Carefully:** Use a soft, clean, dry cloth to clean the surface of the phone. Do not use harsh chemicals, cleaning solvents, or strong detergents.
- **Battery Care:** Use only approved batteries and chargers. Do not short-circuit the battery. Do not dispose of batteries in fire.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Battery is low or depleted; Battery not inserted correctly.	Charge the battery; Re-insert the battery correctly.
Cannot make or receive calls	No network signal; SIM card not inserted correctly; SIM card expired or inactive.	Move to an area with better signal; Re-insert SIM card; Contact your network provider.
Poor call quality	Weak network signal; Interference.	Move to an area with better signal; Avoid areas with high electronic interference.
FM Radio not working	Headphones not connected (acting as antenna).	Connect wired headphones to the phone.

SPECIFICATIONS

- **Model:** A6 mini

- **Display:** 1.8-inch
- **Network:** GSM (2G)
- **SIM:** Dual SIM
- **RAM:** 32MB
- **Storage:** 32MB
- **Battery:** BL-5C Li-ion (600mAh or 800mAh)
- **Features:** FM Radio, Flashlight, Multi-media support
- **Color:** Black

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support or service inquiries, please contact your retailer or the authorized service center.

Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: IPRO

Documents - IPRO – A6 mini

no relevant documents