

[Manuals.plus](#) /

› [Sawgmore](#) /

› Sawgmore FC5230 Cordless Water Flosser User Manual

Sawgmore FC5230

Sawgmore Cordless Water Flosser User Manual

Model: FC5230



INTRODUCTION

Thank you for choosing the Sawgmore Cordless Water Flosser. This device is designed to provide effective oral cleaning, helping to remove food residue and improve gum health. This manual provides important information on how to set up, operate, and maintain your water flosser for optimal performance and longevity.

The Sawgmore FC5230 features a portable, battery-operated design with a 300ML water tank and multiple jet tips, making it suitable for daily use at home or while traveling.

SAFETY INFORMATION

- Do not immerse the main unit in water. The device is IPX6 waterproof for splashes, but not for submersion.
- Keep out of reach of children.
- Do not use if the device or power cord is damaged.
- Use only as directed for oral hygiene.
- Ensure the battery compartment is sealed properly after battery installation.
- Do not use abrasive cleaners or harsh chemicals on the device.

PRODUCT OVERVIEW

The Sawgmore Cordless Water Flosser consists of the main unit, a removable water tank, and interchangeable jet tips.



Figure 1: Main components of the Sawgmore Cordless Water Flosser, including the device, three jet tips, and AA batteries.

Components:

- **Main Unit:** Contains the motor, battery compartment, and control button.
- **Water Tank:** Detachable 300ML capacity for water.
- **Jet Tips:** Standard nozzles for general cleaning.
- **Power Button:** For turning the device on and off.
- **Jet Tip Release Button:** To detach the nozzle.

SETUP

1. Battery Installation

1. Locate the battery compartment at the bottom of the main unit.
2. Twist the battery cover counter-clockwise to unlock and remove it.
3. Insert 3 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.

4. Replace the battery cover and twist clockwise to lock it securely.



Figure 2: Correct battery installation with polarity indicators.

2. Attaching the Jet Tip

1. Select a desired jet tip.
2. Insert the stem of the jet tip into the opening at the top of the main unit until it clicks into place.
3. To remove, press the jet tip release button on the side of the unit and pull the tip out.

3. Filling the Water Tank

1. Detach the water tank from the main unit by pulling it downwards.
2. Fill the tank with lukewarm water. Do not use hot water.
3. Reattach the water tank to the main unit, ensuring it is firmly seated.

Easy to Fill and clean



Figure 3: Steps for detaching, filling, and reattaching the water tank.

OPERATING INSTRUCTIONS

1. First Use

For first-time use or after extended storage, fill the water tank and run the device until water flows through the nozzle to prime the pump.

2. Daily Use

1. Lean over a sink and place the jet tip into your mouth, aiming at your gumline.
2. Press the power button to turn on the device.
3. Guide the water stream along your gumline, pausing briefly between teeth.
4. The jet tip can be rotated 360° to reach all areas of your mouth. To rotate, simply turn the tip while it is inserted.
5. The device will automatically stop after 90 seconds of continuous operation to conserve battery life and

prevent overheating.

6. Press the power button again to turn off the device when finished.



Figure 4: The 360° rotatable nozzle allows for easy access to all areas of the mouth.

MAINTENANCE

1. Cleaning the Water Tank

After each use, detach the water tank and empty any remaining water. Rinse the tank thoroughly with clean water. The removable design facilitates easy cleaning.

2. Cleaning the Jet Tips

Remove the jet tip after use and rinse it under running water. For deeper cleaning, tips can be soaked in a denture cleaning solution or a mixture of water and white vinegar periodically.

3. Cleaning the Main Unit

Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or submerge the unit in water.

4. Storage

Store the water flosser in a cool, dry place. If storing for an extended period, remove the batteries to prevent leakage.



Figure 5: The compact design makes the water flosser suitable for travel and easy storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries or check polarity.

Problem	Possible Cause	Solution
Weak water pressure.	Low battery power; water tank is empty; nozzle is clogged.	Replace batteries; refill water tank; clean the nozzle.
Water leakage.	Water tank not properly attached; battery cover not sealed.	Ensure water tank is firmly seated; securely lock the battery cover.
Device stops unexpectedly.	Automatic 90-second shut-off; low battery.	This is normal operation; replace batteries if power is low.

SPECIFICATIONS

- **Model:** FC5230
- **Power Source:** 3 x AA Batteries
- **Water Tank Capacity:** 300ML
- **Water Pressure:** 90 PSI
- **Water Pulse Frequency:** 1250 times/minute
- **Automatic Shut-off:** 90 seconds
- **Waterproof Rating:** IPX6
- **Dimensions:** 7.2 x 5.6 x 21 cm
- **Weight:** 372 g
- **Material:** Plastic

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or any questions regarding your Sawgmore Cordless Water Flosser, please contact the retailer or manufacturer directly. Please retain your proof of purchase for warranty purposes.

