

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Zebronics](#) /

› [Zebronics ZEB-PARADISE Wireless Headphone User Manual](#)

Zebronics ZEB-PARADISE

Zebronics ZEB-PARADISE Wireless Headphone User Manual

Model: ZEB-PARADISE

1. PRODUCT OVERVIEW

The Zebronics ZEB-PARADISE is a versatile wireless headphone designed for an immersive audio experience. It features Bluetooth connectivity, an AUX input, Micro SD card support, and an FM radio function, providing multiple ways to enjoy your music and manage calls.



Image 1: Zebronics ZEB-PARADISE Wireless Headphone. This image displays the over-ear design of the headphone, highlighting its sleek appearance and comfortable earcups.

2. PACKAGE CONTENTS

Please check the box for the following items:

- 1 Unit Headphone
- 1 Unit Charging Cable
- 1 Unit Aux Cable



Image 2: Packaging of the Zebronic ZEB-PARADISE Wireless Headphone. This image shows the product box, detailing the package contents and key features printed on the packaging.

3. SAFETY INFORMATION

Caution:

Please be aware of your surroundings while using the headphone. Constant exposure to high volume may damage your hearing. Please use the headphone at moderate volume to protect your ears.

4. KEY FEATURES

- Bluetooth v4.2 Connectivity
- AUX Input for Wired Connection
- Micro SD Card Support for MP3 Playback
- FM Radio Function
- Call Function with Built-in Microphone
- Media Volume Control
- Dual Pairing Capability
- 40mm Audio Drivers
- Built-in Rechargeable Battery
- Fast Charging Support

5. SETUP

5.1 Charging the Headphone

1. Connect the provided USB charging cable to the charging port on the headphone.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate to show charging status. It will typically turn off or change color once fully charged.

5.2 Bluetooth Pairing

1. Ensure the headphone is fully charged.
2. Press and hold the Power button on the headphone until the LED indicator flashes blue and red, indicating pairing mode.
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings and search for available devices.
4. Select "ZEB-PARADISE" from the list of found devices.
5. Once paired, the LED indicator will flash blue slowly or remain solid blue.

5.3 Using the AUX Cable

1. Connect one end of the provided 3.5mm AUX cable to the AUX input port on the headphone.
2. Connect the other end of the AUX cable to the 3.5mm audio output jack of your audio device.
3. The headphone will automatically switch to AUX mode.

6. OPERATING INSTRUCTIONS

6.1 Basic Controls

- **Power On/Off:** Press and hold the Power button.
- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up/Next Track:** Press the Volume Up (+) button to increase volume. Press and hold to skip to the next track.
- **Volume Down/Previous Track:** Press the Volume Down (-) button to decrease volume. Press and

hold to go to the previous track.

- **Mode Switch:** Press the 'M' button to switch between Bluetooth, FM Radio, and Micro SD modes.

6.2 Call Function

- **Answer Call:** Press the Play/Pause button once when a call comes in.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds when a call comes in.
- **Redial Last Number:** Double-press the Play/Pause button.

6.3 FM Radio Mode

1. Switch to FM Radio mode using the 'M' button.
2. Press the Play/Pause button once to auto-scan and save available FM channels.
3. Use the Volume Up (+) and Volume Down (-) buttons to navigate between saved channels.

6.4 Micro SD Card Playback

1. Insert a Micro SD card (with MP3 files) into the designated slot on the headphone.
2. Switch to Micro SD mode using the 'M' button.
3. Music playback will start automatically. Use the control buttons for play/pause, next/previous track, and volume adjustment.

7. MAINTENANCE

- Clean the headphone with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid exposing the headphone to extreme temperatures, humidity, or direct sunlight.
- Store the headphone in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the headphone yourself, as this will void the warranty.

8. TROUBLESHOOTING

- **No Power:** Ensure the headphone is fully charged. Connect it to a power source using the charging cable.
- **Cannot Pair via Bluetooth:** Make sure the headphone is in pairing mode (flashing blue and red LED). Ensure Bluetooth is enabled on your device and it is within range. Try restarting both devices.
- **No Sound:** Check the volume level on both the headphone and your connected device. Ensure the correct mode (Bluetooth, AUX, SD) is selected. If using AUX, ensure the cable is fully inserted.
- **FM Radio Not Working:** Ensure you are in an area with good FM signal. Perform an auto-scan to save channels.
- **Micro SD Card Not Playing:** Ensure the Micro SD card is inserted correctly and contains compatible audio files (e.g., MP3).

9. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	ZEB-PARADISE

Connectivity	Wireless (Bluetooth v4.2)
Included Components	Headphone, Charging Cable, Aux Cable, User Manual
Drivers	40mm
Battery	Built-in Rechargeable
Special Features	FM Radio, Micro SD Card Support, Call Function, Media Volume Control, Dual Pairing, Fast Charging
Headphone Jack	3.5 mm Jack
Form Factor	Over Ear
Color	Black
Manufacturer	Zebronics India Private Limited

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact customer support for detailed warranty terms and conditions.

10.2 Customer Support

For any complaints, feedback, or support inquiries, please contact:

Consumer Care Executive

Address: ZEBRONICS INDIA PRIVATE LIMITED, NO. 118, POONAMALLEE HIGH ROAD, CHENNAI-600084.

Telephone: 044-4000 0004

Email: ENQUIRY@ZEBRONICS.COM

You can also visit the official website: www.zebronics.com