

Manuals.plus /

› MEDION /

› MEDION S66004 DAB+ Plug-in Radio with Bluetooth User Manual

MEDION S66004

MEDION S66004 DAB+ Plug-in Radio with Bluetooth User Manual

Model: S66004 | Brand: MEDION

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your MEDION S66004 DAB+ Plug-in Radio with Bluetooth. Please read these instructions carefully before using the device and retain them for future reference.

The MEDION S66004 is a versatile plug-in radio offering digital DAB+ and analog FM radio reception, Bluetooth 5.0 for wireless audio streaming, a 2.4-inch color display, and convenient alarm functions.

2. SAFETY INFORMATION

- Ensure the device is connected to a power outlet with the correct voltage.
- Do not expose the radio to water, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device out of reach of children.
- Unplug the device during lightning storms or when unused for extended periods.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- MEDION Life MD43461 S66004 Plug-in Radio
- Instruction Manual
- Warranty Card

4. PRODUCT OVERVIEW

The MEDION S66004 features a compact design with a clear 2.4-inch color display and intuitive controls.



Image 4.1: Front View of MEDION S66004 Radio

This image displays the front of the MEDION S66004 radio, highlighting its 2.4-inch color display, the 'MODE', 'MENU', 'OK/II', 'SCAN', and back buttons, and the extendable telescopic antenna at the top. The MEDION logo is visible below the screen.

4.1. Controls and Display

The radio is equipped with 9 control buttons/elements for easy navigation and operation:

- **MODE Button:** Switches between DAB+, FM, and Bluetooth modes.
- **MENU Button:** Accesses the main menu for settings and options.
- **OK/II (Rotary Knob):** Confirms selections, plays/pauses audio, and rotates to navigate menus or adjust volume.
- **SCAN Button:** Initiates automatic station scanning in radio modes.

- **Back Button:** Returns to the previous menu or screen.
- **Telescopic Antenna:** For optimal radio signal reception.
- **2.4-inch Color Display:** Shows station information, time, menu options, and Bluetooth status.

5. SETUP

5.1. Initial Power-On

1. **Plug In:** Insert the MEDION S66004 radio directly into a standard wall power outlet.
2. **Antenna:** Extend the telescopic antenna fully for best reception.
3. **First Use:** Upon first power-on, the radio may automatically start scanning for DAB+ stations.



Image 5.1: Radio Plugged into Wall Socket

This image shows the MEDION S66004 radio plugged directly into a wall socket, demonstrating its plug-in design. The display shows "Digital Radio" and current station information, indicating it is ready for use.

5.2. Language Selection

If prompted, use the rotary knob to select your preferred language from the multilingual menu and press OK to confirm.

6. OPERATING INSTRUCTIONS

6.1. DAB+ Radio Mode

1. **Select Mode:** Press the **MODE** button until "DAB+" is displayed.
2. **Scan Stations:** If it's the first time or you want to update stations, press the **SCAN** button to perform an automatic station search. The radio will find and list available DAB+ stations.
3. **Select Station:** Use the rotary knob to scroll through the list of stations and press **OK** to select.
4. **Preset Stations:** To save a station, press and hold the **OK** button. Use the rotary knob to select a preset number (1-40) and press **OK** again to save.

6.2. FM Radio Mode

1. **Select Mode:** Press the **MODE** button until "FM" is displayed.
2. **Scan Stations:** Press the **SCAN** button for an automatic search (AMS). The radio will find and store available FM stations. For manual tuning, rotate the **OK** knob.
3. **Select Station:** Use the rotary knob to tune to a frequency or select from saved presets.
4. **Preset Stations:** To save a station, press and hold the **OK** button. Use the rotary knob to select a preset number (1-40) and press **OK** again to save.

6.3. Bluetooth Mode

Stream music wirelessly from your smartphone or tablet.

1. **Select Mode:** Press the **MODE** button until "Bluetooth" is displayed. The radio will enter pairing mode, indicated on the display.
2. **Pair Device:** On your smartphone or tablet, enable Bluetooth and search for "MEDION S66004" (or similar). Select it to pair.
3. **Play Music:** Once paired, you can play audio from your device, and it will stream through the radio. Use your device or the radio's rotary knob to adjust volume.

Draadloos muziek streamen

Je favoriete nummers comfortabel afspelen
vanaf je smartphone



Image 6.1: Bluetooth Music Streaming

This image illustrates the Bluetooth functionality, showing a smartphone playing music wirelessly, with the audio output directed to the MEDION S66004 radio in the background.

6.4. Alarm, Sleep Timer, and Snooze

The radio includes a dual alarm, sleep timer, and snooze function.

Wekker met praktische functies

Dubbel alarm, slaaptimer (sleeptimer)
en sluimerfunctie (snooze)



Image 6.2: Alarm Function Display

This image shows the MEDION S66004 radio's display featuring an analog clock, demonstrating its alarm capabilities. The radio is plugged into a wall socket in a bedroom or living room setting.

- **Setting Alarm:** Access the menu using the **MENU** button, navigate to "Alarm Settings," and follow the on-screen prompts to set Alarm 1 and Alarm 2 (time, source, volume).
- **Sleep Timer:** In the menu, select "Sleep Timer" to set a duration after which the radio will automatically turn off.
- **Snooze Function:** When an alarm sounds, press the **OK** button (or any other designated button) to activate snooze, pausing the alarm for a short period.
- **Time Display:** The radio supports 12/24 hour time display, configurable in the settings menu.

7. MAINTENANCE

- **Cleaning:** Disconnect the radio from the power outlet before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the device for an extended period, unplug it and keep it in a cool, dry place.

- **Antenna Care:** Handle the telescopic antenna gently to prevent damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Radio not properly plugged in. Power outlet not active.	Ensure the radio is securely plugged into a working power outlet. Test the outlet with another device.
Poor radio reception (DAB+/FM)	Antenna not extended. Weak signal area. Interference.	Fully extend the telescopic antenna. Reposition the radio to a location with better signal. Perform a new station scan.
Bluetooth pairing fails	Bluetooth not enabled on device. Radio not in pairing mode. Device too far.	Ensure Bluetooth is active on your smartphone/tablet. Set the radio to Bluetooth mode. Move your device closer to the radio (within 10m).
No sound	Volume too low. Mute activated.	Increase the volume using the rotary knob. Check if the device is muted.

9. SPECIFICATIONS

Feature	Detail
Brand	MEDION
Model	S66004 (MD 43461)
Tuner Technology	DAB+, FM (PLL)
Presets	80 (40 DAB+, 40 FM)
Bluetooth Version	5.0
Display	2.4-inch Color Display
Output Wattage	3 Watt
Power Source	Electric Corded (Plug-in)
Dimensions (L x W x H)	4.9 x 8.5 x 8.5 cm (without plug/antenna)
Weight	464 g
Special Features	Dual Alarm, Sleep Timer, Snooze, 12/24 Hour Time Display, Multilingual Menu



Image 9.1: Product Dimensions

This image provides a visual representation of the MEDION S66004 radio's dimensions, showing its width, height, and depth, with a clarification that these measurements exclude the plug and antenna.

10. WARRANTY AND SUPPORT

Your MEDION S66004 radio comes with a warranty. Please refer to the included warranty card for specific terms and conditions applicable to your region.

For technical support, troubleshooting assistance, or service inquiries, please contact MEDION customer service. Our dedicated customer service team is available to assist you.

You can find contact information on the MEDION website or on your warranty card.

© 2023 MEDION. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0BLP1G421>

More documents and user manuals: <https://manuals.plus/>