

[Manuals.plus](#) /

> [Panasonic](#) /

> Panasonic ES-EY90-A503 Wet & Dry Epilator User Manual

Panasonic ES-EY90-A503

Panasonic ES-EY90-A503 Wet & Dry Epilator User Manual

Model: ES-EY90-A503

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Panasonic ES-EY90-A503 Wet & Dry Epilator. Please read all instructions carefully before use and keep this manual for future reference.

2. SAFETY INFORMATION

- Do not use the appliance if the cord or plug is damaged.
- Keep the appliance out of reach of children.
- This appliance is designed for personal use only.
- The appliance is waterproof and can be used in the shower or bath. However, ensure the charging port is dry before connecting the charger.
- Do not apply excessive pressure during epilation, as this may cause skin irritation.
- If you experience any skin irritation or discomfort, discontinue use immediately.

3. PRODUCT FEATURES

- **Extra-Wide 90° Flexible Head:** The epilator head pivots 90 degrees to effortlessly glide over skin, adapting to body contours for efficient hair removal, even in hard-to-reach areas. The wide head covers a larger area, allowing for faster and smoother epilation.



Image: A visual demonstration of the epilator's flexible head pivoting 90 degrees to adapt to body curves.

- **Double Disc with 60 Tweezers:** Equipped with a dual-disc system and 60 tweezers, this design captures more hair in a single pass, including short, fine hairs, ensuring thorough and rapid epilation.

UNE PEAU DOUCE en un seul passage



Grâce à la



DOUBLE RANGÉE DE DISQUE et les 60 pincettes



Image: The epilator head featuring the double disc system with 60 tweezers, designed to provide smooth skin in a single pass, shown alongside a woman with visibly smooth legs.

- **Short Hair Removal:** Effectively removes hairs as short as 0.5 mm, providing long-lasting smoothness.



Image: The epilator being used on a leg, illustrating its capability to effectively remove hairs as short as 0.5 mm.


- **Wet/Dry Functionality:** The waterproof design allows for comfortable use in the bath or shower. Using the epilator with shower gel can create a foam for a gentler experience.
- **3 Speed Settings and LED Light:** Choose from three modes (gentle, normal, powerful) to suit your preference and skin sensitivity. The integrated LED light illuminates difficult-to-see areas, ensuring no hair is missed.
- **Cordless Operation:** Provides freedom of movement during use with a 30-minute operating time on a full charge.
- **Pressure Sensor:** An intelligent sensor detects if too much pressure is applied, indicated by a blinking LED light, helping to prevent skin irritation.

4. COMPONENTS INCLUDED

The Panasonic ES-EY90-A503 epilator comes with a comprehensive set of accessories for full body care:

- Epilation Head
- Small Head (for sensitive areas)
- Protective Cap
- Shaver Head

- Pop-up Trimmer
- Bikini Comb
- Foot Care Head
- Sonic Exfoliation Brush
- Storage Pouch
- Cleaning Brush

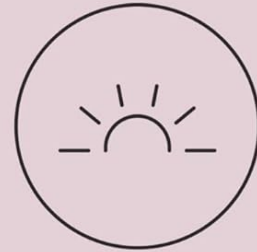

Lumière LED



Poignée ergonomique



Fonctionnement sans fil

Image: The Panasonic ES-EY90-A503 epilator shown with its main body and all included attachments: epilator head, small head, protective cap, shaver head, bikini comb, foot care head, sonic exfoliation brush, and cleaning brush, alongside a storage pouch.

Tête brosse
exfoliante



Accessoire
peigne bikini



Tête
rasoir/tondeuse



Accessoire protecteur
de peau



Tête zones
sensibles premium



Tête pédicure

TÊTES ET ACCESSOIRES FOURNIS pour un soin du corps complet

Image: An illustration displaying the different heads and accessories provided with the epilator, including the exfoliation brush head, bikini comb attachment, shaver/trimmer head, skin protector attachment, sensitive area head, and pedicure head.

5. SETUP

5.1 Charging the Epilator

1. Ensure the epilator is turned off.
2. Connect the charging cord to the epilator and plug it into a power outlet.
3. The charging indicator light will illuminate. A full charge takes approximately 1 hour and provides up to 30 minutes of cordless operation.
4. Disconnect the charger once fully charged or before use. The epilator cannot be operated while charging.

5.2 Attaching/Detaching Heads

1. To attach a head, align it with the epilator body and push until it clicks into place.
2. To detach a head, press the release button (if applicable) and pull the head away from the body.

6. OPERATING INSTRUCTIONS

6.1 Preparing Your Skin

- For optimal results, prepare your skin by taking a warm shower or bath to open pores.
- For wet epilation, apply shower gel to the area to be epilated to create a rich foam, enhancing comfort and glide.

6.2 Epilation Process

1. Select the appropriate speed setting (gentle, normal, powerful) based on the area and your comfort level.
2. Hold your skin taut with one hand to facilitate easier and less painful hair removal.
3. Gently glide the epilator over the skin against the direction of hair growth.
4. The 90° flexible head will adapt to your body contours.
5. If the LED light blinks, you are applying too much pressure. Reduce pressure to avoid irritation.



UNE ÉPILATION DOUCE

grâce au capteur
de pression



La lumière LED clignote si
vous appuyez trop fort.


Image: The epilator in action, with an illustration showing the LED light blinking to indicate excessive pressure, promoting gentle epilation.



Waterproof*



Tête pivotante à 90°

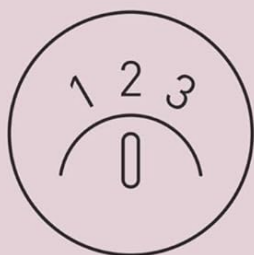

3 niveaux de vitesse



*IPX7

Image: The epilator being used in a bath, demonstrating its waterproof feature, 90° pivoting head for contour adaptation, and the selection of three speed levels.



Image: A woman using the Panasonic ES-EY90-A503 epilator on her leg, demonstrating the proper technique for hair removal.

6.3 Using Specific Attachments

- **Shaver Head:** Attach the shaver head for quick and close shaving. Use the pop-up trimmer for longer hairs before shaving.

- **Bikini Comb:** Use with the shaver head to trim hair to a uniform length in sensitive areas.
- **Foot Care Head:** Gently move the foot care head over dry, rough skin on your feet to remove calluses.



Image: The epilator equipped with the foot care head, being used to smooth the skin on a foot.

- **Sonic Exfoliation Brush:** Use on damp skin with your favorite cleanser to gently exfoliate and prepare skin for epilation or to prevent ingrown hairs.

7. MAINTENANCE

7.1 Cleaning the Epilator

1. After each use, turn off the epilator and detach the head.
2. Use the provided cleaning brush to remove any trapped hairs from the epilation discs or shaver blades.
3. Rinse the epilator head and body under running water. For thorough cleaning, you can use a mild soap.
4. Shake off excess water and allow all parts to air dry completely before reassembling or storing.



Image: A hand holding the epilator head under running water, demonstrating the ease of cleaning the waterproof device.

7.2 Storage

- Store the epilator and its accessories in the provided pouch in a dry place, away from direct sunlight and extreme temperatures.
- Ensure the epilator is fully dry before storing.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------|--|--|
| Epilator does not turn on. | Battery is depleted. | Charge the epilator for at least 1 hour. |
| Poor hair removal performance. | Epilator head is dirty or damaged. Incorrect epilation technique. | Clean the epilator head thoroughly. Ensure you are gliding against hair growth and holding skin taut. |

| Problem | Possible Cause | Solution |
|----------------------------|--|---|
| Skin irritation after use. | Excessive pressure applied. Skin not properly prepared. | Reduce pressure (check LED indicator). Use wet epilation with foam for sensitive skin. Prepare skin with warm water. |
| Epilator stops during use. | Battery is low. | Recharge the epilator. |

9. SPECIFICATIONS

Model Number: ES-EY90-A503

Power Source: Electric (Rechargeable Lithium-ion battery)

Battery Included: 1 Lithium-ion

Charging Time: Approximately 1 hour

Operating Time: Approximately 30 minutes

Voltage: 3.6 Volts

Water Resistance Level: Waterproof (IPX7)

Dimensions (L x W x H): 4.9 x 6.9 x 0.1 cm (Product); 850 grams (Weight)

Manufacturer: Panasonic

Country of Origin: China

10. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Panasonic website or contact your local Panasonic customer service center. Keep your proof of purchase for warranty claims.

You can visit the official Panasonic store on Amazon for more information: [Panasonic Store](#)