



Manuals.plus /

› Cutex /

› Cutex Foot Control Pedal C1019 User Manual for Janome S650, S750, and Necchi FB12 Sewing Machines

## Cutex C1019

# Cutex Foot Control Pedal C1019 User Manual

Compatible with Janome S650, S750, Necchi FB12, and other models

## INTRODUCTION

---

This manual provides essential instructions for the proper setup, operation, and maintenance of your Cutex C1019 Electric Foot Control Pedal. Designed for domestic sewing machines, this pedal offers reliable speed control for various sewing tasks. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

## PRODUCT OVERVIEW AND COMPATIBILITY

---

The Cutex C1019 is an electric foot control pedal designed to replace or upgrade the foot pedal for compatible sewing machine models. It includes the pedal unit and an integrated power cord with a standard electrical plug and a machine-specific connector.

### Part Numbers:

- Main Part Number: **C1019**
- Alternate Part Numbers: 032770111, A6401-775-ZA0, C1030

### Compatible Sewing Machine Models:

- **Bernette Models:** 134D, 2000D, 334, 334D, 334DS, 335, 335D, MO334, MO334D, MO334DS
- **Bernina Models:** 134, 2000D, 2500DCE, 334, 334D, 335
- **Janome Models:** S650, S750
- **Necchi Models:** FB12

## PARTS IDENTIFICATION

---

The Cutex C1019 Foot Control Pedal consists of the following main components:

- **Foot Pedal Unit:** The main rectangular unit with a textured surface for foot grip.
- **Integrated Power Cord:** Connects the pedal to the electrical outlet and the sewing machine.
- **Standard Electrical Plug:** A two-prong plug for connecting to a wall outlet.

- **Machine Connector:** A three-hole connector designed to fit the power input port on compatible sewing machines.



This image displays the Cutex C1019 foot control pedal, a rectangular black unit with a textured surface, connected to a black power cord. The cord includes a standard two-prong US electrical plug and a three-hole connector designed to attach to a sewing machine.

## SETUP INSTRUCTIONS

---

Follow these steps to properly connect your foot control pedal to your sewing machine:

1. **Ensure Power is Off:** Before connecting, make sure your sewing machine's power switch is in the OFF position and the machine is unplugged from the wall outlet.
2. **Locate Machine Power Input:** Identify the power input port on your sewing machine. This is typically located on the side or back of the machine.
3. **Connect Pedal to Machine:** Carefully align the three-hole connector of the foot pedal cord with the power input port on your sewing machine. Push firmly until it is securely seated. Do not force the connection.
4. **Plug into Wall Outlet:** Insert the standard two-prong electrical plug into a grounded wall outlet.
5. **Power On Machine:** Turn your sewing machine's power switch to the ON position.

Your Cutex C1019 Foot Control Pedal is now ready for use.

## OPERATING INSTRUCTIONS

---

The foot control pedal allows you to regulate the sewing speed of your machine. Pressing the pedal initiates sewing, and the pressure applied directly controls the speed.

- **Start Sewing:** Gently press down on the foot pedal with your foot. The machine will begin to sew.
- **Increase Speed:** Apply more pressure to the pedal to increase the sewing speed.
- **Decrease Speed:** Reduce pressure on the pedal to slow down the sewing speed.
- **Stop Sewing:** Release all pressure from the pedal to stop the machine.

Practice with scrap fabric to become familiar with the pedal's responsiveness and achieve desired speed control.

## MAINTENANCE

---

To ensure the longevity and proper function of your foot control pedal, follow these simple maintenance guidelines:

- **Keep Clean:** Wipe the pedal surface with a dry or slightly damp cloth to remove dust and debris. Avoid using harsh chemicals or abrasive cleaners.
- **Store Properly:** When not in use, store the pedal in a clean, dry place, away from direct sunlight or extreme temperatures. Coil the cord neatly to prevent kinks or damage.
- **Inspect Cord:** Periodically check the power cord and plugs for any signs of wear, cuts, or damage. If any damage is observed, discontinue use immediately and seek a replacement.
- **Avoid Liquid Exposure:** Do not expose the pedal to water or other liquids, as this can cause electrical damage.

## TROUBLESHOOTING

---

If you encounter issues with your foot control pedal, refer to the following table for common problems and solutions:

Issue	Possible Cause / Solution
Pedal does not respond / Machine does not sew	Ensure the pedal's machine connector is fully inserted into the sewing machine. Verify the electrical plug is securely in a working wall outlet. Check if the sewing machine's power switch is ON. Confirm the pedal is compatible with your specific sewing machine model.
Inconsistent speed control	Ensure the pedal is clean and free of debris that might obstruct its mechanism. Check for any visible damage to the pedal or cord.
Burning smell or unusual noise	Immediately unplug the pedal and sewing machine from the power outlet. Do not attempt to use the pedal. Contact the manufacturer or a qualified technician.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

---

- **Product Type:** Electric Foot Control Pedal
- **Part Number:** C1019
- **Alternate Part Numbers:** 032770111, A6401-775-ZA0, C1030
- **Compatibility:** Domestic sewing machines (refer to compatibility list)
- **Power Connection:** Standard 2-prong US electrical plug
- **Machine Connection:** 3-hole connector

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage, technical support, or replacement parts, please refer to the original purchase documentation or contact Cutex customer service directly. Ensure you have your product model number (C1019) and purchase details available when contacting support.