Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Ingenuity /
- > Ingenuity InLighten 5-Speed Baby Swing (Model 13097) User Manual

Ingenuity 13097

Ingenuity InLighten 5-Speed Baby Swing (Model 13097) User Manual

Brand: Ingenuity

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Ingenuity InLighten 5-Speed Baby Swing, model 13097. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Ingenuity InLighten 5-Speed Baby Swing, Nally Owl design.

IMPORTANT SAFETY WARNINGS

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- · Always use the restraint system.
- This product is not intended for prolonged periods of sleep.
- Do not use this product once your child can sit up unaided or weighs more than 20 lbs (9 kg).
- Do not move or lift the product with the child inside.
- Always place the product on a flat, level surface.
- Keep children away from the product during assembly and disassembly.
- Do not use accessories or replacement parts other than those approved by the manufacturer.

- Ensure all locking devices are engaged before use.
- Keep the USB cord away from children to prevent strangulation hazards. Wall adapter is not included.

SETUP AND ASSEMBLY

Follow these steps to assemble your Ingenuity InLighten Baby Swing. Assembly is designed to be straightforward.

- 1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present according to the packing list (not provided in this document, refer to your product's packaging).
- 2. **Assemble Frame:** Connect the frame components securely. Ensure all connections click into place or are fastened as instructed in the detailed assembly guide (refer to the physical manual for step-by-step diagrams).
- 3. Attach Seat: Securely attach the swing seat to the assembled frame.
- 4. **Install Fabric Components:** Place the seat pad and any inserts onto the seat. Ensure the 5-point harness is correctly threaded through the designated slots.
- 5. **Connect Power:** Plug the included USB cord into the swing's power port. Connect the other end to a suitable USB wall adapter (not included).



Fold frame and use the handle and wheels to easily move around the house

Figure 2: The swing frame can be folded for easy movement using the integrated handle and wheels.

OPERATING INSTRUCTIONS

The Ingenuity InLighten Baby Swing offers multiple features to comfort and entertain your child.

Control Panel Functions



Only swing to offer overhead engaging light show

Figure 3: GentleTouch control pad and light-up mobile.

- Power Button: Turns the swing on/off.
- Swing Speed: Select from 5 different swing speeds to suit your child's preference.
- Melodies & Sounds: Choose from 20 preloaded melodies, white noise, or nature sounds.
- **Timer Settings:** Set the swing to operate for 30, 45, or 60 minutes.
- Light Show: Activate the overhead light show for visual stimulation.

Seat Adjustment

- Seat Rotation: The seat rotates 180 degrees, allowing the swing motion to occur in 3 different directions (side-to-side or front-to-back).
- Recline Positions: Adjust the seat to one of 2 recline positions for optimal comfort.



Seat Rotates 180 degrees and swings in 3 directions

Figure 4: The seat rotates 180 degrees for multi-directional swinging.

Harness System

Always secure your child with the 5-point safety harness before operating the swing. Adjust straps for a snug, comfortable fit.



Figure 5: Ensure the 5-point harness is properly fastened.

Tummy Time Mat

The removable owl-shaped insert can be used separately as a tummy time mat to encourage gross motor skill development.



Figure 6: The owl insert doubles as a tummy time mat.

CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your baby swing.

• Seat Pad Cleaning:

- a. Remove the seat pad from the frame.
- b. Fasten all buckles on the seat restraint and seat pad.
- c. Fasten all hook-and-loop patches to their corresponding patches.
- d. Machine wash with cold water on a gentle cycle. Do not use bleach.
- e. Tumble dry using low heat.
- Frame Cleaning: Wipe the metal and plastic parts of the frame with a soft, damp cloth and mild soap. Do not immerse the frame in water.

• Storage: When not in use, store the swing in a clean, dry place away from direct sunlight.





Machine-washable fabrics

Figure 7: The swing's fabrics are machine-washable for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your Ingenuity InLighten Baby Swing, refer to the following common solutions:

Problem	Possible Cause	Solution
Swing does not turn on or operate.	Not plugged in; loose connection; power adapter issue.	Ensure USB cord is securely plugged into the swing and a working USB wall adapter. Try a different adapter or outlet.
Swing motion is weak or inconsistent.	Child exceeds weight limit; obstruction; low power.	Verify child's weight is within the 20 lbs (9 kg) limit. Check for any obstructions. Ensure a stable power connection.

Problem	Possible Cause	Solution
Music/sounds cut out or are inconsistent.	Software glitch; power fluctuation.	Turn the swing off and on again. Ensure a stable power supply. If issues persist, contact customer support.

For further assistance, please contact Ingenuity Customer Support.

PRODUCT SPECIFICATIONS

• Model Number: 13097

• **Product Dimensions:** 34.25"D x 35.83"W x 38.58"H (87 x 91 x 98 cm)

• **Item Weight:** 9.97 pounds (4.53 kg)

• Maximum Weight Recommendation: 20 Pounds (9 kg)

• Maximum Age Recommendation: 9 months

• Material Type: Metal, Plastic, Fabric (57% Metal, 37% Plastic, 6% Fabric)

• Power Source: Corded Electric (USB cord included, wall adapter not included)

• Batteries Required: No

• Portability: Yes, with integrated handle and wheels

• Color: Nally Owl



Figure 8: Key product dimensions and usage limits.

WARRANTY AND CUSTOMER SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Ingenuity website. If you require assistance with assembly, operation, or troubleshooting that is not covered in this manual, please contact Ingenuity Customer Support.

Online Support: Visit the Ingenuity Store on Amazon for more product information and support resources.

User Manual (PDF): A downloadable PDF version of the user manual is available atthis link.

Related Documents - 13097

ingenuity Not lythen * Society Swing - Vas** Brightness Swings - Vas**

Ingenuity InLighten Soothing Swing - Van Elephant User Manual

User manual for the Ingenuity InLighten Soothing Swing in the Van Elephant design. Provides instructions on assembly, use, safety warnings, and care.



Ingenuity InLighten Soothing Swing - Nally™ User Manual and Safety Guide

Comprehensive guide for the Ingenuity InLighten Soothing Swing - Nally™. Includes assembly instructions, safety warnings, care and cleaning tips, and control module operation.



Ingenuity InLighten Soothing Swing - Kitt™ User Manual and Safety Guide

This comprehensive user manual provides detailed instructions for assembling, using, and caring for the Ingenuity InLighten Soothing Swing - Kitt™. It includes essential safety warnings, operational guidance for the control module, and maintenance tips, presented in English, Spanish, and French.



Ingenuity InLighten Soothing Swing - Dakota User Manual

This document provides comprehensive instructions for the Ingenuity InLighten Soothing Swing - Dakota, covering assembly, usage, safety precautions, and care instructions.



Ingenuity InLighten Bouncer - Nate: User Manual and Safety Guide

Comprehensive user manual for the Ingenuity InLighten Bouncer in the Nate design. Includes safety warnings, assembly instructions, care guide, battery information, and control unit operation for parents.



Ingenuity PowerAdapt ConvertMe Swing-2-Seat™ - Wimberly™ User Manual

Comprehensive user manual for the Ingenuity PowerAdapt ConvertMe Swing-2-Seat™ in the Wimberly™ fashion. Includes safety warnings, assembly instructions, battery information, care and cleaning guidelines, parts list, and operation details for the swing and vibration unit.

Documents - Ingenuity - 13097



[pdf] User Manual Instructions Guide Warranty

PM LTP UM D EA P K W 3 v02 2009 06 18 Printed Matter Light Technical Publications User Manual Dual branded format Portrait orientation Black printing Windows Adobe Indesign CS3 version 02 SKF Communication Support Centre BG Follower assembly Model 83366 83369 278964 and 278965Lincoln warrants the equipment manufac tured supplied by Lincoln to be free from defects in material workmanshipSKF LincolnIndustrialCorp 00015 INSTcdnimages opentip Docs MIS INST ||| Installation and maintenance guide Follower assembly Model 83366, 83369, 278964 and 278965 Date of ... ressure PowerMaster Service parts Item no. Part no. Qty. Description 1 34337 1 2 2 91957 1 3 13097 1 4 68411 1 5 38067 1 6 91954 1 7 278992 1 8 278962 1 1 Pump tube diameters * Indi...

lang:en score:16 filesize: 296.71 K page count: 4 document date: 2020-07-21



The Record Changer: Vintage Jazz Music & Record Reviews

Explore vintage jazz music, artist profiles, record reviews, and historical insights from 'The Record Changer' magazine, a definitive publication for jazz enthusiasts. lang:en score:13 filesize: 41.34 M page_count: 386 document date: 2014-09-17



Lafayette 1973 Catalog: Hi-Fidelity Audio Equipment

Explore the 1973 Lafayette catalog, featuring a wide range of 2-channel and 4-channel hi-fidelity audio equipment, including receivers, amplifiers, and SQ decoders. Discover the latest in audio technology from Lafayette Radio Electronics. lang:en score:8 filesize: 38.35 M page_count: 474 document date: 2019-02-26