

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZTE](#) /

› [ZTE Grand X View 4 K87 User Manual](#)

ZTE K87

ZTE Grand X View 4 K87 User Manual

Model: K87

INTRODUCTION

This manual provides essential information for the safe and efficient use of your ZTE Grand X View 4 K87 tablet. Please read this manual thoroughly before operating your device to ensure proper functionality and to prevent damage.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- ZTE Grand X View 4 K87 Tablet
- Charger
- USB Cable
- Quick Start Guide (if included)

DEVICE OVERVIEW

Familiarize yourself with the physical components of your tablet.



Figure 1: Front and Back of the ZTE Grand X View 4 K87 Tablet. The front displays the 8-inch screen with Android icons, while the back shows the ZTE branding and rear camera.



Figure 2: Side View of the ZTE Grand X View 4 K87 Tablet. This view highlights the placement of the power button and volume controls on the side of the device.

Physical Components:

- **Power Button:** Located on the side, used to turn the device on/off or wake/sleep the screen.
- **Volume Buttons:** Adjust the device's volume.
- **USB Type-C Port:** For charging and data transfer.
- **Headphone Jack:** For connecting wired headphones.
- **Front Camera:** For video calls and selfies (2MP).
- **Rear Camera:** For taking photos and videos (5MP).
- **SIM/MicroSD Card Slot:** For inserting a SIM card for mobile data and a MicroSD card for expandable storage.
- **Front-facing Stereo Speakers:** For audio output.

SETUP

1. Initial Power On

1. Press and hold the **Power Button** until the ZTE logo appears.
2. Follow the on-screen prompts to complete the initial setup wizard.

2. SIM Card and MicroSD Card Installation

The ZTE Grand X View 4 K87 supports a SIM card for mobile data connectivity and a MicroSD card for additional storage.

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Insert a SIM ejector tool or a small paperclip into the small hole next to the tray to open it.
3. Place the Nano-SIM card into the designated SIM slot with the gold contacts facing down.
4. Place the MicroSD card (up to 128GB) into the MicroSD slot.
5. Gently push the tray back into the tablet until it clicks into place.

3. Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap **Connect**.

OPERATING THE DEVICE

Basic Navigation

- **Tap:** Touch the screen once to select an item or open an application.
- **Touch and Hold:** Press and hold an item to access additional options or move it.
- **Swipe:** Drag your finger across the screen to scroll through lists or switch between screens.
- **Pinch-to-Zoom:** Place two fingers on the screen and pinch them together or spread them apart to zoom in or out.

Connecting to Mobile Data (APN Settings)

This tablet is GSM unlocked. For mobile data connectivity, you may need to configure the Access Point Name (APN) settings based on your carrier. Consult your mobile service provider for the correct APN settings.

1. Go to **Settings > Network & internet > Mobile network > Advanced > Access Point Names**.
2. Tap the **+** icon or **New APN** to add a new APN.
3. Enter the details provided by your carrier (e.g., Name, APN, Proxy, Port, Username, Password, Server, MMSC, MMS Proxy, MMS Port, MCC, MNC, Authentication type, APN type, APN protocol, APN roaming protocol, Bearer).
4. Save the APN settings and select the newly created APN.

Camera Usage

Your tablet features a 5MP rear camera and a 2MP front camera.

1. Open the **Camera** application.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera switch icon.
4. Explore various modes and settings within the camera app for creative effects.

Battery Management

The tablet is powered by a 4500 mAh battery, providing up to 9 hours of HD video playback.

- To charge, connect the USB Type-C cable to the tablet and the charger to a power outlet.
- Avoid extreme temperatures when charging or using the device.
- To optimize battery life, reduce screen brightness, disable unused features like Bluetooth or GPS, and close background applications.

Eye Care Mode



Eye Care Mode

Adaptive backlighting and blue light filtering helps reduce eye-strain and fatigue while protecting your eyes and sleep pattern.



Front-facing Stereo Speakers

For an immersive experience not typically available in portable devices

Figure 3: Eye Care Mode. This feature uses adaptive backlighting and blue light filtering to reduce eye strain and fatigue, promoting better sleep patterns.

The tablet features an Eye Care Mode that utilizes adaptive backlighting and blue light filtering. This helps reduce eye strain and fatigue, especially during prolonged use, and can contribute to better sleep patterns.

Front-facing Stereo Speakers



2GB RAM + 32GB Storage
MicroSD card expandable



Qualcomm 215 mobile platform

- First 64-bit 2-series
- First 64-bit CPU
- First Dual ISP
- First up to 13 Megapixel Camera
- First Full HD 1080p Video Capture
- First HD+ resolution display 1280 x 720
- First 5.5+ modern aspect ratio
- First DSP for Low Power
- First Audio and Sensor Processing
- First WiFi 802.11ac for fast connectivity
- First support for NFC payments on Android
- First 4G LTE
- Ultra HD Video Capture
- First Dual SIM with Dual Standby
- First 2.5D Glass
- First 800 mAh battery

1.3GHz Quad Core

Supports 4G LTE and a combination of features and performance – all without compromising battery life.



4500mAh Battery
Up to 9hrs of HD video playback



Front and Rear Cameras

5MP Rear-facing
2MP Front-facing
Creative Effects for photos and HD videos



Large 8" HD Display

1280x800 High Definition resolution for sharp, vibrant images, text and videos

Figure 4: Key Features Overview. This image highlights the tablet's front-facing stereo speakers for immersive audio, along with its 2GB RAM, 32GB storage, 4500mAh battery, Qualcomm processor, 5MP rear camera, 2MP front camera, and 8-inch HD display.

Experience immersive audio with the tablet's front-facing stereo speakers, designed to provide a richer sound experience not typically found in portable devices.

MAINTENANCE

Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Do not allow moisture to enter openings.

Software Updates

Keep your tablet's software up to date to ensure optimal performance and security. You can check for updates in **Settings > System > System update**.

Storage Management

Regularly manage your device's storage to maintain performance. You can view and manage storage in **Settings > Storage**. Consider moving large files to a MicroSD card or cloud storage.

TROUBLESHOOTING

Issue	Possible Solution
Device does not power on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, perform a forced restart by holding the power button for 10-15 seconds.
Cannot connect to Wi-Fi	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are entering the correct password. Try forgetting the network and reconnecting.
No mobile data connection	Verify that a valid SIM card is inserted and activated. Check APN settings (Access Point Names) as they may need to be configured manually for your carrier. Ensure mobile data is enabled in settings.
Tablet is slow or unresponsive	Close unused applications. Clear cache and data for problematic apps. Free up storage space. Restart the tablet. If issues persist, consider a factory reset (back up data first).
Apps are not working or crashing	Ensure apps are updated to their latest versions. Clear app cache and data (Settings > Apps & notifications > See all apps > [App Name] > Storage & cache). Reinstall the app. Note that some newer apps may not be fully compatible with Android 10.

SPECIFICATIONS

Feature	Detail
Model Name	ZTE Grand X View 4 (K87)
Display	8-inch HD (1280 x 800 pixels) Corning Gorilla Glass
Processor	Qualcomm Quad-core Processor (1300 MHz, ARM Cortex-A7, 32-bit)
RAM	2GB DDR3 SDRAM
Internal Storage	32GB ROM
Expandable Storage	MicroSD card slot (up to 128GB)
Operating System	Android 10 (Not Upgradable)

Feature	Detail
Rear Camera	5MP
Front Camera	2MP
Battery	4500 mAh (Up to 9 hours HD video playback)
Connectivity	4G LTE, Wi-Fi (802.11ac), Bluetooth, USB Type-C
Dimensions (LxWxH)	4.02 x 7.99 x 0.51 inches
Weight	1.39 pounds
Color	Grey

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official ZTE support website. Keep your proof of purchase for warranty claims.

ZTE Official Website: <https://www.zteusa.com/support/>

© 2024 ZTE Corporation. All rights reserved.

Related Documents - K87

	<p>ZTE GRAND X View 4 Tablet: Features, Specifications, and Overview</p> <p>Explore the ZTE GRAND X View 4 tablet, featuring an 8-inch HD display, 4630mAh battery, Qualcomm processor, and Android 10. Discover key selling points and technical specifications for this versatile device.</p>
	<p>ZTE Grand X View 3 User Manual: Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the ZTE Grand X View 3 tablet, covering setup, key functions, connectivity, app management, camera, safety guidelines, and troubleshooting. Learn to use your device effectively.</p>

	<p>MF993C User Manual</p> <p>ZTE MF993C 4G LTE Mobile Hotspot User Manual</p> <p>Get started with your ZTE MF993C 4G LTE mobile hotspot. This user manual provides essential information on setup, Wi-Fi and USB connections, device management, safety guidelines, and troubleshooting.</p>
	<p>ZTE MF289F 4G CPE Quick Start Guide and User Manual</p> <p>ZTE MF289F 4G CPE Quick Start Guide and User Manual</p> <p>Get started with your ZTE MF289F 4G CPE. This guide covers setup, Wi-Fi, Mesh networking, telephone functions, troubleshooting, and safety information for the ZTE MF289F device.</p>
<p>MF971R Kratka navodila</p>	<p>MF971R Kratka navodila - ZTE Mobilni Dostopnik</p> <p>MF971R Kratka navodila - ZTE Mobilni Dostopnik</p> <p>Navodila za namestitev, uporabo in odpravljanje težav z mobilnim dostopnikom ZTE MF971R. Vključuje informacije o povezljivosti, indikatorskih lučkah, varnosti, specifikacijah in izjavi o skladnosti.</p>
<p>ZTE F50 Pro 快速指南</p>	<p>ZTE F50 Pro - 5G</p> <p>ZTE F50 Pro - 5G</p> <p>ZTE F50 Pro 5G</p>

Documents - ZTE – K87



[JioPhone Monsoon Hungama Offer: Eligible Phone List](#)

A comprehensive list of mobile phones eligible for exchange under the JioPhone Monsoon Hungama Offer, detailing brands and models.

lang:nl score:7 filesize: 18.88 M page_count: 1742 document date: 2018-07-20

List of phones eligible for exchange under JioPhone Monsoon Hungama Offer

JioPhone Monsoon Hungama Offer: Eligible Phone Exchange List

Discover the comprehensive list of mobile phone models from various brands, including HTC, Pulid, and 360, eligible for exchange under the JioPhone Monsoon Hungama Offer. This document details specific models that qualify for the program.

lang:it score:7 filesize: 17.85 M page_count: 709 document date: 2018-07-20