

UR78EC0610-3

Replacement Remote Control Instruction Manual

For Mitsubishi Air Conditioners (Model UR78EC0610-3)

1. INTRODUCTION

This document provides instructions for the Generic replacement remote control, model UR78EC0610-3, designed for use with various Mitsubishi air conditioner units. This remote control offers essential functions for operating your air conditioner.

Important Note:

- This is a replacement remote control. It may not support all advanced functions available on your original air conditioner remote.
- Ensure your air conditioner model is listed under the compatible models to guarantee functionality.
- This remote control operates using infrared technology. Ensure a clear line of sight between the remote and the air conditioner's receiver.

2. COMPATIBILITY

This replacement remote control is compatible with the following Mitsubishi air conditioner models:

- MSZ-HJ35VA
- MSZ-HJ25VA
- MS-A10VD
- MS-A13VD
- MSZ-HA25VA
- MSZ-HA35VA
- MP04B
- MS-A08VD

If your specific model is not listed, functionality cannot be guaranteed.

3. BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back of the remote control. This image illustrates the general design of the remote's back, including the battery compartment. Please note that while the label in this specific image may indicate 'FOR Panasonic', this remote control is designed for Mitsubishi air conditioner models as specified in the product title and compatibility section.

Caution:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.

4. OPERATING INSTRUCTIONS

This remote control provides basic functions for your Mitsubishi air conditioner. Point the remote directly at the air conditioner's receiver when operating.

Basic Functions:

- **Power ON/OFF:** Press the **ON/OFF** button to turn the air conditioner on or off.
- **Mode Selection:** Use the **MODE** button to cycle through available operating modes (e.g., Cool, Dry, Fan).
- **Temperature Adjustment:** Use the **TEMP UP (▲)** and **TEMP DOWN (▼)** buttons to set your desired temperature.
- **Fan Speed:** Adjust the fan speed using the **FAN** button.
- **Swing Function:** If available on your AC unit, the **SWING** button controls the louver movement.

Special Features and Limitations:

- **No Heat Function:** This remote control does not include a heat function. If your air conditioner has a heating mode, it cannot be activated or controlled with this remote.
- **Temperature Display:** The temperature display on this remote is exclusively in Celsius. There is no option to switch to Fahrenheit.

5. CARE AND MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from drops and impacts, which can damage internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Remove old batteries to prevent leakage.

6. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote and the air conditioner. Remove any obstructions.
 - Confirm the remote is pointed directly at the air conditioner's infrared receiver.
- **Limited functionality:**
 - As a replacement remote, some advanced functions of your original AC unit may not be supported. Refer to the 'Special Features and Limitations' section.
 - Verify that your air conditioner model is listed as compatible.
- **Temperature display is only in Celsius:**
 - This is an inherent feature of this remote control. It does not support Fahrenheit display.

7. SPECIFICATIONS

Feature	Detail
Model Number	UR78EC0610-3
Compatible Devices	Mitsubishi Air Conditioners (specific models listed above)
Connectivity Technology	Infrared
Power Source	2 x AAA Batteries (not included)
Number of Buttons	15
Special Features	Display Only in Celsius, Without Heat Function
Brand	Generic
Manufacturer	Easytry

© 2026 Generic Replacement Remote Control. All rights reserved.