

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Seckton](#) /
- › [Seckton X2 Pro Kids Digital Camera User Manual](#)

Seckton X2Pro

Seckton X2 Pro Kids Digital Camera User Manual

Model: X2Pro

1. INTRODUCTION

Thank you for choosing the Seckton X2 Pro Kids Digital Camera. This camera is designed to provide an engaging and educational photography experience for children. Featuring a dual-camera setup, 10x digital zoom, built-in flash, and a 2.4-inch IPS screen, it allows young users to capture photos and videos, explore creative filters, and enjoy built-in games. This manual provides essential information for safe and effective use of your new camera.



Image 1.1: The Seckton X2 Pro Kids Digital Camera with included accessories.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x Seckton X2 Pro Kids Digital Camera
- 1x 32GB Micro SD Card
- 1x Camera Stand (Tripod)
- 1x USB Type-C Cable
- 1x User Manual

X2 PRO WITH HD DUAL CAMERAS

With **28** frames and **6** color filters to choose



Image 2.1: Visual representation of the Seckton X2 Pro package contents.

3. PRODUCT FEATURES

The Seckton X2 Pro camera is equipped with several features designed for children's use:

- **Dual Camera Configuration:** Front and rear cameras for standard photos and selfies.
- **10x Digital Zoom:** Allows for magnification of subjects.
- **Built-in Flash:** For improved visibility in low-light conditions.
- **2.4-inch IPS Screen:** Provides a clear display for viewing and framing shots.
- **1080P Video Recording:** Capture high-definition video clips.
- **32GB Micro SD Card:** Included for ample storage of photos and videos.
- **Durable Design:** Shockproof casing for enhanced protection.
- **Creative Modes:** Includes 28 funny frames and 6 color filters.
- **Built-in Games:** Features 3 puzzle games for entertainment.
- **Time-lapse Function:** Record sequences over time.
- **Rechargeable Battery:** Long-lasting lithium polymer battery, charged via USB Type-C.



Image 3.1: Key features of the Seckton X2 Pro camera.

4. SETUP

4.1 Charging the Battery

Before first use, fully charge the camera's internal battery. Connect the included USB Type-C cable to the camera's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically provides 1-2 hours of continuous use.

4.2 Inserting the Micro SD Card

The camera requires a Micro SD card to store photos and videos. The 32GB Micro SD card is included. Locate the Micro SD card slot on the side of the camera. Gently insert the Micro SD card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

4.3 Powering On/Off

Press and hold the Power button (usually located on the top or side) for a few seconds to turn the camera on or off. The screen will illuminate when the camera powers on.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

Familiarize yourself with the camera's buttons:

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes a photo or starts/stops video recording.
- **Mode Button:** Switches between photo, video, playback, and game modes.
- **Navigation Buttons (Up/Down/Left/Right):** Used to navigate menus, zoom in/out, or select options.

- **OK/Confirm Button:** Confirms selections in menus.

5.2 Taking Photos

1. Turn on the camera.
2. Press the Mode button until you are in Photo mode.
3. To switch between front and rear cameras, use the designated button or menu option (refer to on-screen icons).
4. Frame your shot using the 2.4-inch IPS screen.
5. Use the Up/Down navigation buttons to adjust the 10x digital zoom.
6. Press the Shutter button to capture the photo.



Image 5.1: The dual-camera feature allows for easy selfies.

Upgraded Zoom



The lens can be zoomed

Subtle beauty can be recorded



Image 5.2: Demonstrating the 10x digital zoom function.

5.3 Recording Videos

1. Turn on the camera.
2. Press the Mode button until you are in Video mode.
3. Press the Shutter button once to start recording. A red indicator will typically appear on the screen.
4. Press the Shutter button again to stop recording.

5.4 Using the Flash

The camera has a built-in flash for low-light situations. In Photo mode, you can usually toggle the flash settings (Auto, On, Off) via a dedicated button or through the on-screen menu. Refer to the camera's display for flash icons.



Flash off



Turn on flash



3 Puzzle Games

Develop children's intelligence and exercise their ability to react and think.



1080 HD Video

Allows children to record happy moments during travel

Image 5.3: The camera's flash function for low-light photography.

5.5 Applying Frames and Filters

In Photo mode, access the menu to select from 28 funny frames and 6 color filters to add creative effects to your pictures. Use the navigation buttons to browse and the OK button to select.

28 Funny Frames



6 Color Filters



Image 5.4: Examples of creative frames and filters.

5.6 Playing Games

The camera includes 3 puzzle games. To access them, press the Mode button until you reach the game selection screen. Use the navigation buttons to select a game and the OK button to start.

5.7 Viewing Photos and Videos

Press the Mode button to enter Playback mode. Use the Left/Right navigation buttons to scroll through your captured photos and videos. Press the OK button to view a video or a larger version of a photo. You can delete files from this mode if desired.

6. MAINTENANCE

6.1 Cleaning the Camera

Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners. Gently clean the lens with a lens cleaning cloth only.

6.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods. Use only the provided USB Type-C cable for charging.

6.3 Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the camera is turned off before storing.

7. TROUBLESHOOTING

- **Camera will not turn on:**

Ensure the battery is charged. Connect the camera to a power source using the provided USB Type-C cable and try again.

- **Camera not charging:**

Verify that the USB Type-C cable is securely connected to both the camera and the power source. Ensure you are using the original cable, as some USB-C cables may not be compatible for charging this device.

- **Poor picture quality:**

Ensure the lens is clean and free of smudges. Check lighting conditions; use the flash in dark environments.

- **'Storage Full' message:**

Delete unnecessary photos or videos from the Micro SD card. You can also transfer files to a computer to free up space.

- **No sound in videos:**

Check the camera's volume settings in the menu. If the menu sounds are muted, video playback sound may also be muted.

- **Camera freezes or becomes unresponsive:**

Press and hold the Power button for about 10 seconds to force a shutdown. If this does not work, use a thin object (like a paperclip) to press the reset button (if available, usually a small pinhole).

8. SPECIFICATIONS

Feature	Specification
Brand	Seckton
Model Name	X2Pro
Screen Size	2.4 Inches IPS
Photo Resolution	8 MP (Total Still Resolution)
Video Resolution	1080p
Optical Zoom	10x
Digital Zoom	10x
Flash	Built-In, Automatic Modes

Feature	Specification
Battery Type	Lithium Polymer
Battery Capacity	640 mAh
External Memory	32 GB Micro SD (Included)
Connectivity	USB Type-C
Dimensions (D x W x H)	2.75" x 4" x 2.91"
Item Weight	10.55 ounces
Special Features	Time-lapse, Games, Frames, Filters

9. WARRANTY AND SUPPORT

The Seckton X2 Pro Kids Digital Camera comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official Seckton store or contact customer service through the retailer where the product was purchased.

You can find more information and support resources by visiting the [Seckton Store](#).


© 2025 Seckton. All rights reserved.

Related Documents - X2Pro


 <p>JOROTO® User Manual</p> <p>JOROTO-X2PRO</p>	<p>JOROTO-X2PRO User Manual</p> <p>Comprehensive user manual for the JOROTO-X2PRO exercise bike, covering assembly, operation, safety guidelines, and monitor functions. Includes troubleshooting tips and app connectivity instructions.</p>
	<p>MUBEN X2pro-RGB User Manual and Technical Specifications</p> <p>Comprehensive user manual and technical specifications for the MUBEN X2pro-RGB, detailing its features, operation, and maintenance.</p>
	<p>ATTACK SHARK X2PRO Wireless Gaming Mouse User Manual and Setup Guide</p> <p>Comprehensive guide for the ATTACK SHARK X2PRO wireless gaming mouse, covering product introduction, button functions, 2.4G and Bluetooth setup, wired connection, precautions, and packing list.</p>



[JOROTO X2/X2PRO Exercise Bike Monitor User Manual and App Connection Guide](#)
Comprehensive guide for the JOROTO X2 and X2PRO exercise bike monitor, covering display functions, button operations, operational procedures, troubleshooting, and connection with the Kinomap app.

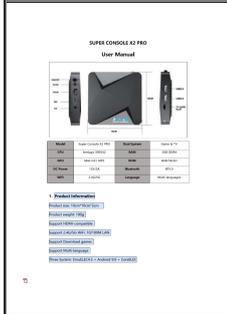

[Super Console X2 PRO User Manual: Features, Setup, and Operation](#)
Comprehensive user manual for the Super Console X2 PRO retro gaming console, covering product features, packing list, setup, system switching, hotkeys, game adding methods, and troubleshooting.

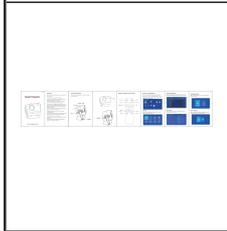

[Smart Projector X2PRO Quick Installation Guide | Shenzhen Baike Intelligent Creation Technology Co., Ltd.](#)
Comprehensive quick installation guide for the Shenzhen Baike Intelligent Creation Technology Co., Ltd. Smart Projector X2PRO. Learn how to set up, operate, and troubleshoot your projector, including details on settings, connectivity (Miracast, Airplay), and safety precautions.