

Sencor SFR 9300BK

Sencor Multi-Cooker & Fryer

MODEL: SFR 9300BK

Your comprehensive guide to healthy and efficient cooking.

Product Overview

The Sencor SFR 9300BK is a versatile multi-cooker and fryer designed to simplify your cooking process while promoting healthier eating habits. It enables you to prepare a wide variety of dishes with minimal oil, preserving flavor and nutritional value. With its intuitive controls and multiple cooking programs, delicious meals are easily achievable in less time.

Key Features:

- Multi-functional cooking with 18 pre-set programs.
- Significantly reduces cooking time.
- Includes a comprehensive set of accessories for diverse cooking methods.



Front view of the Sencor Multi-Cooker & Fryer SFR 9300BK, showcasing its sleek design and control panel.

Important Safety Instructions

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

Setup

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the cooking pot, glass lid, and all accessories (sous-vide rack, frying rack, fondue forks) with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the multi-cooker on a stable, flat, heat-resistant surface, away from walls and flammable materials. Ensure adequate ventilation around the unit.
4. **Assemble:** Insert the cooking pot into the main unit. Ensure it is seated correctly.



The Sencor Multi-Cooker & Fryer disassembled, showing the main unit, cooking pot, glass lid, sous-vide rack, frying rack, and fondue forks.

Operating Instructions

The Sencor SFR 9300BK features a touch control panel for easy operation. It offers 18 pre-set programs for various cooking needs.



Detailed view of the touch control panel, displaying various cooking programs and settings.

General Operation:

1. **Power On:** Plug the power cord into a grounded electrical outlet. The display will illuminate.
2. **Select Program:** Use the 'Preset' button or navigate through the touch panel to select one of the 18 cooking programs (e.g., Sous Vide, Stir Fry, Roast, Grill, Bake, Boil, Slow Cook, Fast Stew, Deep Fry, Hot Pot, Steam, Popcorn, Yogurt, Fondue, Rice, Keep Warm).
3. **Adjust Time/Temperature:** For most programs, you can adjust the cooking time and temperature using the '+' and '-' buttons. The 'Time' and 'Temp' buttons allow you to toggle between these settings.
4. **Start Cooking:** Press the 'Start/Stop' button to begin the cooking process. The display will show the remaining time and current temperature.
5. **Pause/Stop:** Press 'Start/Stop' again to pause or stop the cooking cycle.

Specific Cooking Functions:

- **Frying:** For deep frying, ensure the cooking pot is clean and dry. Add oil up to the recommended level. Select 'Deep Fry' program, set temperature, and preheat. Carefully add food using the frying rack.



The multi-cooker in action, frying chicken cutlets and fries to a golden crisp.

- **Sous Vide:** Place vacuum-sealed food pouches into the cooking pot with water. Use the included sous-vide rack to keep pouches submerged. Select 'Sous Vide' program and set desired temperature and time.



Preparing food using the sous-vide method, ensuring even cooking and moisture retention.

- **Baking:** Place baking dishes or items directly into the cooking pot. Select 'Bake' program and set temperature and time.



Muffins baking inside the multi-cooker, demonstrating its versatility for various culinary tasks.

- **Fondue:** Add fondue ingredients (e.g., chocolate, cheese) to the cooking pot. Select 'Fondue' program. Use the included fondue forks for dipping.



The multi-cooker set up for a delightful chocolate fondue, complete with fruit and fondue forks.

Cleaning and Maintenance

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Sencor Multi-Cooker & Fryer.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Cooking Pot and Accessories:** The cooking pot, glass lid, and all included accessories are dishwasher safe or can be washed by hand with warm soapy water. Use a non-abrasive sponge to protect the non-stick coating of the pot. Rinse thoroughly and dry completely before storage.
3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
4. **Storage:** Store the appliance in a cool, dry place. Ensure all parts are clean and dry before storing.

Troubleshooting

If you encounter issues with your multi-cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; power cord damage.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Inspect the power cord for damage.
Food not cooking evenly.	Incorrect temperature/time setting; overcrowding the pot.	Adjust temperature and time according to recipe. Do not overcrowd the cooking pot; cook in smaller batches if necessary.
Smoke or unusual odor during operation.	Food residue on heating element; first-time use odor.	A slight odor is normal during first use. If persistent, unplug and allow to cool. Clean the cooking pot and ensure no food residue is present. If problem persists, contact support.
Control panel unresponsive.	Temporary electronic glitch.	Unplug the appliance for a few minutes, then plug it back in to reset.

If the problem persists after trying these solutions, please contact customer support.

Specifications

Attribute	Value
Brand	Sencor
Model Information	SFR 9300BK
Product Dimensions	29 x 32 x 34 cm (Depth x Width x Height)
Item Weight	4 Kilograms

Attribute	Value
Special Feature	Programmable
Color	Black
Power Output	1800 Watts
Material	Plastic
Inner Material	Stainless Steel
Included Components	Multi-functional pot, 4.8L cooking pot, Glass lid, Sous-vide rack, 1-meter power cord, Stainless steel frying rack, High-quality stainless steel fondue forks
Control Method	Touch
Recommended Uses	Melt, Dry, Toast, Fry, Roast, Bake







Warranty and Support

This Sencor Multi-Cooker & Fryer SFR 9300BK comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Sencor customer service through their official website or the contact information provided in your product documentation.

Keep your purchase receipt as proof of purchase for warranty purposes.

Related Documents - SFR 9300BK

<div><div>SENCOR</div><div>SFR 6600SS</div></div> <div><div>SMART VITA FRYER</div><div>Translation of the original manual</div></div> <div></div>	<p>SENCOR SFR 6600SS Smart Vita Fryer: User Manual & Operation Guide</p> <p>Explore the SENCOR SFR 6600SS Smart Vita Fryer with this user manual. Learn about its smart features, preset programs, safe operation, and maintenance for healthier cooking.</p>
<div><div>SENCOR</div><div>SFR 5010BK</div></div> <div><div>TERFOLYVIZDOLÁSÁ FRYTEZA</div><div>Translation of the original manual</div></div> <div></div>	<p>Sencor SFR 5010BK Air Fryer User Manual</p> <p>User manual for the Sencor SFR 5010BK Vita Air Fryer, detailing its operation, safety instructions, and maintenance.</p>
<div><div>SENCOR</div><div>SFR 6551WH</div></div> <div><div>VITA FRYER</div><div>Translation of the original manual</div></div> <div></div>	<p>SENCOR SFR 6551WH Vita Fryer User Manual</p> <p>Comprehensive user manual for the SENCOR SFR 6551WH Vita Fryer, detailing important safety instructions, appliance description, control panel functions, basic operation, preset programs, temperature and time settings, delayed start, cleaning, maintenance, and technical specifications. Learn how to safely and effectively use your SENCOR Vita Fryer.</p>
<div><div>SENCOR</div><div>SPR 5520SS</div></div> <div><div>SLOW COOKER</div><div>Translation of the original manual</div></div> <div></div>	<p>Sencor SPR 5520SS Slow Cooker User Manual</p> <p>Comprehensive user manual for the Sencor SPR 5520SS Slow Cooker, covering safety instructions, operation, cooking programs, maintenance, and recipes.</p>
<div><div>SENCOR</div><div>SRM 0600WH</div></div> <div></div> <div><div>EN-Fully-automatic Rice Cooker</div><div>Translation of the original manual</div></div> <div></div>	<p>SENCOR SRM 0600WH Fully-Automatic Rice Cooker User Manual</p> <p>Comprehensive user manual for the SENCOR SRM 0600WH Fully-Automatic Rice Cooker, covering safety instructions, operation, cleaning, maintenance, and technical specifications. Learn how to use your rice cooker safely and effectively.</p>

SENCOR SRM 0600WH



EN-Fully-automatic Rice Cooker
Substitute of the original manual

[SENCOR SRM 0600WH Fully-Automatic Rice Cooker User Manual](#)

Official user manual for the SENCOR SRM 0600WH Fully-Automatic Rice Cooker. Provides essential safety instructions, step-by-step usage guide, cleaning and maintenance procedures, technical specifications, and disposal information.