

B0BLS5T615

User Manual for Replacement Projector Remote Control

Model: B0BLS5T615 | Brand: Generic

INTRODUCTION

This document serves as the official user manual for the Generic replacement infrared (IR) remote control. This remote is designed to function as a direct replacement for the original remote controls of various GPX and Rigal portable mini LED projectors. Please review this manual thoroughly to ensure proper setup and operation of your new remote control.

PRODUCT OVERVIEW

The replacement remote control is a compact, black-colored device featuring a standard array of buttons for projector control. It operates using infrared technology, requiring a clear line of sight to the projector's IR receiver.



Figure 1: Front view of the replacement remote control. This image displays the layout of all control buttons, including power, navigation, volume, source, and numeric keys.



Figure 2: Angled view of the replacement remote control. This perspective provides a clearer look at the ergonomic design and the placement of frequently used buttons like power and volume controls.

COMPATIBILITY

This replacement remote control is compatible with the following projector models:

- GPX PJ308W
- GPX PJ308VP
- Rigal RD-816
- Rigal RD-809
- Rigal RD-802
- Rigal RD-805
- Rigal RD-805B
- Rigal RD-810
- Rigal RD-803
- Rigal RD-808
- Rigal RD-804

Note: Compatibility is confirmed only for the models listed above. If your projector model is not listed, this remote may not be compatible.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.

After installing the batteries, the remote control is ready for use. No pairing or programming is typically required for this IR replacement remote.

OPERATING INSTRUCTIONS

Point the remote control directly at the IR receiver on your projector. Ensure there are no obstructions between the remote and the projector.

Button Functions

Button	Function
Power (Red Button)	Turns the projector on or off.
Source	Cycles through available input sources (e.g., HDMI, USB, AV).
Menu	Opens the projector's on-screen display (OSD) menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options or content.
OK	Confirms a selection or enters a submenu.
Exit	Exits the current menu or returns to the previous screen.

Button	Function
Vol- / Vol+	Decreases or increases the projector's volume.
Play/Pause, Previous, Next, Stop	Controls media playback (if supported by the projector's media player).
Flip	Rotates or flips the projected image (useful for ceiling mounts or rear projection).
Zoom	Adjusts the digital zoom level of the projected image.
Numeric Keys (0-9)	Used for direct input, such as channel selection or password entry, if applicable.
1/@, 2/ABC, etc.	Alphanumeric input for text fields.
3D Switch	Activates or deactivates 3D mode (if supported by the projector).
FAV/CB	Function may vary by projector model; typically for favorites or color balance.

Note: Not all buttons may be functional on every compatible projector model, as specific features vary by projector. Refer to your projector's original manual for detailed functionality.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

Storage

When storing the remote for extended periods, remove the batteries to prevent leakage, which can cause damage to the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and projector; Remote not pointed directly at IR receiver.	Replace batteries; Remove obstructions; Ensure direct line of sight to projector's IR receiver.
Some buttons do not work.	Button specific function not supported by your projector model; Remote is not compatible with your specific projector model.	Refer to your projector's original manual for supported functions. Verify your projector model is listed in the compatibility section.

SPECIFICATIONS

Model: B0BLS5T615

Brand: Generic

Connectivity Technology: Infrared (IR)

Controller Type: Button Control

Compatible Devices: Projectors (GPX PJ308W, PJ308VP, Rival RD-816, RD-809, RD-802, RD-805, RD-805B, RD-810, RD-803, RD-808, RD-804)

Power Source: 2 x AAA Batteries (not included)

Special Feature: Ergonomic, Replacement

Manufacturer: Easytry

First Available Date: November 8, 2022

WARRANTY AND SUPPORT

This product is typically covered by a standard return policy. For specific details regarding returns or replacements, please refer to the purchase platform's return policy at the time of your order. The buybox winner information indicates a 30-day return policy for refund/replacement.

For further assistance or inquiries, please contact the seller directly through the platform where the purchase was made. The manufacturer is Easytry.

