

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tiskgg](#) /

› [Tiskgg 51-inch Fireproof Rifle Gun Safe Instruction Manual](#)

Tiskgg B0BLSGLR91

Tiskgg 51-inch Fireproof Rifle Gun Safe Instruction Manual

Model: B0BLSGLR91

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Tiskgg 51-inch Fireproof Rifle Gun Safe. Please read this manual thoroughly before installation and operation to ensure proper functionality and to prevent potential hazards. Keep this manual for future reference.

Important Safety Information

- Always store firearms unloaded and locked.
- Keep keys and access codes in a secure location, inaccessible to unauthorized individuals, especially children.
- Ensure the safe is securely mounted to prevent tipping or unauthorized removal.
- The term "fireproof" indicates a degree of fire resistance. This safe is designed to offer protection against heat for a limited time, but it is not impervious to all fire conditions.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged.

- 1 × Tiskgg Rifle Gun Safe (unassembled)
- 1 × Installation Kit (includes mounting bolts)
- 1 × Instruction Manual (this document)
- 1 × Removable Shelf
- 2 × Adjustable Gun Racks
- 2 × Emergency Keys



Figure 2.1: Overview of safe dimensions and included accessories.

3. SETUP AND INSTALLATION

3.1 Assembly

The Tiskgg rifle safe is shipped unassembled. Assembly typically takes less than 30 minutes. It is recommended to have a second person assist with assembly due to the size and weight of the components. Follow the detailed instructions provided in the separate assembly guide (included in the installation kit) for step-by-step assembly.

3.2 Mounting the Safe

To enhance security and prevent unauthorized removal or tipping, it is highly recommended to mount the safe to a floor or wall using the provided mounting bolts. Choose a discreet and secure location for installation.

1. Position the safe in the desired location.
2. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe.

3. Drill pilot holes into the floor or wall using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the expansion bolts from the installation kit. Tighten all bolts firmly.

3.3 Configuring Internal Storage

The safe includes a removable shelf and adjustable gun racks to customize the internal storage space. The safe can accommodate up to 8 rifles up to 49 inches long. With the removable shelf installed, the maximum rifle length is approximately 41.53 inches (105.5 cm). Without the shelf, rifles up to 51.96 inches (132 cm) can be stored.



Figure 3.1: Adjusting the removable shelf for different rifle lengths.

4. OPERATION

4.1 Unlocking Methods

Your Tiskgg gun safe offers three methods for unlocking:

1. **Digital Keypad (Password + Handle):** Enter your 3-8 digit password on the keypad, then turn the handle to open the safe. This provides quick access.
2. **Emergency Key + Handle:** In cases of forgotten passwords or weak batteries, insert the emergency key into the hidden keyhole, turn it, and then turn the handle to open. This method is also used for the initial opening of the safe.
3. **External Battery Compartment + Password + Handle:** If the internal batteries are depleted and you do not have the emergency key readily available, connect an external battery box (not included, typically 4 AA batteries) to the hidden external power port, enter your password, and then turn the handle.

ANTI-THEFT & ANTI-PRY DESIGN




All alloy steel construction


Anti-Collision


Anti-Drilling and Anti-Prying


30mm
30mm Thick Door


22mm
4 Solid Locking Bolts


4 Expansion Bolts

Figure 4.1: Digital keypad and emergency key unlocking methods.

4.2 Setting Your Password

Refer to the detailed instructions in the separate assembly guide for programming your personal 3-8 digit password. It is crucial to test your new password multiple times with the safe door open before closing it.

4.3 Silent Mode

To activate silent mode, press and hold the "1" key on the digital keypad for 3 seconds. This will disable keypad beeps for discreet operation.

4.4 Internal LED Light

The safe features a built-in LED light that illuminates the interior when the door is opened, assisting visibility in low-light conditions.

5. MAINTENANCE

5.1 Battery Replacement

The digital keypad requires 4 AA batteries (not included). A red indicator light on the keypad will illuminate when the battery power is low, signaling that replacement is needed. To replace batteries, open the battery compartment on the back of the keypad and insert new AA batteries, ensuring correct polarity.

5.2 Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish. Do not spray cleaning solutions directly onto the keypad or locking mechanism.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered; Low battery.	Re-enter password carefully. If issue persists, replace batteries or use emergency key.
Alarm sounds after multiple incorrect entries.	Incorrect password entered 3 times consecutively.	The safe will lock for 20 seconds after 3 incorrect entries, and for 5 minutes after 6 incorrect entries. Wait for the lockout period to end before attempting again with the correct password or emergency key.
Keypad is unresponsive.	Depleted batteries.	Replace internal batteries. If unable to open, use the external battery compartment with new batteries or the emergency key.
Emergency key does not turn.	Key not fully inserted or mechanism jammed.	Ensure the key is fully inserted and try turning gently. Do not force the key.



Figure 6.1: Alarm system and silent mode indicators.

7. SPECIFICATIONS

Feature	Detail
Brand	Tiskgg
Model Number	B0BLSGLR91
Product Dimensions (External)	15.07"D x 17.91"W x 51.96"H (38.3cm D x 45.5cm W x 132cm H)
Internal Dimensions (Approximate)	14.87"D x 17.71"W x 49.4"H (37.7cm D x 45cm W x 125.5cm H)
Lock Type	Digital Combination Keypad, Emergency Key
Color	Black

Feature	Detail
Material	Alloy Steel
Special Features	Alarm System, Anti-Theft, Combination Lock, Fire Resistant, Removable Shelf
Mounting Type	Floor or Wall Mount
Item Weight	63.8 Pounds (28.9 kg)
Water Resistance Level	Not Water Resistant
Battery Requirement	4 AA batteries (for keypad, not included)
Rifle Capacity	Up to 8 rifles (max 50" long without scopes, or 49" long overall)

Two Unlocking Methods

When the battery exhausted, you can use the External Battery Box to enter the gun safe.



1 Digital keypad (1-8 PIN Code)



2 Emergency Key (2 keys)



Under normal condition, the red light is on, indicating that the battery power is too low, and needs to be replaced in time.

Figure 7.1: Anti-theft and anti-pry design features.

8. WARRANTY AND SUPPORT

Tiskgg provides a **LIFETIME WARRANTY** service and technical support for this product. Additionally, a **5-YEAR** hassle-free return or exchange service is offered. Free re-send accessories service is also available.

If you encounter any questions, issues, or require assistance, please contact Tiskgg customer support. Effective communication is key to resolving any concerns.

For customer support, please refer to the contact information provided on the product packaging or the official Tiskgg website.

