

Moose 30381

Moose Magic Mixies Crystal Ball Instruction Manual

Model: 30381

1. SAFETY INFORMATION

Please read all safety warnings before use.

- Not suitable for children under 3 years.
- Contains small parts. Choking hazard!

2. WHAT'S IN THE BOX

Ensure all components are present before beginning:

- 1 x Magic Crystal Ball (Color: Blue)
- 1 x Magic Mixie
- 1 x Wand
- 1 x User manual (this document)
- 4 x AAA batteries (pre-installed or included)
- 6 x AA batteries (pre-installed or included)
- 1 x Parent/Guardian letter



Image: All components of the Magic Mixies Crystal Ball set.

3. SETUP

3.1. Battery Installation

The Magic Mixies Crystal Ball requires 6 AA batteries for the base and 4 AAA batteries for the wand. These may be pre-installed. If not, please follow these steps:

1. Locate the battery compartments on the base of the Crystal Ball and the wand.
2. Using a small screwdriver (not included), open the battery compartment covers.
3. Insert the required batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment covers.

3.2. Initial Power On

Once batteries are installed, locate the power switch on the base of the Crystal Ball and turn it to the 'ON' position. The Crystal Ball will emit a welcoming sound or light.

4. OPERATING INSTRUCTIONS

The Magic Mixies Crystal Ball offers an interactive experience with over 60 audio and reactions.

4.1. Awakening the Magic

To begin your magical journey, use the wand to interact with the Crystal Ball. Follow the prompts and gestures to awaken the magic within.

4.2. Creating Your Mixie

Perform a series of spells and interactions with the wand and Crystal Ball. The mist will appear, revealing your unique Magic Mixie. You can give your Mixie a color, a voice, and teach it to predict the future.

4.3. Interactive Play

After revealing your Mixie, the fun continues! Engage in various interactive activities:

- **Spell Casting:** Start a spell and let your Mixie finish it.
- **Future Prediction:** Your Mixie can predict the future.
- **Replay Mode:** You can replay the mist reveal and other magical moments multiple times.
- **Reactions:** Interact with your Mixie to discover over 60 unique audio and reactions.

4.4. Night Light Mode

The Crystal Ball can also function as a night light. Refer to the included Parent/Guardian letter for specific instructions on activating and customizing the night light feature.

5. MAINTENANCE

To ensure the longevity of your Magic Mixies Crystal Ball:

- **Refill Mist:** The mist effect requires a special mist refill pack. These are sold separately and allow for 80+ mist reveals.
- **Cleaning:** Wipe the exterior of the Crystal Ball and Mixie with a soft, dry cloth. Do not immerse in water.
- **Storage:** Store the product in a cool, dry place away from direct sunlight when not in use.

6. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

- **No Mist Production:** Ensure the mist refill liquid is adequately filled and the product is powered on. Check for any obstructions in the mist outlet.
- **Mixie Not Appearing/Rising:** Verify that the Crystal Ball is in the correct operating mode and that all spell steps are followed accurately. Check battery levels.
- **No Sound/Lights:** Replace batteries in both the Crystal Ball and the wand. Ensure the power switch is in the 'ON' position.

For further assistance, please contact Moose customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.09 x 7.09 x 13.39 inches
Item Weight	4.09 pounds
Item Model Number	30381
Manufacturer Recommended Age	5 - 13 years
Batteries Required	6 x AA (base), 4 x AAA (wand)
Manufacturer	Moose

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For details regarding warranty coverage, returns, or technical support, please refer to the contact information provided in the product packaging or visit the official Moose website.

For more products and information, visit the [Moose Store](#).