

[Manuals.plus](#) /

› [ECHOGEAR](#) /

› ECHOGEAR Shelf Wall Mount for Echo Pop (2023 Release) Instruction Manual

ECHOGEAR EGMA-EDCM2

ECHOGEAR Shelf Wall Mount for Echo Pop (2023 Release)

INSTRUCTION MANUAL

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your ECHOGEAR Shelf Wall Mount for the Amazon Echo Pop (2023 Release). Please read all instructions carefully before installation and retain this manual for future reference.

Package Contents

Verify that all components are present before beginning installation.

- 1 Wall Plate
- 1 Cover
- 1 Base
- 2 #06 Wood Screws
- 2 AF6 Drywall Anchors



Image: All components included in the ECHOGEAR Shelf Wall Mount package, showing the wall plate, cover, base, and mounting hardware.

Compatibility

This ECHOGEAR Shelf Wall Mount is specifically designed for the **Amazon Echo Pop (2023 Release)**. It is not compatible with other Amazon Echo devices, including Echo Dot 1st, 2nd, 3rd, 4th, or 5th Generations, or Echo 4th Gen.

FIT CHECK



Designed for **Amazon Echo Pop**.
Not compatible with other Amazon speakers.



NOT COMPATIBLE

Amazon Echo Dot 3rd, 4th or 5th Generations or Echo 4th Gen

Image: A visual guide indicating that the mount is designed exclusively for the Amazon Echo Pop and is not suitable for other Amazon Echo speaker models.

Important Safety Information

- Ensure the mounting surface can support the weight of the mount and the Echo Pop device.
- Use appropriate tools and follow all installation steps carefully to prevent injury or damage.
- Do not overtighten screws, as this may damage the mount or the wall.
- Keep small parts and packaging materials away from children.

Installation Guide

Tools Required (Not Included):

- Phillips Head Screwdriver
- Drill (for pilot holes, if needed)
- Pencil

- Level (recommended)

Mounting Steps:

1. **Select Mounting Location:** Choose a suitable wall location, ideally near a power outlet. Ensure there are no hidden electrical wires or plumbing in the wall where you plan to drill.
2. **Install Wall Plate:** Position the Wall Plate against the wall at your desired height. Mark the screw hole locations with a pencil. If mounting into drywall, drill pilot holes and insert the AF6 Drywall Anchors. If mounting into a wood stud, drill pilot holes only. Secure the Wall Plate to the wall using the #06 Wood Screws. Use a level to ensure it is straight.
3. **Attach Base:** Slide the Base onto the installed Wall Plate. It should click securely into place.
4. **Route Power Cable:** Connect the power cable to your Echo Pop. Route the excess cable into the hidden cavity within the Base to maintain a clean appearance. Ensure the cable exits through the designated opening at the bottom of the mount.



Image: The back of the mount illustrating the internal space for neatly coiling and concealing the Echo Pop's power cable.

5. **Place Echo Pop:** Carefully place your Amazon Echo Pop device onto the Base. Ensure it sits securely in the

designated cradle.



Image: The Echo Pop positioned correctly on the wall mount, ready for use.

6. **Attach Cover:** Snap the Cover onto the front of the Base to complete the installation and conceal the mounting hardware.



Image: The ECHOGEAR Shelf Wall Mount with an Echo Pop, shown installed in a kitchen, highlighting its discreet and functional design.

Operation

Once installed, the ECHOGEAR Shelf Wall Mount provides a stable platform for your Amazon Echo Pop. Simply place the Echo Pop into the cradle on the mount. The integrated cable management system allows you to coil and hide excess power cord within the mount, ensuring a tidy setup. The mount does not interfere with the Echo Pop's functionality, sound output, or microphone performance.

Maintenance

To maintain the appearance and functionality of your wall mount:

- Wipe the mount with a soft, dry cloth to remove dust.
- For stubborn marks, use a slightly damp cloth with mild soap, then dry thoroughly.
- Avoid using abrasive cleaners or solvents, as these can damage the finish.

- Periodically check that the mount remains securely fastened to the wall.

Troubleshooting

Issue	Solution
Mount feels loose on the wall.	Ensure screws are tightened properly. If using drywall anchors, verify they are fully expanded and seated correctly. Consider relocating if the wall material is compromised.
Echo Pop does not fit correctly.	Confirm that your device is an Amazon Echo Pop (2023 Release). This mount is not compatible with other Echo models.
Cable management is difficult.	Ensure the cable is coiled neatly within the cavity before attaching the cover. Avoid forcing the cable, which could damage it.

Specifications

- Model:** EGMA-EDCM2
- Compatibility:** Amazon Echo Pop (2023 Release)
- Material:** Durable plastic
- Mounting Type:** Wall mount (drywall or wood stud)
- Color:** Glacier White

Warranty and Support

For warranty information or technical support, please refer to the ECHOGEAR official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BLTWYG5C>

More documents and user manuals: <https://manuals.plus/>