

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [uwant](#) /

> [uwant B100 Portable Carpet & Upholstery Cleaner Machine Instruction Manual](#)

uwant B100

uwant B100 Portable Carpet & Upholstery Cleaner Machine

INSTRUCTION MANUAL

Model: B100 | Brand: uwant

Introduction

Thank you for choosing the uwant B100 Portable Carpet & Upholstery Cleaner Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Read all instructions before using this appliance. Do not use outdoors or on wet surfaces. Close supervision is necessary when any appliance is used by or near children. Use only as described in this manual. Use only manufacturer's recommended attachments.

Package Contents

Your uwant B100 Portable Carpet & Upholstery Cleaner Machine package includes the following items:

- Main Unit
- Hose Assembly
- Brush Head
- Instruction Manual
- Warranty Card
- Attachment Holder

Video: Unveiling the packaging list for Uwant portable carpet cleaner. This video demonstrates the contents of the product package, including the main unit, hose assembly, brush, warranty card, attachment holder, and instruction manual.

Setup

1. **Install the Bracket:** Attach the storage bracket to the main unit. Ensure it clicks into place securely.
2. **Connect the Hose Assembly:** Firmly connect the hose assembly to the designated port on the main unit.
3. **Attach the Brush Head:** Connect the brush head to the end of the hose assembly.
4. **Fill the Clean Water Tank:** Lift the clean water tank upwards from the main unit. Fill it with clean water and the recommended cleaning solution (ratio of water to cleaning solution is 30:1). Reinsert the tank securely.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.
6. **Power On:** Press the power button on the main unit to turn on the device. The default gear is low-speed.

Video: Seamless Setup. This video demonstrates how to effortlessly set up your Portable Carpet Cleaner for quick and efficient cleaning, including connecting components and preparing the unit for use.



Effortless Cleaning, Every Time

No more scrubbing! The ergonomic design and strong suction make cleaning easy

Image: The uwant B100 Portable Carpet & Upholstery Cleaner main unit with the hose and brush head attached, ready for use.

Operating Instructions

The uwant B100 uses a three-step cleaning process: Spray, Brush, and Suction. For optimal results, follow these steps:

1. **Spray:** Press the spray button on the brush head to release cleaning solution onto the stained area.
2. **Brush:** Gently brush the stained area with the brush head to agitate the dirt.
3. **Suction:** Keep the brush head horizontally close to the fabric surface and move it slowly to absorb the dirty water. If the area is too wet, stop spraying water, lift the brush head 15 degrees, and press to absorb excess water.

Video: Perfect Cleaning Trinity: Spray, Scrub, Suck. This short video demonstrates the three core steps of the cleaning process: spraying solution, scrubbing the surface, and suctioning up the dirty water.

Video: Ultimate Upholstery Cleaner: Deep Clean Anytime, Anywhere! This video showcases the cleaner's effectiveness on various surfaces, including carpets, upholstery, and car interiors, demonstrating its versatility for deep cleaning.



Image: A person cleaning a coffee stain from a carpet using the uwant B100 cleaner, demonstrating its stain-removing capability.



Image: A person cleaning a couch cushion with the uwant B100 cleaner, highlighting its use for upholstery.



Self-Cleaning Made Simple

With one-touch self-cleaning, our machine flushes out dirt and residue, keeping it fresh and ready for the next use

Image: A person cleaning a car seat with the uwant B100 cleaner, showcasing its utility for auto detailing.

Maintenance

1. **Self-Cleaning Function:** The device features a one-touch self-cleaning function. After use, activate this function to

flush out dirt and residue from the hose and brush head, keeping it fresh for the next use.

2. **Empty and Clean Wastewater Tank:** After each use, lift the wastewater tank, unscrew the lid, and pour out the dirty water. Rinse the tank thoroughly with clean water.
3. **Rinse Components:** Rinse the brush head and hose assembly with clean water to prevent buildup.
4. **Store Properly:** Wrap the hoses around the bracket and secure the brush head in its designated holder for compact storage. Use the one-key thread collection function to retract the power cord.

Video: Transforming Sofas: Before and After Cleaning Comparison. This video demonstrates the cleaning process and the significant improvement in upholstery appearance, highlighting the effectiveness of the cleaner.



Easy to Store, Ready to Go

Compact and convenient, it fits in your trunk or garage. Perfect for quick clean-ups, keeping your car spotless

Image: The uwant B100 cleaner demonstrating its self-cleaning feature, flushing out residue from the hose and brush.



Bigger Tanks, Better Cleaning

With an enlarged clean water and dirty water tank, you can cover more area without frequent stops

Image: The uwant B100 cleaner highlighting its separate clean water (60.9 fl oz) and waste water (54.1 fl oz) tanks, indicating larger capacities for extended cleaning sessions.

Troubleshooting

If you encounter any issues with your uwant B100 cleaner, please refer to the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into a working outlet. Check the power button on the main unit.
- **No Spray:** Check if the clean water tank is filled and properly seated. Ensure the spray button on the brush head is pressed.
- **Weak Suction:** Verify that the wastewater tank is not full and is correctly installed. Check for any blockages in the hose or brush head. Ensure the brush head is held horizontally close to the surface.
- **Thread Jam:** If the power cord gets stuck, use the one-key thread collection function button on the back of the unit to retract it.

For persistent issues, please contact uwant customer support.

Specifications

Brand	uwant
Model Name	B100
Color	White&Orange
Item Weight	5.5 Kilograms
Power Source	Corded Electric
Capacity (Clean Water)	60.9 fl oz (approx. 1.8 Liters)
Capacity (Waste Water)	54.1 fl oz (approx. 1.6 Liters)
Included Components	Upholstery cleaner machine, hose assembly, brush

Warranty and Support

Your uwant B100 Portable Carpet & Upholstery Cleaner Machine is covered by a manufacturer's warranty. Please refer to the included Warranty Card for detailed terms and conditions. For product support, technical assistance, or warranty claims, please visit the official uwant website or contact their customer service directly.

You may also consider purchasing extended protection plans for your product:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly billing)