

[Manuals.plus](#) /

› [BABY born](#) /

› BABY born Tricycle with Push Bar Instruction Manual (Model 835456)

BABY born 835456

BABY born Tricycle with Push Bar Instruction Manual

Model: 835456 | Brand: BABY born

1. INTRODUCTION

Thank you for choosing the BABY born Tricycle with Push Bar. This accessory is designed to provide engaging play for children aged 3 and up with their favorite BABY born dolls. The tricycle features functional wheels, a safety belt, and pedal straps to ensure the doll sits securely during play. Its detachable push bar allows for easy guidance and portability, making it a versatile addition to any play scenario. This tricycle is compatible with 36 cm and 43 cm BABY born dolls, as well as the BABY born bear.

2. SAFETY INFORMATION

- **Recommended Age:** Suitable for children aged 36 months (3 years) to 10 years.
- **Adult Supervision:** Always ensure adult supervision during play to prevent accidents.
- **Doll Weight Limit:** The tricycle is designed to hold a doll with a maximum weight of 500 grams. Do not exceed this limit.
- **Intended Use:** This product is a toy accessory for dolls and is not intended for use by children as a ride-on toy.
- **Choking Hazard:** Keep small parts away from young children.

3. PACKAGE CONTENTS

The package includes the following components:

- 1 x BABY born Tricycle (pink and white)
- 1 x Detachable Push Bar
- 1 x Functional Horn (integrated)
- 2 x Pedal Straps (integrated)
- 1 x Safety Belt (integrated)

4. SETUP AND ASSEMBLY

The BABY born Tricycle requires minimal assembly. The main tricycle body comes pre-assembled. The only component that may

need to be attached or detached is the push bar.

Praktisch voor op reis

Afneembaar stuur voor flexibel gebruik



Figure 4.1: The detachable push bar can be easily inserted into the designated slot at the back of the tricycle for guidance, or removed for independent play.

Attaching the Push Bar:

1. Locate the opening at the rear of the tricycle seat.
2. Align the bottom end of the push bar with this opening.
3. Gently push the bar firmly into place until it clicks securely.

Detaching the Push Bar:

1. Hold the tricycle firmly.
2. Pull the push bar upwards with a steady motion until it detaches.

5. OPERATING INSTRUCTIONS

Placing the Doll:

1. Ensure the tricycle is on a stable, flat surface.
2. Carefully place your 36 cm or 43 cm BABY born doll onto the tricycle seat.

Flexibel gebruik

Geschikt voor poppen van 36 cm en 43 cm - en de BABY born teddybeer



Figure 5.1: The tricycle is designed to accommodate both BABY born dolls and the BABY born bear.

Securing the Doll:

1. Fasten the safety belt around the doll's waist to keep it secure.
2. Place the doll's feet into the pedal straps for added stability during play.

Een veilige zit in het zadel voor elke race

dankzij veiligheidsgordel
& pedaallussen



Figure 5.2: Ensure the safety belt is securely fastened and the doll's feet are placed in the pedal straps for a stable ride.

Using the Push Bar:

If the push bar is attached, an adult or older child can use it to guide the tricycle and doll, simulating a walk or ride.

Using the Horn:

Press the yellow duck-shaped horn on the handlebars to activate its sound feature, adding to the play experience.

Met liefdevolle details



Figure 5.3: The integrated horn provides an interactive element during play.

6. MAINTENANCE

- **Cleaning:** Wipe the tricycle with a damp cloth and mild soap. Do not immerse in water.
- **Storage:** Store the tricycle in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly check all parts for wear and tear. Discontinue use if any damage is observed.

7. TROUBLESHOOTING

- **Wheels not turning smoothly:** Check for any obstructions (e.g., hair, debris) in the wheel axles. Clean if necessary.
- **Doll not staying in seat:** Ensure the safety belt is properly fastened and the doll's feet are in the pedal straps.
- **Push bar feels loose:** Re-insert the push bar firmly until it clicks into place. If it continues to be loose, inspect for damage.
- **Horn not working:** Check if the horn mechanism is obstructed or damaged.

8. SPECIFICATIONS

Model Number	835456
Brand	BABY born (by Zapf Creation)
Product Dimensions (L x W x H)	28 x 4 x 110 cm (109 cm with push bar)
Item Weight	667 Grams
Material	Plastic, Metal
Recommended Age	36 months - 10 years
Maximum Doll Weight Capacity	500 Grams

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official BABY born website. Keep your proof of purchase for any warranty claims.

© 2026 BABY born. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

